



GOLDSTRIKE® SADDLEBAG LIGHTS

- Parts Included: 1 LEFT SIDE SADDLEBAG LIGHT ASSEMBLY
 1 RIGHT SIDE SADDLEBAG LIGHT ASSEMBLY
 8 CABLE TIES
 8 CABLE TIE MOUNTS
 ADHESION PROMOTER PACKAGE



1. Park on a level surface and shut off the motorcycle. Lift motorcycle onto its center stand if available. Ensure the engine has time to cool before installation.

2. Open the saddlebags and remove side covers by pulling away from the motorcycle with steady pressure.

3. Remove the seat by removing the socket head screws under the front of the seat. Pull up on the front of the seat and slide forward. Fig.1

4. Remove three socket screws inside the saddlebags Fig.2

5. Remove the rear center panel. There are two socket head screws adjacent to the license plate light. Remove them and then pull the panel away from the motorcycle with steady pressure.


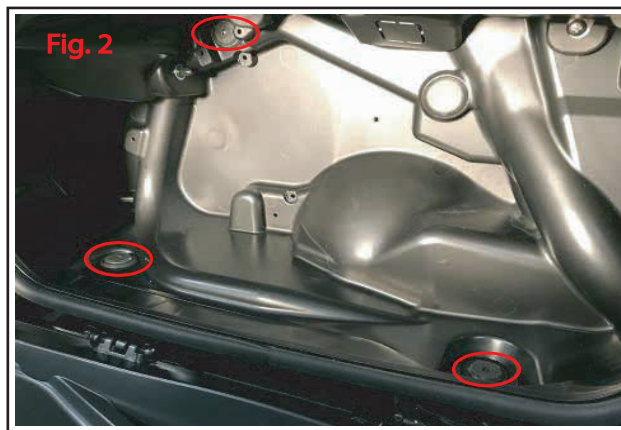
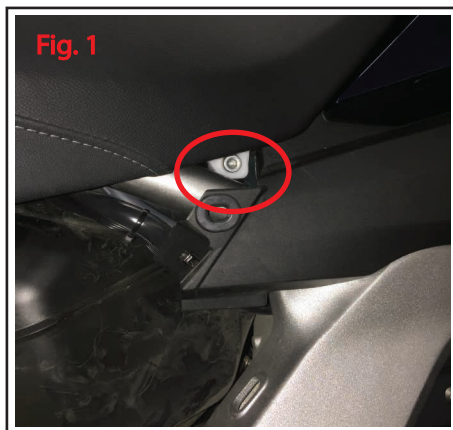


6. Install Goldstrike P/N 48000 (sold separately). Plug in both Saddlebag lights to familiarize yourself with connector locations, the lights, and how they function. Unplug the lights.

7. Unwrap the saddlebag lights and test fit them onto the saddlebags. Mark the location with masking tape. Pay close attention to the wire routing. Make sure the wire passes through the cut out on the underside of each light. Fig.3

8. **ATTENTION: Prepare surface with provided Adhesion Promoter packet to clean, dry surface in area indicated in Fig. A. Let dry for five minutes. Do not use on painted surfaces. Adhesion Promoter product is flammable.**

9. Peel off the adhesive backing and carefully stick the saddlebag light into position. Press and hold for 30 seconds to ensure good adhesion to surface.

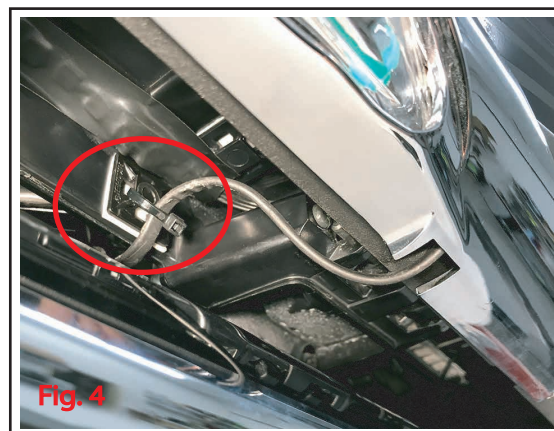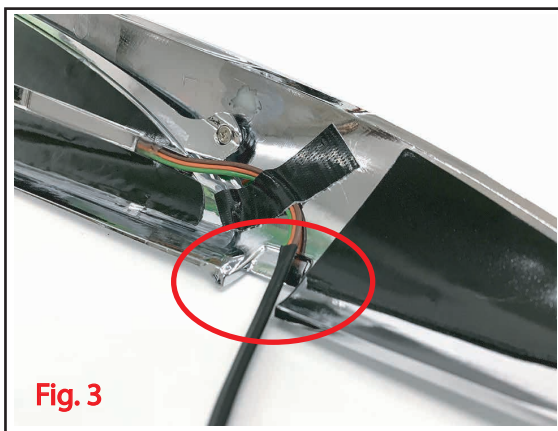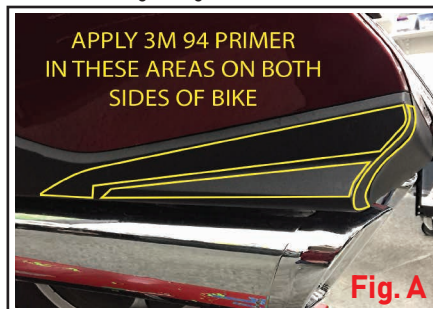

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Giro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Ciro products are designed and manufactured under very strict quality control. Giro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure.

Ciro will have no obligation if the customer cannot show proof of purchase.

Warranty will not be granted unless the part is properly installed and maintained.



Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products.

Please visit our website Ciro3d.com for our complete warranty policy.

10. Route the wire over the top of the muffler. Clean the mounting surface with an ammonia based cleaner and install a cable tie mount. Capture the wire with a cable tie.

11. Lift up on the saddlebag and route the wire between the rubber mount and the saddlebag frame. Set the saddlebag back into position and check that the wire is not pinched and can move freely. Fig. 5

12. Push the wire up along the saddlebag frame, between the saddlebag and the inner fender.

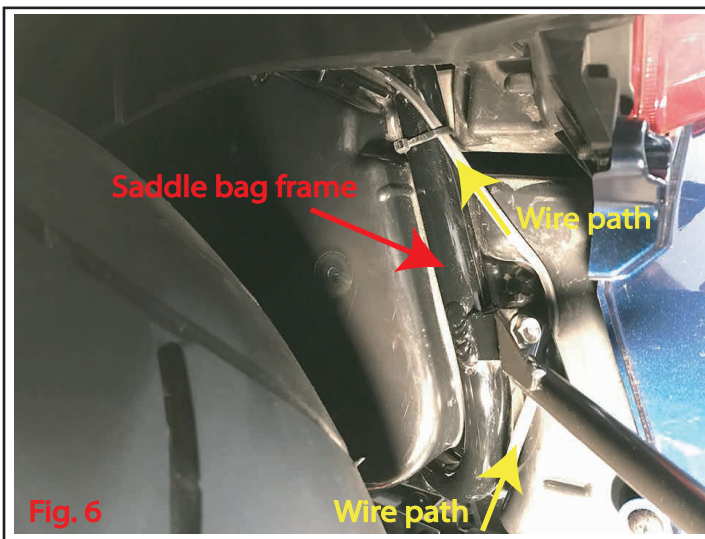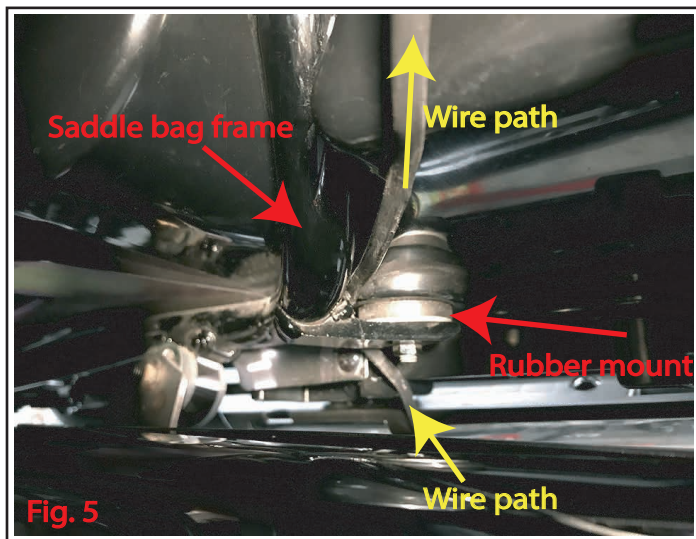

13. The wire will come out under the seat between the sub frame and inner fender. Fig. 7

14. Plug in your connectors to the Goldstrike® Rear Lighting Harness part #48000, matching the color of the wires to the correct side. Fig. 8

15. Tuck the wires towards the rear fender so they will not be crushed by the seat.

16. Test the light for run and turn functions.

17. Repeat for the other side.

18. Re-install your seat, backrest, and any other parts removed during installation.

