

14-22-Toyota-Tundra Bumper and Headlight Removal Guide

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal
Panel
Popper



Flat
Screwdriver



Phillips
Screwdriver



1/4 Ratchet



1/4 Extension

10mm



Socket

STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle always start by disconnecting the negative battery terminal.



STEP 2. FRONT GRILLE REMOVAL

Open hood and remove 4 X 10mm bolts on the top of the grille followed by the 2 plastic clips at the corners of the grille.



Remove the grille from the truck and set it aside to be reinstalled.



STEP 3. REMOVE BUMPER TRIM PIECE

Remove the 2 X 10mm bolts inside the wheel well.



Remove the clip located on the inside of the trim piece.
Please follow the same procedure for the other side.




Once the bolts and clips are removed, carefully remove the trim piece and set it aside to be reinstalled later.



STEP 4. REMOVE HEADLIGHT BOLTS

The headlight is secured with 3 X 10mm bolts, remove them with a wrench.



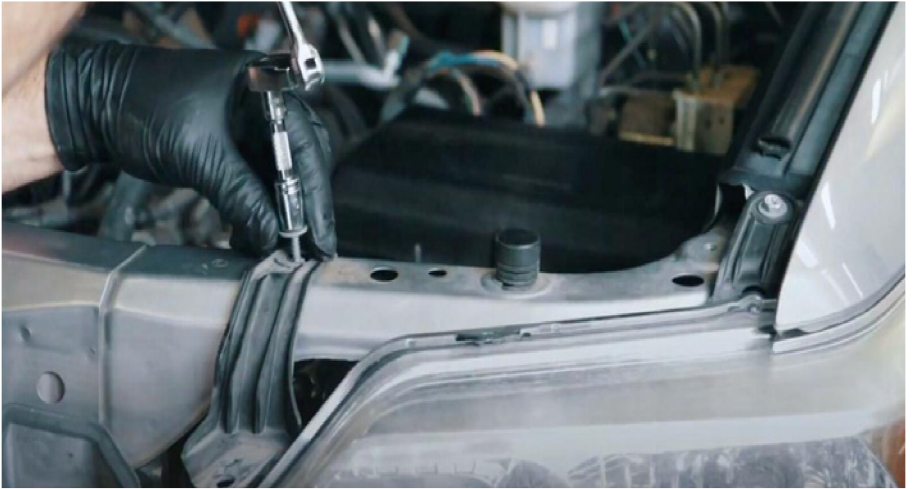


Lift up on the two top arms and remove the headlight from the truck.
Please follow the same procedure for the other side.



STEP 5. RELEASE THE WIRING HARNESS

Unplug the side marker headlight leveling and turn signal harness from the headlight.

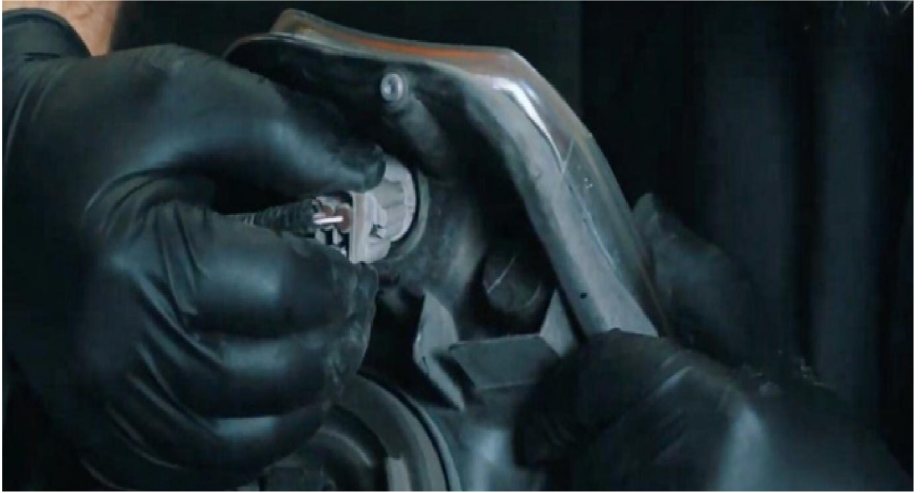


Use the panel popper to release the wiring harness from the headlight.



STEP 6. REMOVE THE TURN SIGNAL BULB AND TRANSFER INTO THE NEW HEADLIGHTS

First, unplug and remove the turn signal light bulb.

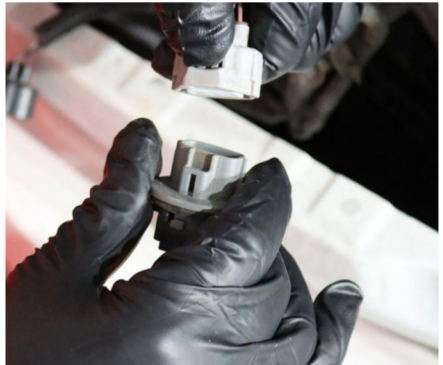

Transfer the turn signal bulb into the new ALPHAREX headlight.



Next, connect the turn signal light socket from the new ALPHAREX headlight assembly. Please follow the same steps for the other side of the headlight.

