

2016-18 Chevrolet Silverado 1500 Bumper and Headlight Removal Guide

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal
Panel
Popper



Flat
Screwdriver



Phillips
Screwdriver



1/4 Ratchet



1/4 Extension

10mm



Socket

T15
Star Torx




Socket




STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.

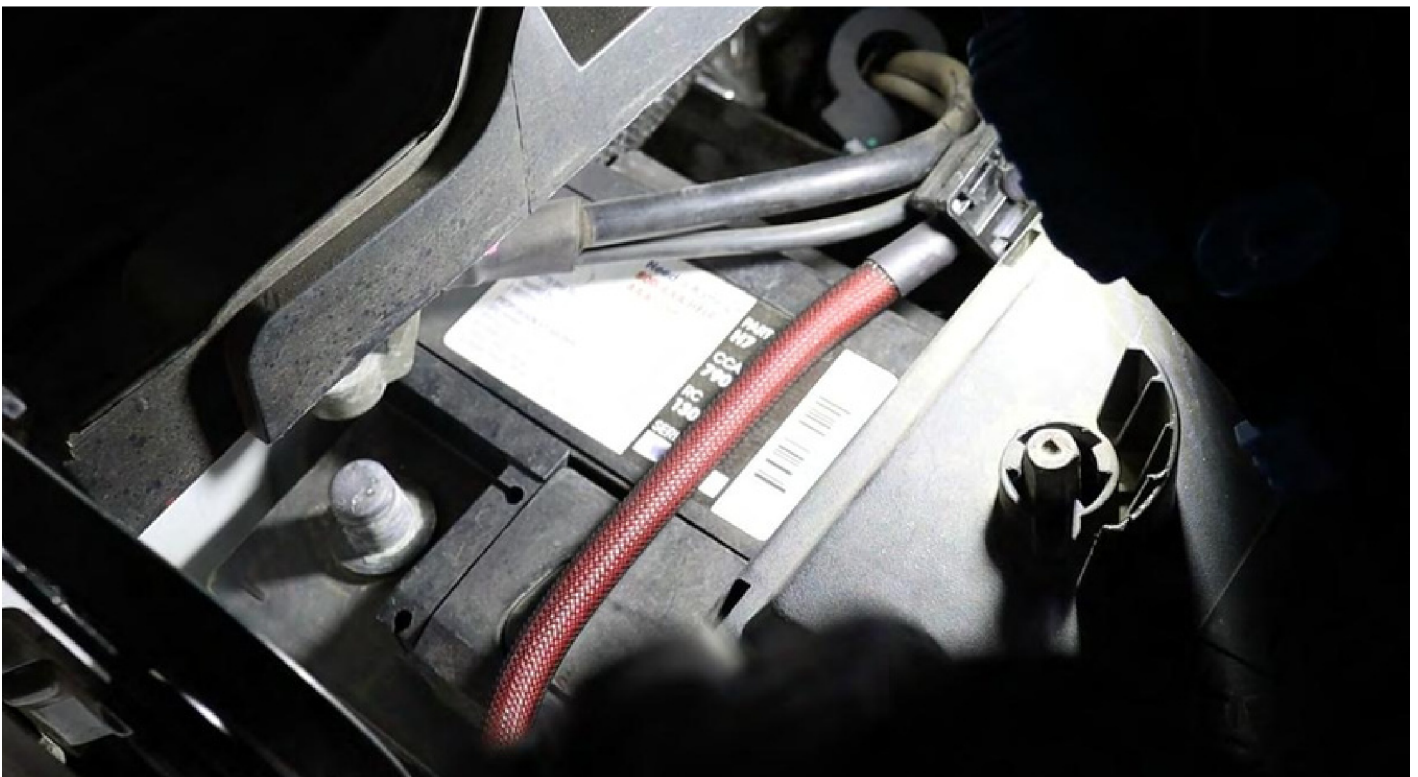


STEP 2. REMOVE THE RADIATOR SHROUD

Utilize a panel popper to begin the removal process by extracting (12) plastic push pins that are securing the radiator shroud.

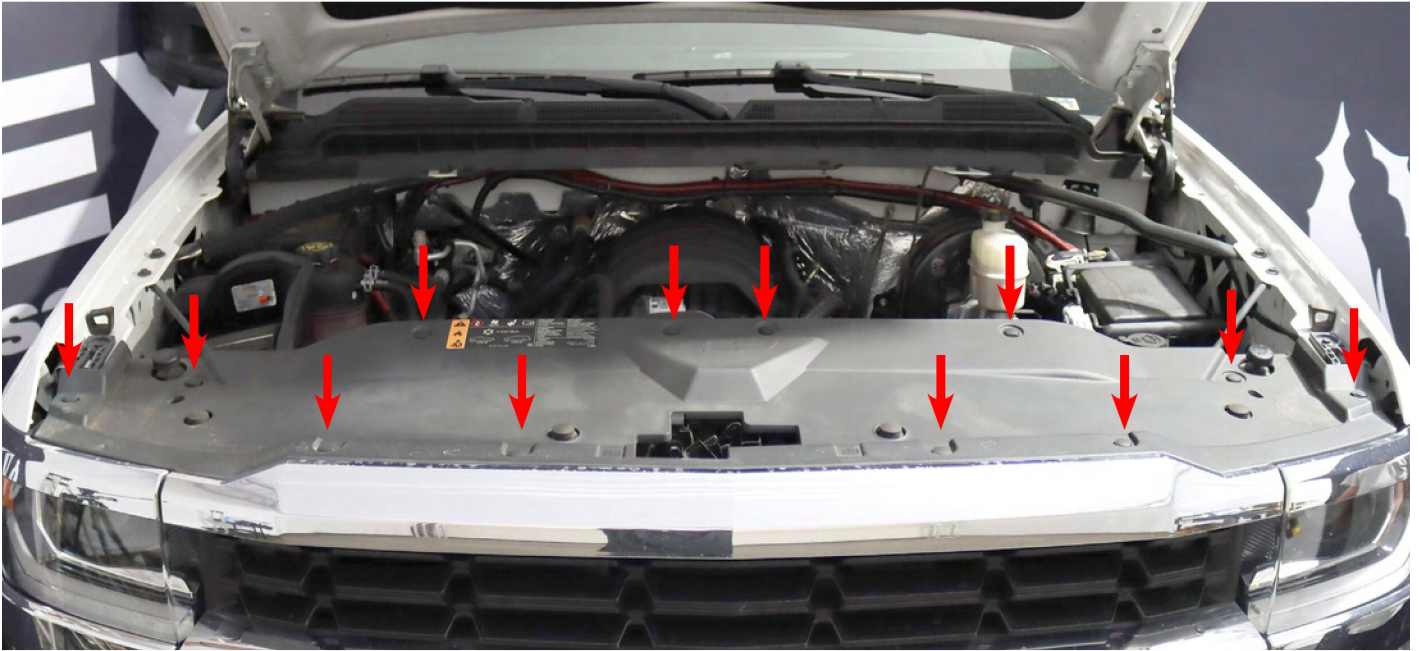



STEP 3. REMOVE THE GRILLE

Unscrew the four 10mm bolts from the top of the grille.

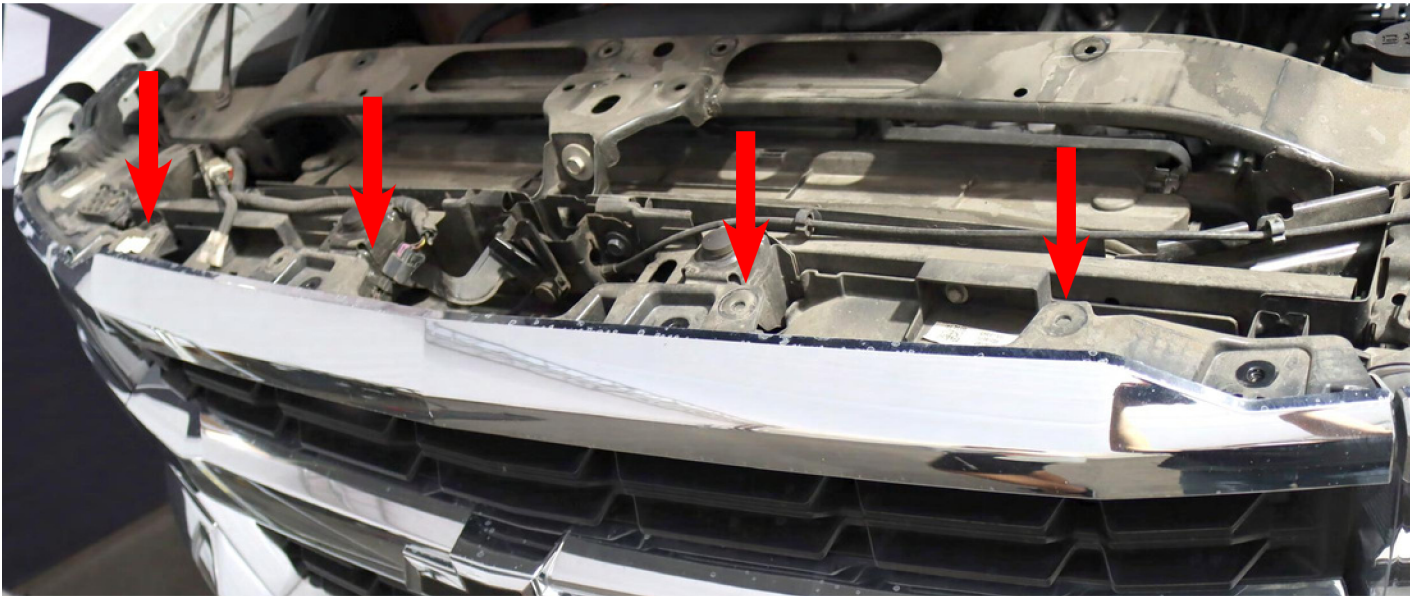


Subsequently, carefully pull the grille towards you to release it from the 6 insert mounts. Set it aside for later reinstallation.

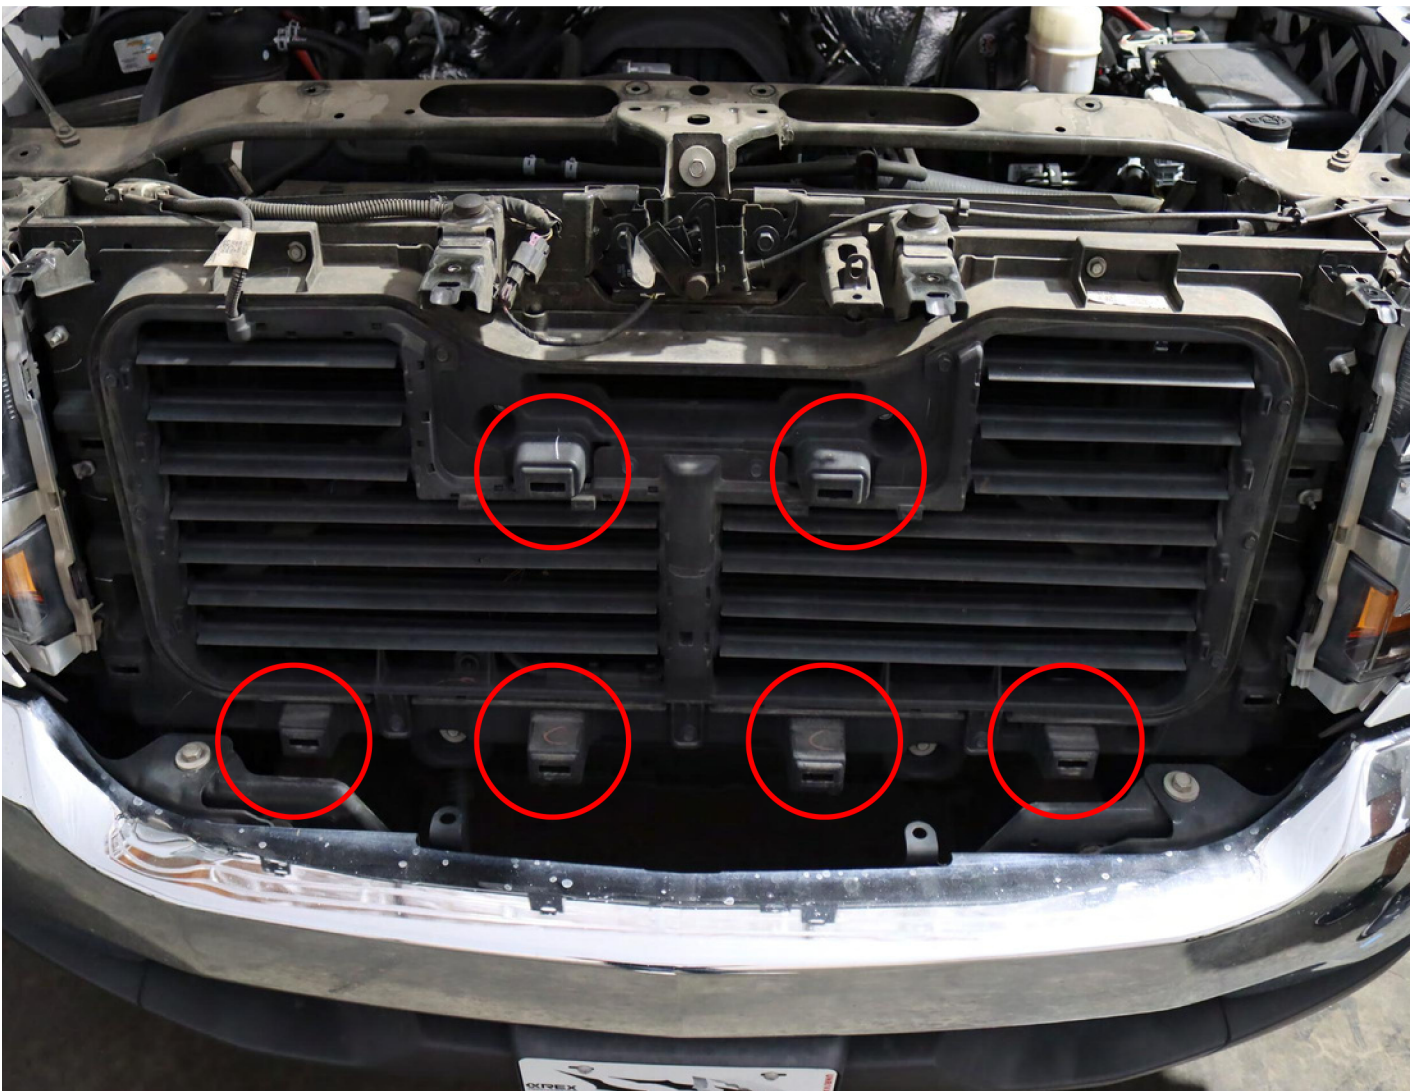

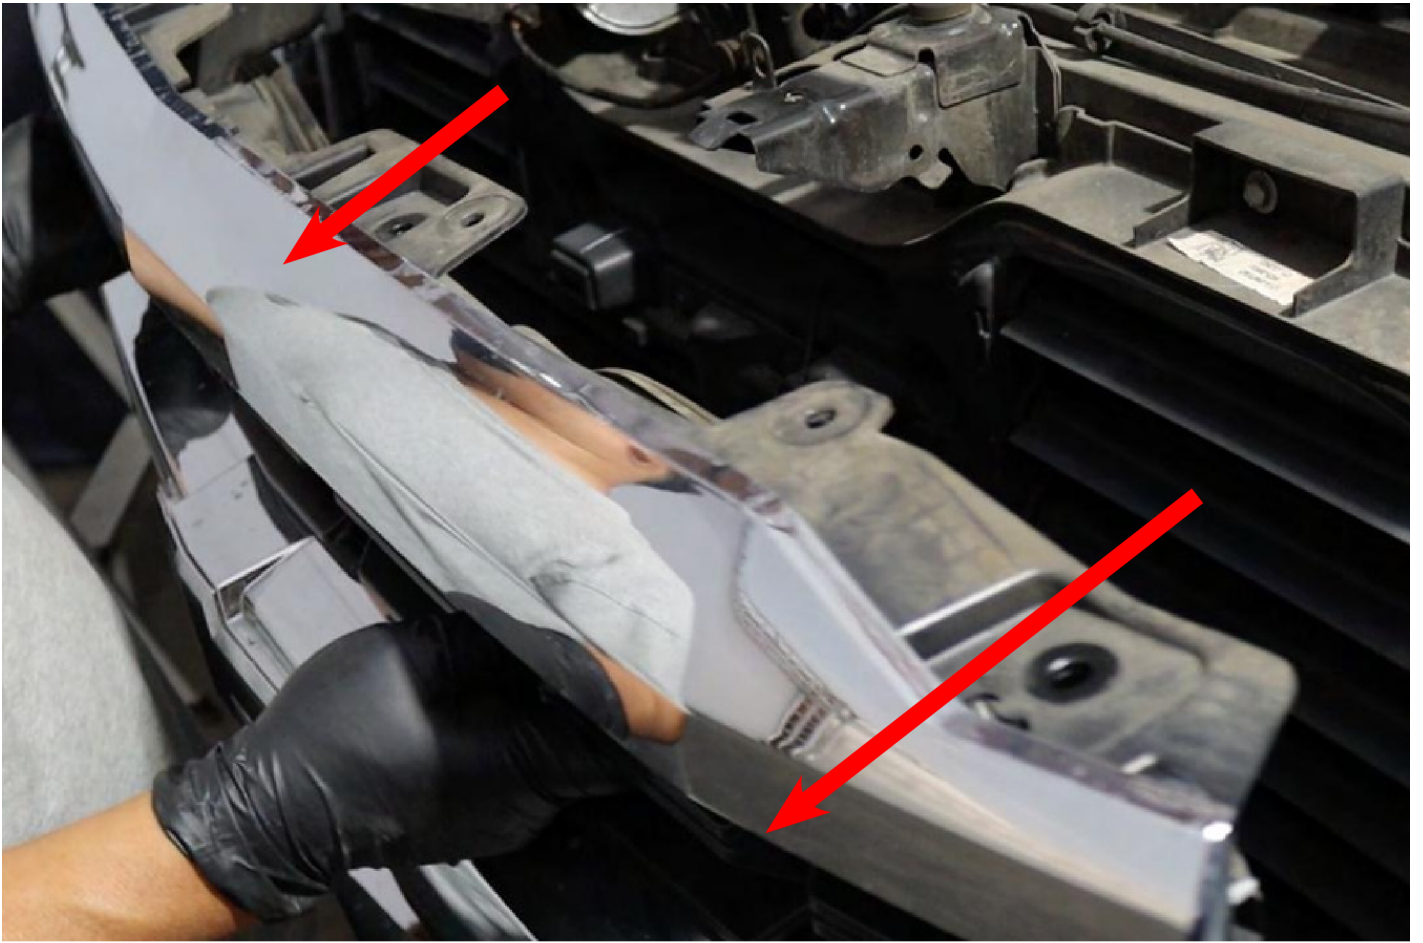


STEP 4. REMOVE THE HEADLIGHT BOLTS


To remove the headlight, you'll need to take out 4 X 10mm bolts. There are two bolts on the top, one on the side, and one from the inner front bumper.

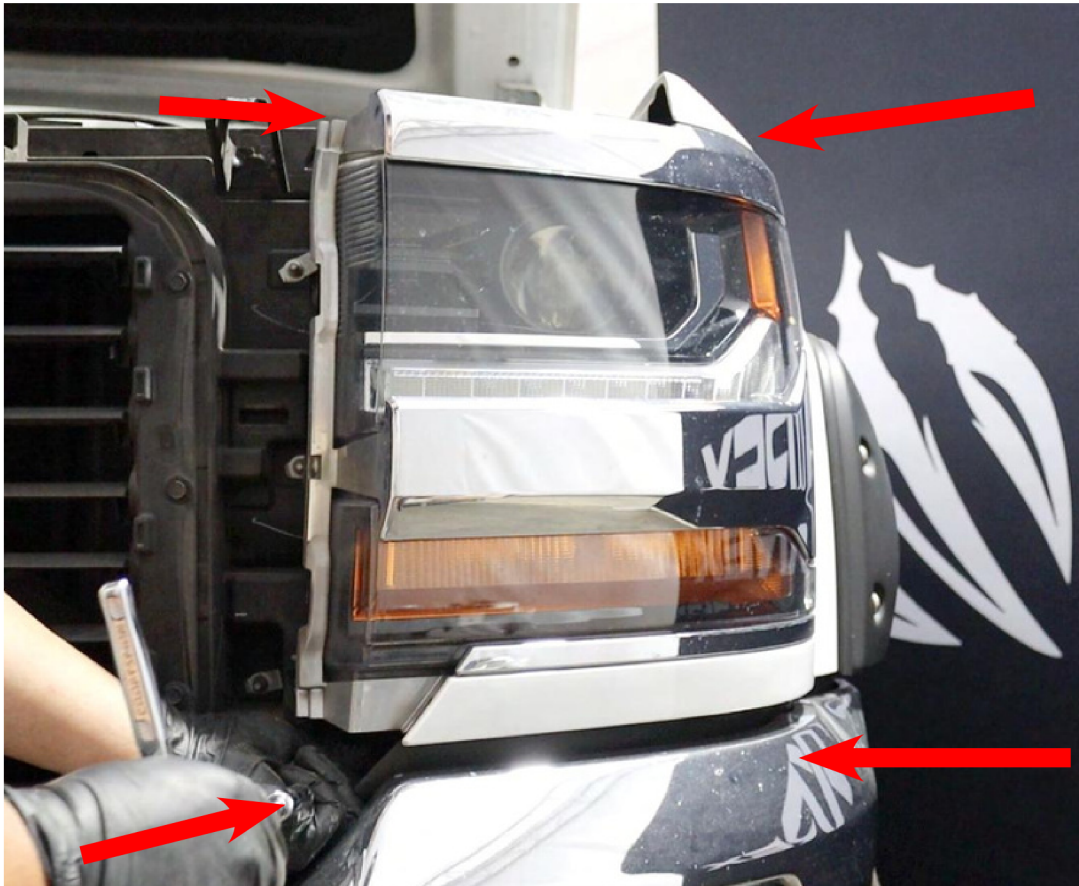

To access the headlight bolt from the inner bumper, first, remove the 2 X T15 screws from the wheelwell.

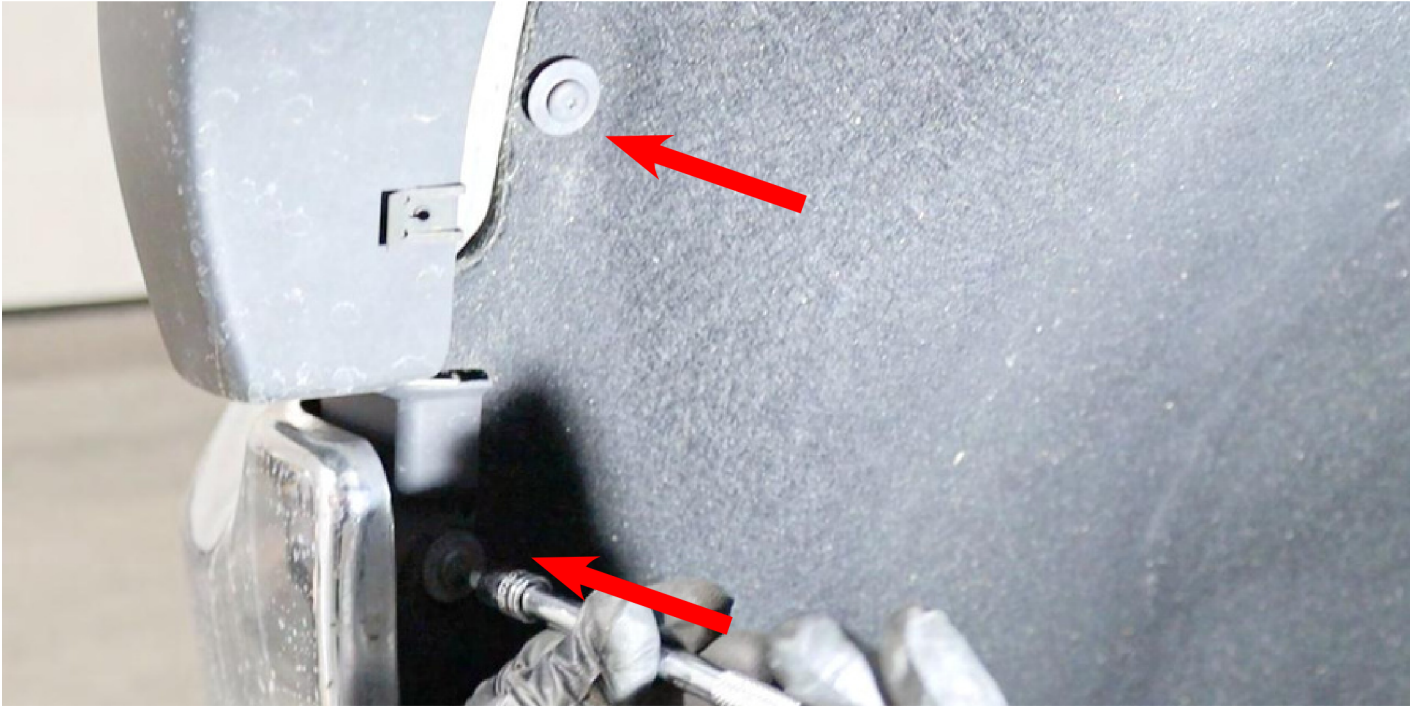

Subsequently, use a panel popper to widely open the guard cover, providing access to the headlight's bolt. Utilize a ratchet and extension socket to help remove the 10mm bolt. Repeat the same steps for the other side of the headlight.

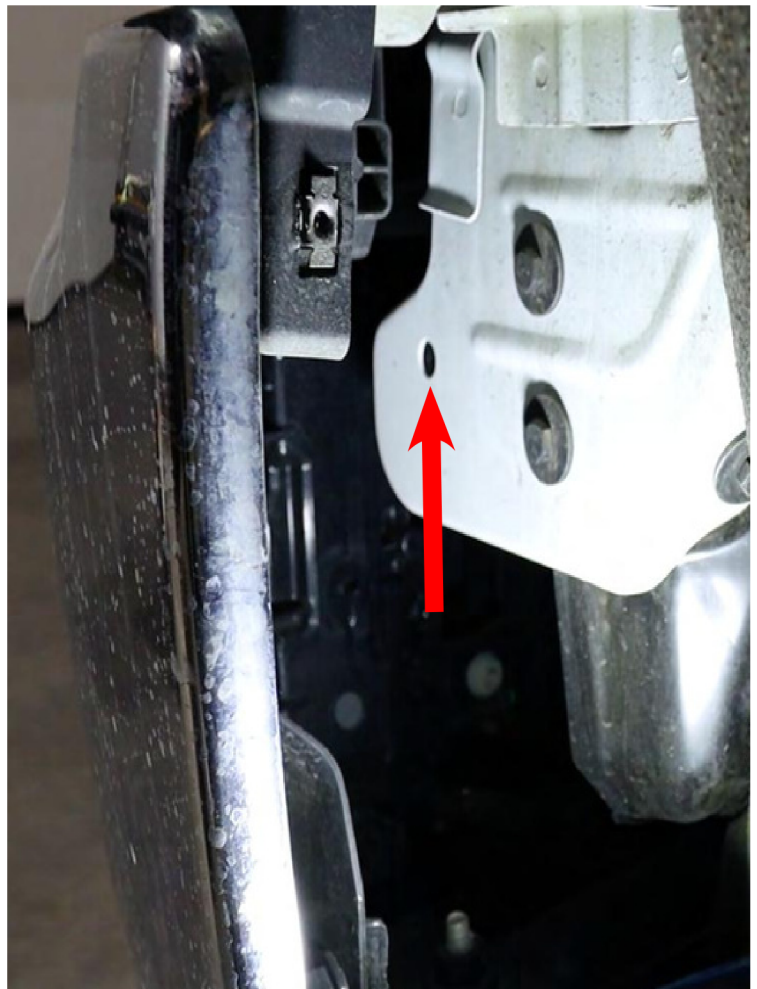

STEP 5. REMOVE THE HEADLIGHTS

Disconnect the headlight socket and gently pull the headlight assembly outward from your truck. Repeat the same step for the other side.

