






# NEW RAGE CYCLES

## INSTALLATION INSTRUCTIONS

### BMW R1200R

#### FENDER ELIMINATOR KIT

- 1 Remove rider and passenger seats
- 2 Remove both side pods by removing 3 bolts on either side; 2 inner / 1 outer (pictures 1/2)
- 3 Remove inner side panels by removing 4 bolts (pictures 3/4)
- 4 Remove C-Clip (picture 5)
- 5 Unplug connector on tail light and slide out brake light
- 6 Unscrew license plate light cover and pop off (picture 6)
- 7 Continue removing the following 5 bolts (pictures 7/8/9)
- 8 Unscrew stock turn signal lenses (picture 10)
- 9 Pop out turn signal housing and unplug 2 spade connectors on the back (picture 11)

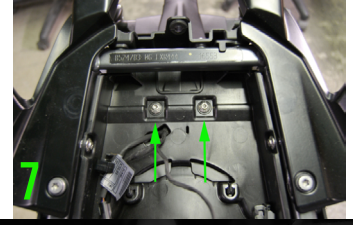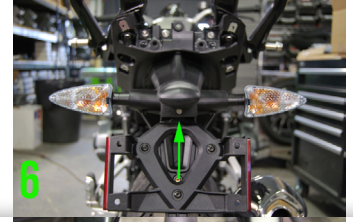
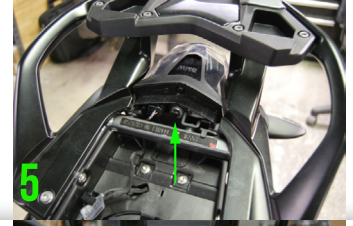
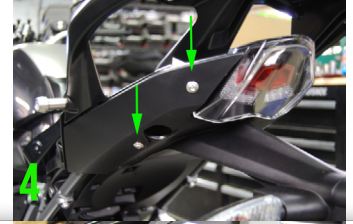
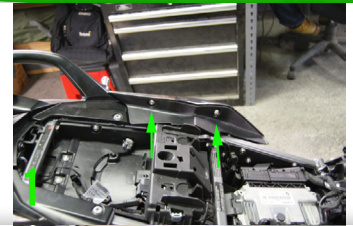


# NEW RAGE CYCLES

## INSTALLATION INSTRUCTIONS

### FENDER ELIMINATOR KIT

- 10 Slide the connectors out and pull entire harness up and leave under seat
- 11 To remove stock license plate bracket, remove 5 additional bolts (pictures 12/13/14)
- 12 Pop off 3 rubber grommets and 4 panel clips from stock bracket (picture 15)
- 13 You are now reusing the above grommets and clips on the new brackets provided (pictures 16/17/18)
- 14 Mount NRC license plate bracket to turn signal bracket with provided panel clips and M6x12 bolts (picture 19)
- 15 With provided M6x25 bolts, mount the two tail light brackets onto the bike (picture 20)
- 16 Pop on stock tail light, plug back in connector and reinstall C-Clip
- 17 Feed NRC wires through bottom of bike, and with provided M6x16 bolts and nylon nuts, mount new turn signal bracket (pictures 21/22)
- 18 Reinstall all side panels previously disassembled. Start with inner panels.

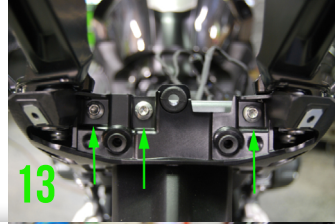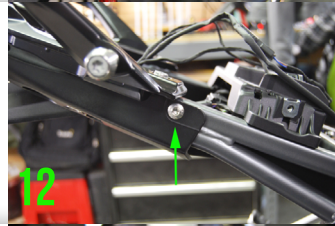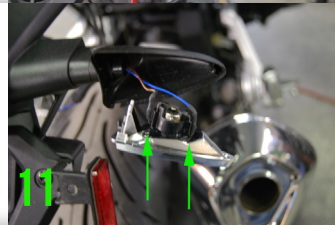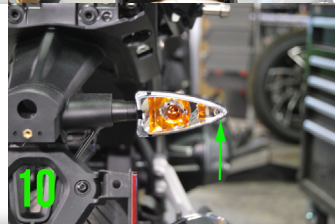

# NEW RAGE CYCLES

## INSTALLATION INSTRUCTIONS

### FENDER ELIMINATOR KIT

- 19 Plug in turn signals to spade connectors removed from stock signals
  - Right Turn Signal
    - Brown to Black NRC wire
    - Blue to Red NRC wire
  - Left Turn Signal
    - Brown to Black NRC wire
    - Blue/Red to Red NRC wire
- 20 Test your turn signals prior to shrink tubing to make sure signals are working properly
- 21 Seal connections with provided shrink tube and zip tie if necessary
- 22 For license plate light, cut off stock bulb and shorten wire if needed. Strip back tape to expose wires.
- 23 Strip ends of NRC wires and use red POSI-LOCK connectors to splice together
  - Plate Light
    - Brown to Black NRC wire
    - Blue/Yellow to Red NRC wire
- 24 Zip tie all wires if necessary to make a clean installation
- 25 Reinstall both seats

