



# NEW RAGE CYCLES

## INSTALLATION INSTRUCTIONS

### HONDA CB300R

#### FRONT TURN SIGNALS

- 1 Remove (2) bolts on either side of the headlight with a 5mm allen key. (Picture 1)
- 2 Remove (2) bolts behind dash with a 5mm allen key. (Picture 2)
- 3 Remove bolt on turn signal bracket with a 5mm allen key. (Picture 3)
- 4 Unplug OEM connectors. (Picture 4)

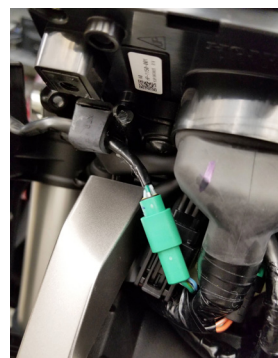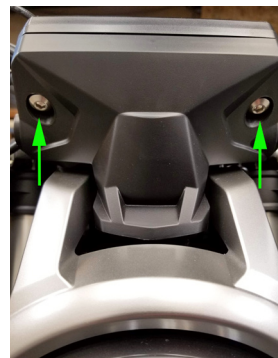

# NEW RAGE CYCLES

## INSTALLATION INSTRUCTIONS

### FRONT TURN SIGNALS

- 5 Remove nut with an 8mm socket and slide off stock turn signal. You will need to slide out bolt and steel sleeve to get the signal off the bike. (Picture 5/6)
- 6 Slide connector on new turn signal through hole, and mount signal using stock hardware. (Picture 7)
- 7 Plug in connectors and check.

