NEW CYCLES **INSTALLATION INSTRUCTIONS**

HONDA CBR600RR

FENDER ELIMINATOR 2013-PRESENT

Remove seats bolts with a 5mm allen key. (Picture 1)


Remove (4) bolts with a 4mm allen key and take off seat pod. (Picture 2)

<3> Remove (1) plastic screw on each side of plastic. (Picture 3)

- Unplug OEM connectors and remove (2) bolts with a 10mm socket to remove stock stalk. (Picture 4/5)
- Remove (2) philips head screws and take off heat shields on both sides. You will be reusing these screws and the heat shields themselves in the next step. (Picture 6)
 - Mount NRC heat shield brackets to stock heat shields using stock hardware removed in prior step. (Picture 7)





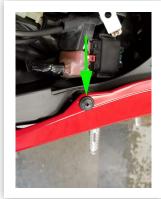



NEW A GEORGES CYCLES INSTALLATION INSTRUCTIONS

FENDER ELIMINATOR 2013-PRESENT



Take turn signal bracket, M6x40 bolts, and black spacers and mount onto the bike. (Picture 8/9)

 Take M6x30 bolts, sandwich the heat shields in between and finish mounting kit. (Picture 10)


8

To mount license plate, remove passenger peg bracket using a 6mm allen key. (Picture 11)

9

Take license plate bracket and plate light and mount to passenger peg bracket in the following assembly. (Picture 12/13)

Stock bolts to Passenger peg bracket to Plate light bracket to License plate bracket

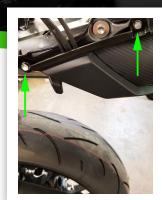







NEW A GEORGES INSTALLATION INSTRUCTIONS

FENDER ELIMINATOR 2013-PRESENT



Take provided M6x16 bolt and star nut and thread in the bottom left hole on license plate bracket. (Picture 14)



Run all connectors to stock location, plug in, and test.



Remount all screws and plastics previously removed in prior steps.

