



NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

HUSQVARNA 701 VITPILEN

FRONT TURN SIGNALS

- 1 Remove (4) bolts above and below headlight, (2) on each side with an 8mm socket. (Picture 1/2)
- 2 Remove (6) T25 torx screws and remove plastic cover. (Picture 3)
- 3 Unplug stock connectors on both sides and remove nut on backside of stock turn signals with a 13mm wrench. (Picture 4)
- 4 Take NRC turn signal, and remove (4) screws above and below lens to separate from both brackets. Take provided M6x16 bolt and M5 nut and mount top bracket to the bike. Repeat on both sides. (Picture 5/6)
- 5 Take lens and (4) flat head screws removed in last step reassemble lens, screwing flat plate to the bottom.

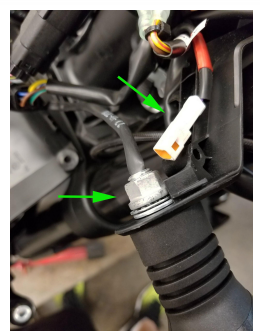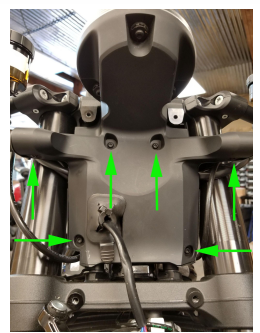

NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

FRONT TURN SIGNALS

6

Plug connectors together and test.



7

Reassemble plastic cover and head light with stock screws.

