





# NEW RAGE CYCLES

## INSTALLATION INSTRUCTIONS

### KTM SUPER DUKE 1290/R

#### FENDER ELIMINATOR

- 1 Remove seat and unplug 4 wire white connector (picture 1)
- 2 Remove (4) T30 torx bolts and slide fender off (picture 2)
- 3 To remove wiring harness, disassemble fender by removing all (12) screws (picture 3)
- 4 Unplug (3) white connectors and plug back into 4 pin connector under seat (picture 4)
- 5 Remove (2) T27 torx bolts underneath bike
- 6 Take NRC kit, slide connectors through hole below stock tail light, insert two tabs into lower slots and use stock T30 torx bolts to tighten (picture 5/6)

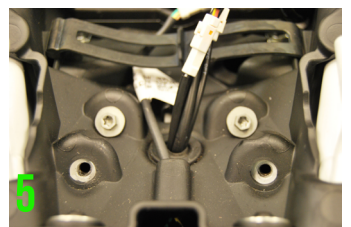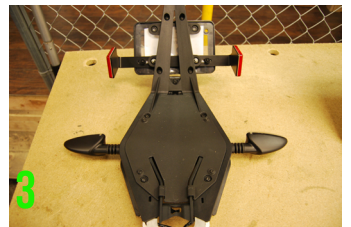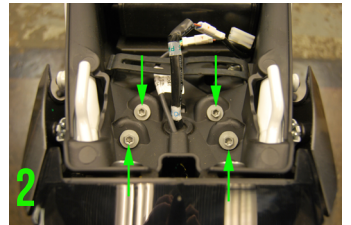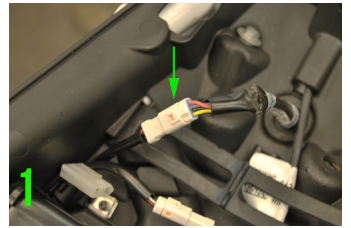

# NEW RAGE CYCLES

## INSTALLATION INSTRUCTIONS

### FENDER ELIMINATOR

- 7 Take (2) black spacers and M5x45 bolts and mount into lower holes underneath bike (picture 7)
- 8 Plug connectors into harness underneath seat and test lights (picture 8)
- 9 Zip tie if necessary and put tool bag and seat back on bike

