

TESMANIAN

Thank you for choosing Tesmanian brand sunshade.

Preparation:

- 1) See Diagram #1 to understand how to use the clips. -Tuck shade into the "U" shaped area of the clips, then push insert the clip in between the glass roof and edge trim of the car.
- 2) Position the Front and Rear of the Shades and UV screen (UV screen is optional to further reduce heat transmission into the cabin, keeping you comfortable and cool.)
- 3) Tape the Velcro strip on each shade for easy joining during installation (see Diagram #3)
- 4) Round end clips are for joining the 2 shades together during installation
(See diagram #2 to understand how to use the round end clips to join the 2 shades together)

Installation:

- 1) If you decided to use with the UV screen: Combine the Shade with the UV Screen (silver side face up) . The UV screen should be installed in between glass roof & sunshade)
- 2) Install Front Shade (with/without UV screen) and use clip to secure, see order as Diagram #3
- 3) Install Rear Shade (with/without UV screen) and use clip to secure, see order as Diagram #3
- 4) Join the 2 shades together with the taped velcro
- 5) Install the Round Clips to secure the joining of both shades together, see Diagram #2 and Diagram #3



DIAGRAM #1



Articulated fixing clips for seamless splice installation

Tightly fitted edges



DIAGRAM #2



EASY TO INSTALL

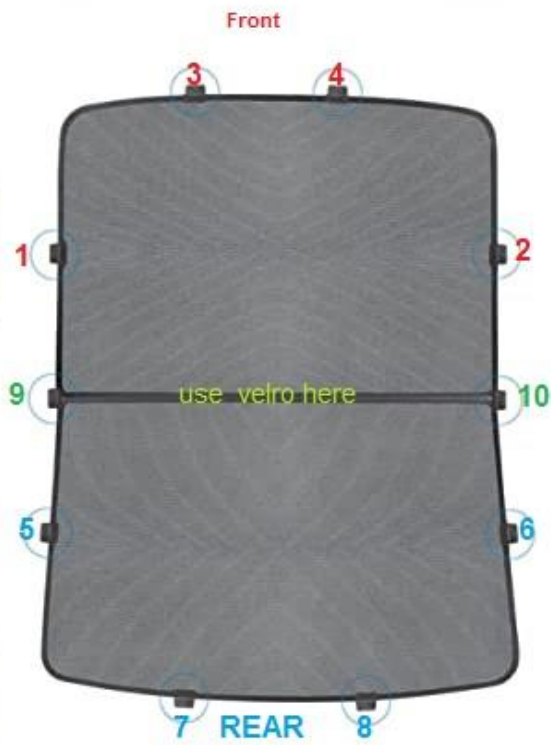


DIAGRAM #3