

Customer Name:	Machine Set: Default		
Size=110.1 mm x 147.1 mm (4.33 inch x 5.79 inch) Stitch No.=10951 ChangeColor No.=5 Trim No.=24			


Design Note:

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.38
2.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.38
3.	 Robison Anton Super Brite Poly.Baltic Blue.5741	12.92
4.	 Robison Anton Super Brite Poly.Very Red.5719	0.38
5.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.38
6.	 Robison Anton Super Brite Poly.Very Red.5719	11.69

ZOOM 94%



Color Sequence:

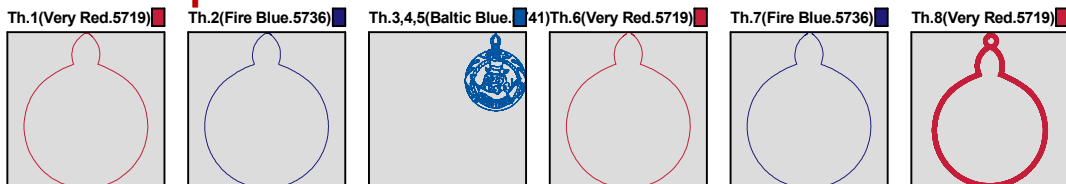

Customer Name:	Machine Set: Default		
Size=118.2 mm x 148.7 mm (4.65 inch x 5.85 inch) Stitch No.=11625 ChangeColor No.=5 Trim No.=25			


Design Note:

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.40
2.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.40
3.	 Robison Anton Super Brite Poly.Baltic Blue.5741	13.98
4.	 Robison Anton Super Brite Poly.Very Red.5719	0.39
5.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.39
6.	 Robison Anton Super Brite Poly.Very Red.5719	9.93

ZOOM 88%



Color Sequence:

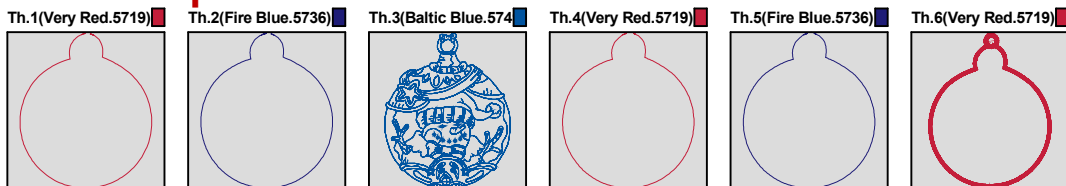

Customer Name:	Machine Set: Default		
Size=118.2 mm x 148.7 mm (4.65 inch x 5.85 inch) Stitch No.=12833 ChangeColor No.=5 Trim No.=40			


Design Note:

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.40
2.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.40
3.	 Robison Anton Super Brite Poly.Baltic Blue.5741	15.08
4.	 Robison Anton Super Brite Poly.Very Red.5719	0.39
5.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.40
6.	 Robison Anton Super Brite Poly.Very Red.5719	9.97

ZOOM 88%



Color Sequence:

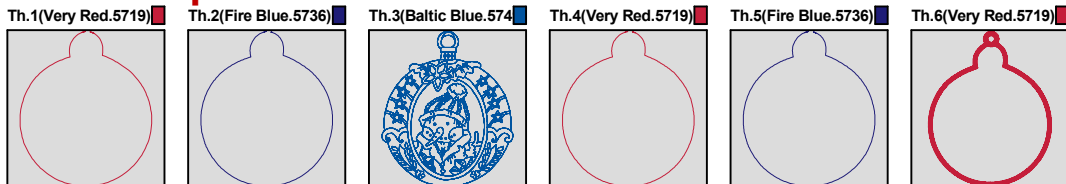

Customer Name:	Machine Set: Default		
Size=118.2 mm x 148.7 mm (4.65 inch x 5.85 inch) Stitch No.=12495 ChangeColor No.=5 Trim No.=20			

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.40
2.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.39
3.	 Robison Anton Super Brite Poly.Baltic Blue.5741	14.20
4.	 Robison Anton Super Brite Poly.Very Red.5719	0.39
5.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.40
6.	 Robison Anton Super Brite Poly.Very Red.5719	9.94

ZOOM 88%



Color Sequence:




Customer Name:	Machine Set: Default		
Size=116.9 mm x 148.7 mm (4.60 inch x 5.85 inch) Stitch No.=10379 ChangeColor No.=5 Trim No.=19			

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.40
2.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.39
3.	 Robison Anton Super Brite Poly.Baltic Blue.5741	11.49
4.	 Robison Anton Super Brite Poly.Very Red.5719	0.39
5.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.40
6.	 Robison Anton Super Brite Poly.Very Red.5719	9.95

ZOOM 89%



Color Sequence:

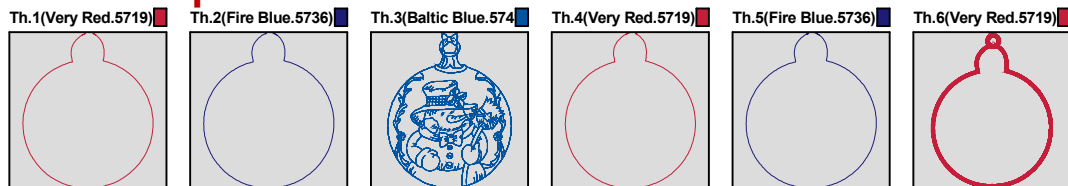

Customer Name:	Machine Set: Default		
Size=112.1 mm x 146.6 mm (4.41 inch x 5.77 inch) Stitch No.=11366 ChangeColor No.=5 Trim No.=35			

Design Note:

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.39
2.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.39
3.	 Robison Anton Super Brite Poly.Baltic Blue.5741	12.98
4.	 Robison Anton Super Brite Poly.Very Red.5719	0.39
5.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.39
6.	 Robison Anton Super Brite Poly.Very Red.5719	9.74

ZOOM 93%



Color Sequence:



Customer Name:	Machine Set: Default		
Size=118.2 mm x 148.7 mm (4.65 inch x 5.85 inch) Stitch No.=11419 ChangeColor No.=5 Trim No.=14			


Design Note:

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.40
2.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.40
3.	 Robison Anton Super Brite Poly.Baltic Blue.5741	13.14
4.	 Robison Anton Super Brite Poly.Very Red.5719	0.39
5.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.39
6.	 Robison Anton Super Brite Poly.Very Red.5719	9.95

ZOOM 88%



Color Sequence:

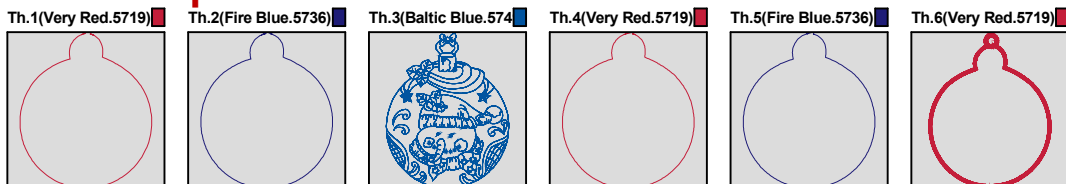

Customer Name:	Machine Set: Default		
Size=114.2 mm x 147.4 mm (4.50 inch x 5.80 inch) Stitch No.=10586 ChangeColor No.=5 Trim No.=17			


Design Note:

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.39
2.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.39
3.	 Robison Anton Super Brite Poly.Baltic Blue.5741	12.02
4.	 Robison Anton Super Brite Poly.Very Red.5719	0.38
5.	 Robison Anton Super Brite Poly.Fire Blue.5736	0.39
6.	 Robison Anton Super Brite Poly.Very Red.5719	12.03

ZOOM 91%



Color Sequence:

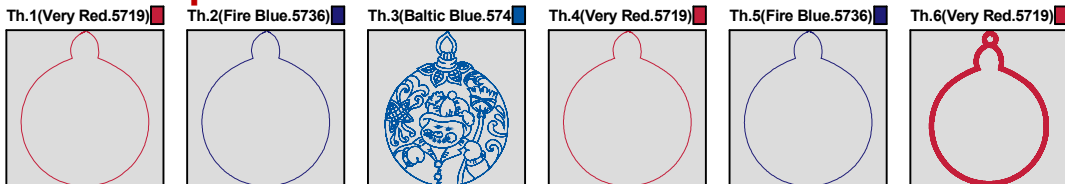

Customer Name:	Machine Set: Default	
Size=113.3 mm x 147.9 mm (4.46 inch x 5.82 inch) Stitch No.=11968 ChangeColor No.=5 Trim No.=34		

Design Note:

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.39
2.	 Robison Anton Super Brite Poly.Nikko Blue.9022	0.39
3.	 Robison Anton Super Brite Poly.Copen.5545	13.69
4.	 Robison Anton Super Brite Poly.Jockey Red.5581	0.39
5.	 Robison Anton Super Brite Poly.Nikko Blue.9022	0.39
6.	 Robison Anton Super Brite Poly.Jockey Red.5581	10.22

ZOOM 92%



Color Sequence:



Customer Name:	Machine Set: Default	
Size=114.8 mm x 146.4 mm (4.52 inch x 5.76 inch) Stitch No.=12299 ChangeColor No.=5 Trim No.=23		

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Very Red.5719	0.38
2.	 Robison Anton Super Brite Poly.Nikko Blue.9022	0.38
3.	 Robison Anton Super Brite Poly.Baltic Blue.5741	13.21
4.	 Robison Anton Super Brite Poly.Very Red.5719	0.62
5.	 Robison Anton Super Brite Poly.Nikko Blue.9022	0.76
6.	 Robison Anton Super Brite Poly.Very Red.5719	11.93

ZOOM 90%



Color Sequence:



In the hoop Christmas Ornaments

Project By: Jill Litchfield

Supply List:

A 5x7 hoop quilt batting – I used leftovers from previous quilt project

Water Soluble Stabilizer Fabric

Pins

Wonder Under

1. Hoop your embroidery hoop with water soluble stabilizer. Sew the first placement line on the water soluble stabilize



2. Take the hoop off the machine (DO NOT UNHOOP!) place piece of fabric with wonder under ironed on the back of it covering the placement stitching.



3. Place the hoop back into the machine and sew the tackdown stitch.



4. Take the hoop off the machine (DO NOT UNHOOP!) Cut around the placement stitching getting rid of the excess fabric. Iron the fabric to the stabilizer.



5. Place the hoop back on the machine and embroider the design.



6. Take the hoop out of the machine (DO NOT UNHOOP). Pin three layers of batting to the back of the design making sure the whole design is covered.



7. Using straight pins, pin the three layers of batting to the stabilizer.



8. Place the hoop back in the machine and sew the tackdown stitch for the batting.




9. Take the hoop out of the machine. (DO NOT UNHOOP!) Remove all the pins and cut around the tack down stitching removing all excess batting.




10. Place your backing fabric over the batting on the back of your design covering the entire design.



11. Place the hoop back into the machine and sew the tackdown stitch for the backing fabric. I do the batting and backing in two separate steps because I find it easier to cut them separately.

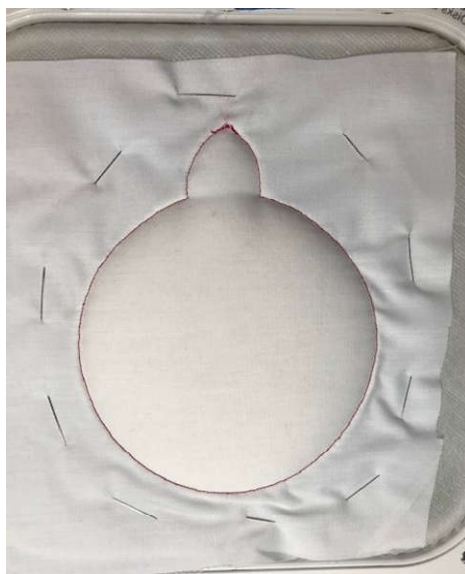

12. Take the hoop out of the machine. (**DO NOT UNHOOP!**) Remove all the pins and cut around the tack down stitching removing all excess fabric.

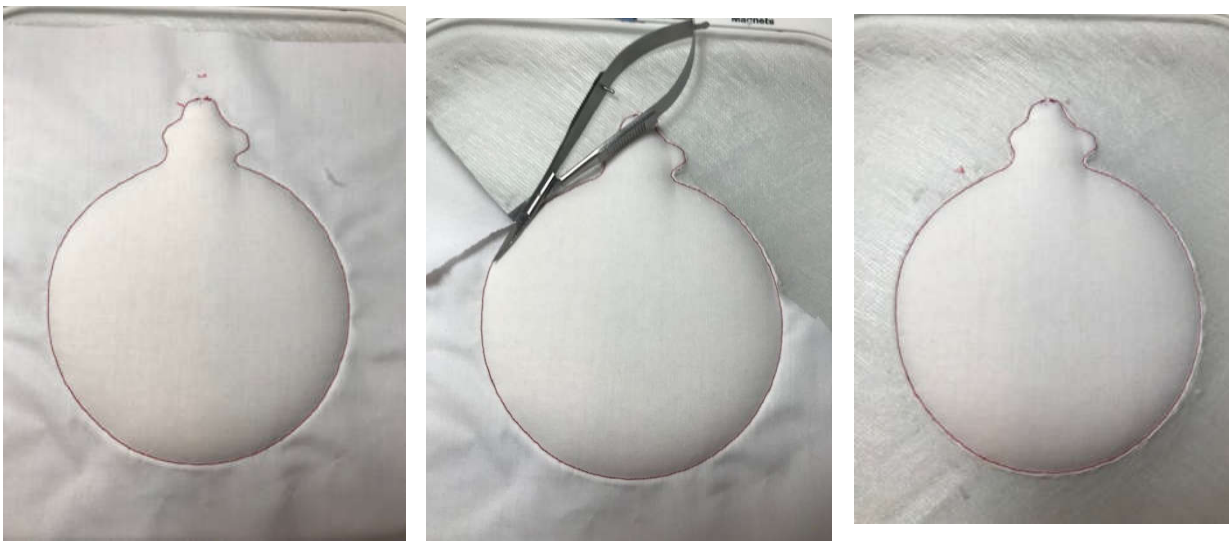

13. Place the hoop back into the machine and finish sewing the design.



14. Take the hoop out of the machine and unhoop your design. Carefully cut the excess stabilizer from around your design. Using a wash cloth, sponge or paper towel with warm water dissolve the little bit of excess stabilizer from around your design.



