




Design Name: atwmcm0141	Customer Name:	Machine Set: Default	
Size=82.2 mm x 98.1 mm (3.24 inch x 3.86 inch) Stitch No.=5513 ChangeColor No.=1 Trim No.=27			

Design Note: Color sequence 2 represents Swarovski Crystals. See instructions document.

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	10.86
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.37

ZOOM 100%

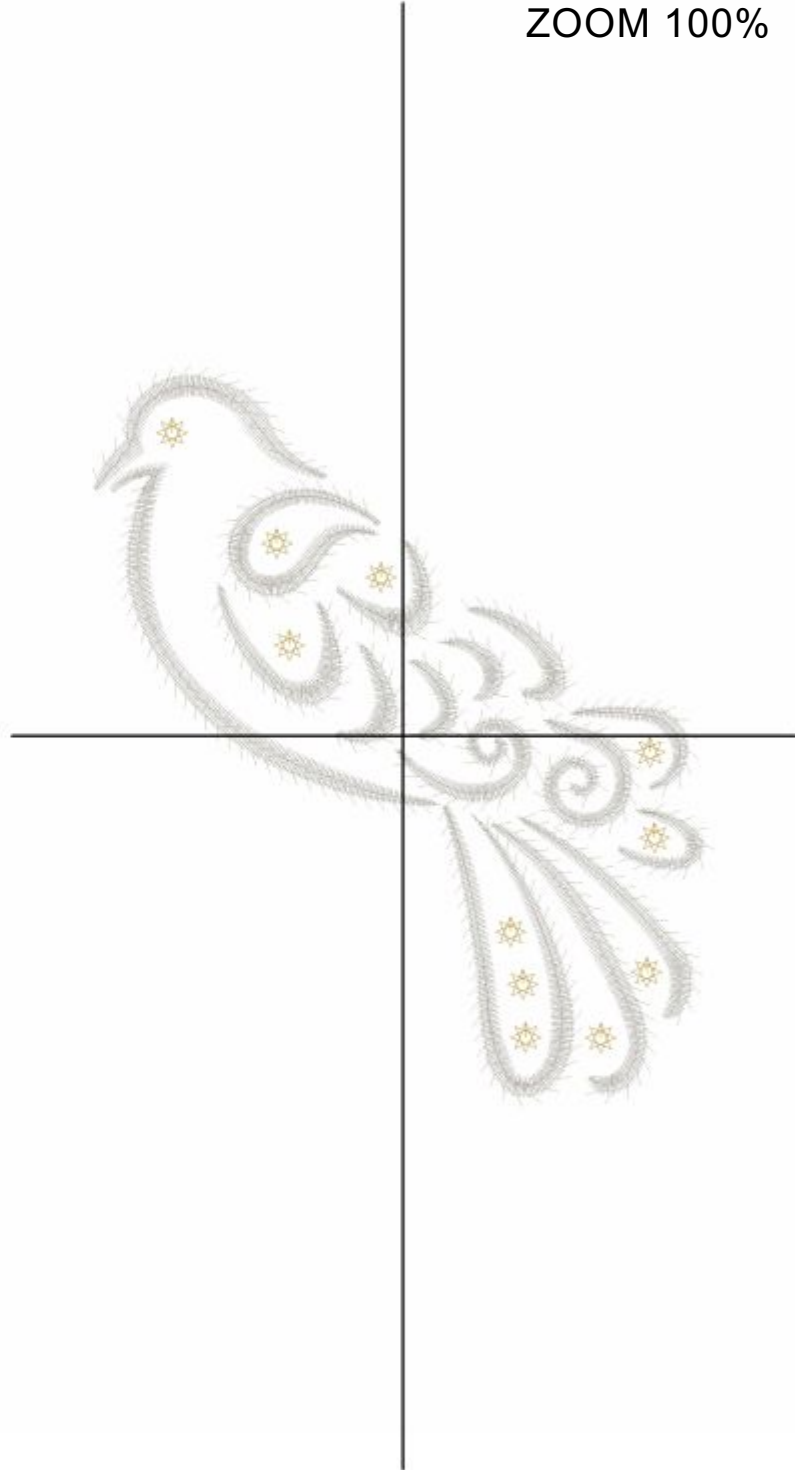

Color Sequence:

Th.1(Cloud.5783)  Th.2(TH Gold.5906) 





ATWMC0142


Print At: 2015-9-24

Design File: atwmcm0142.gen

Design Name: atwmcm0142	Customer Name:	Machine Set: Default	
Size=98.0 mm x 60.2 mm (3.86 inch x 2.37 inch) Stitch No.=6313 ChangeColor No.=1 Trim No.=42			

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	9.86
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.32

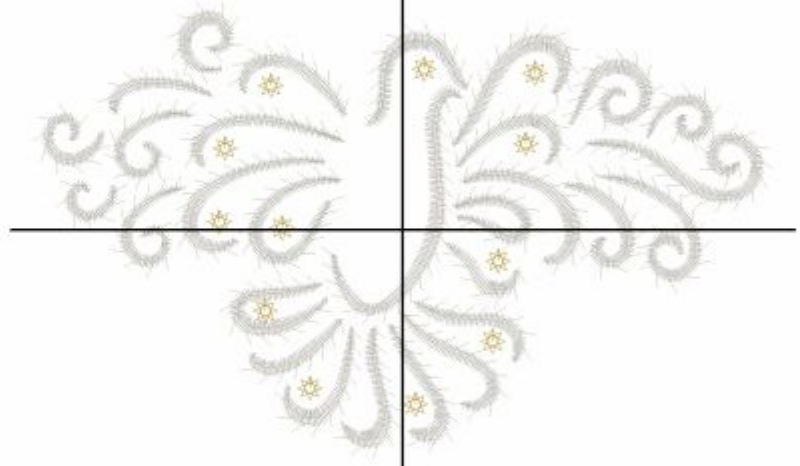

ZOOM 100%




Color Sequence:



Design Name: atwmcm0143	Customer Name:	Machine Set: Default	
Size=76.2 mm x 94.1 mm (3.00 inch x 3.70 inch) Stitch No.=7551 ChangeColor No.=1 Trim No.=37			

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	13.18
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.28

ZOOM 100%

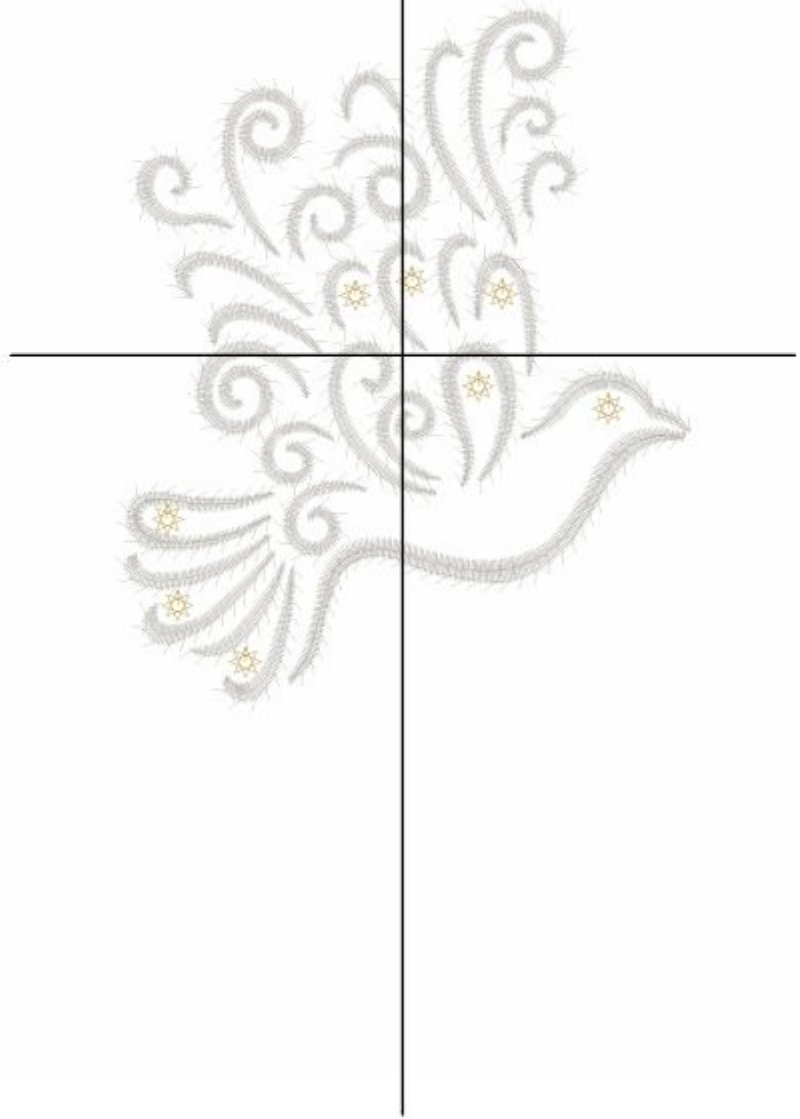

Color Sequence:

Th.1(Cloud.5783)  Th.2(TH Gold.5906) 





ATWMC0144

Print At: 2015-9-24


Design File: atwmcm0144.gen

Design Name: atwmcm0144	Customer Name:	Machine Set: Default	
Size=98.6 mm x 84.6 mm (3.88 inch x 3.33 inch) Stitch No.=6483 ChangeColor No.=1 Trim No.=34			

Design Note: Color sequence 2 represents Swarovski Crystals. See instructions document.

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	11.65
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.41

ZOOM 100%

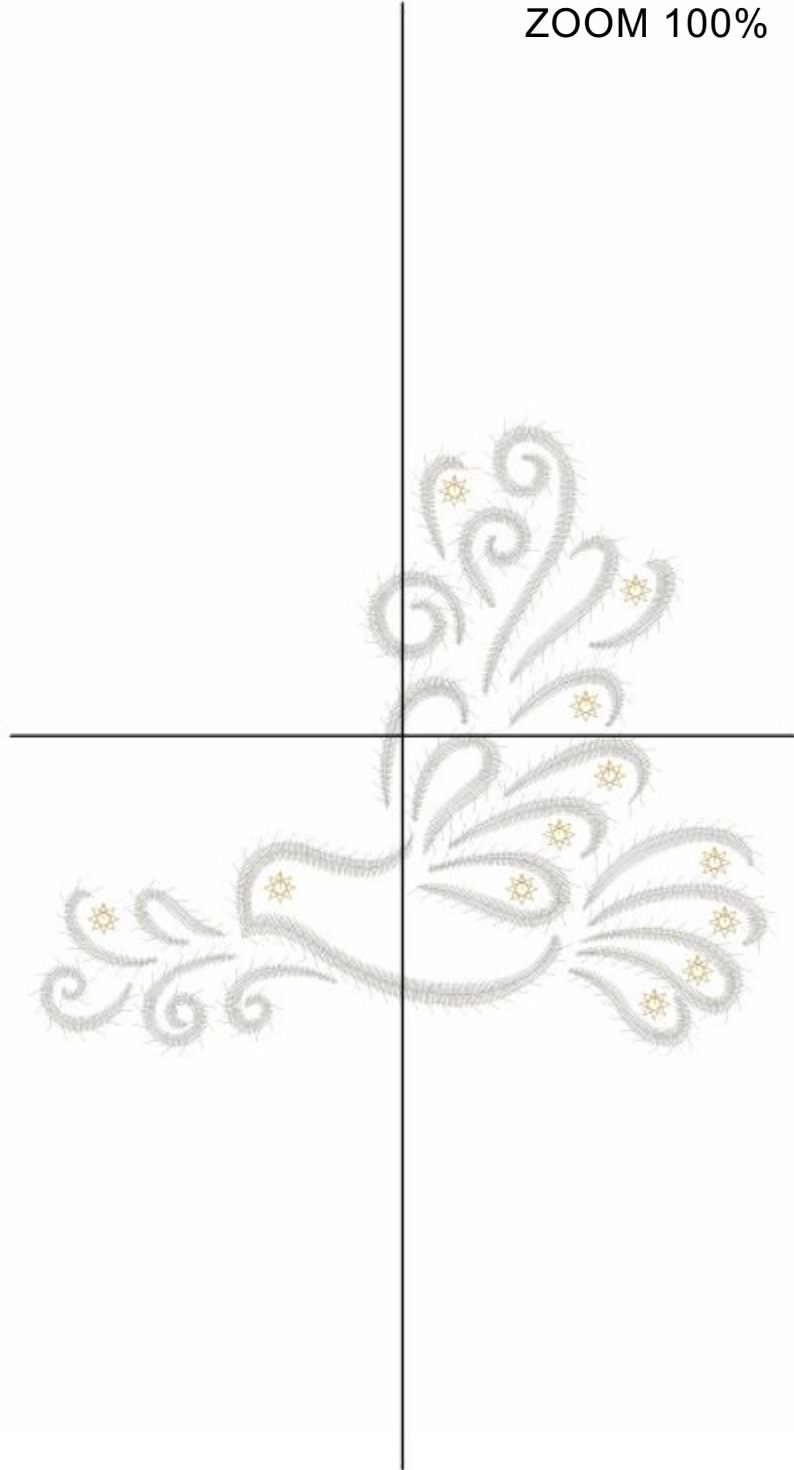



Color Sequence:

Th.1(Cloud.5783)  Th.2(TH Gold.5906) 




Design Name: atwmcm0145	Customer Name:	Machine Set: Default	
Size=80.6 mm x 97.0 mm (3.17 inch x 3.82 inch) Stitch No.=7301 ChangeColor No.=1 Trim No.=36			

Design Note: Color sequence 2 represents Swarovski Crystals. See instructions document.

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	13.73
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.45

ZOOM 100%

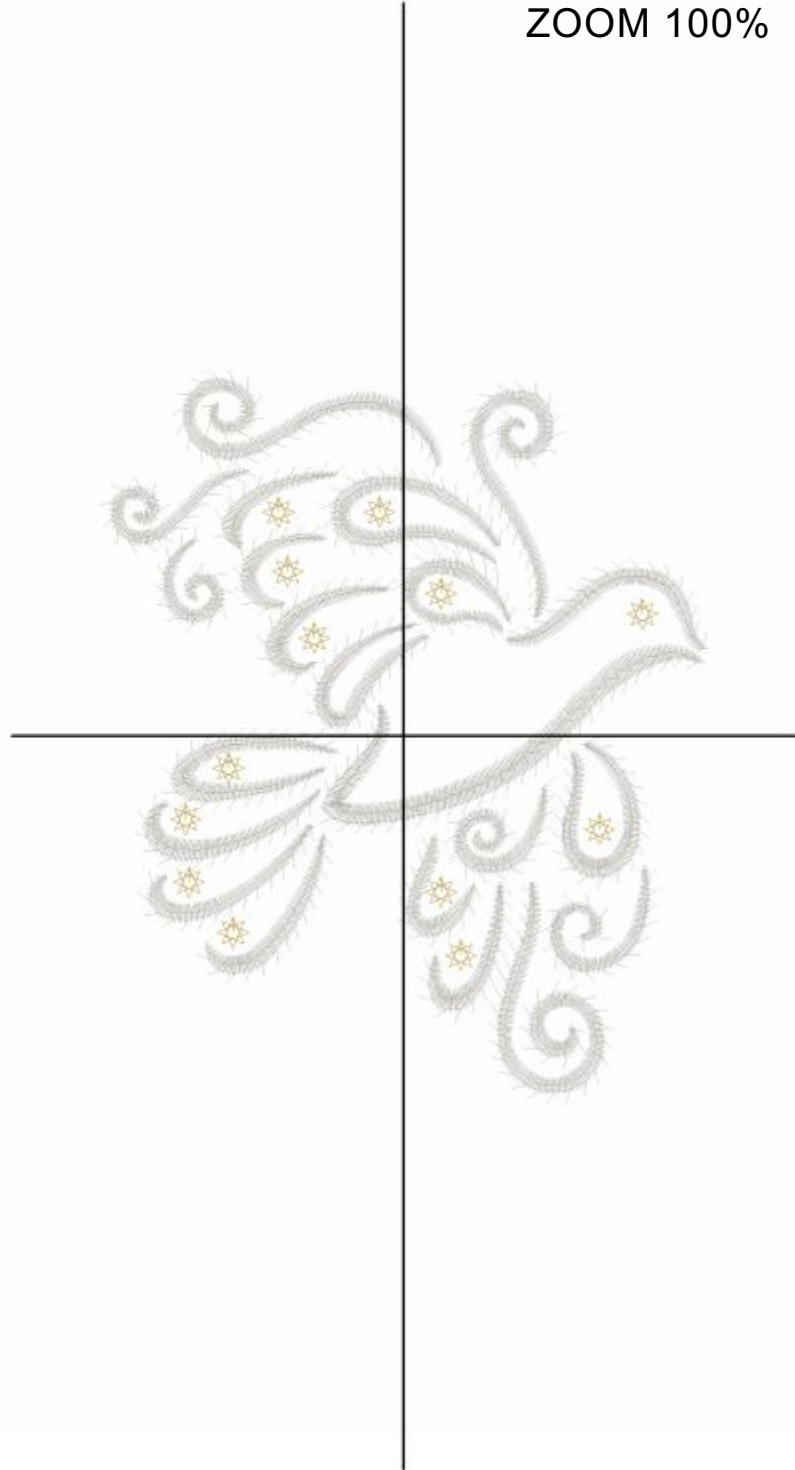



Color Sequence:

Th.1(Cloud.5783)  Th.2(TH Gold.5906) 




Design Name: atwmcm0146	Customer Name:	Machine Set: Default	
Size=96.1 mm x 98.6 mm (3.78 inch x 3.88 inch) Stitch No.=8431 ChangeColor No.=1 Trim No.=40			

Design Note: Color sequence 2 represents Swarovski Crystals. See instructions document.

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	15.59
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.48

ZOOM 100%

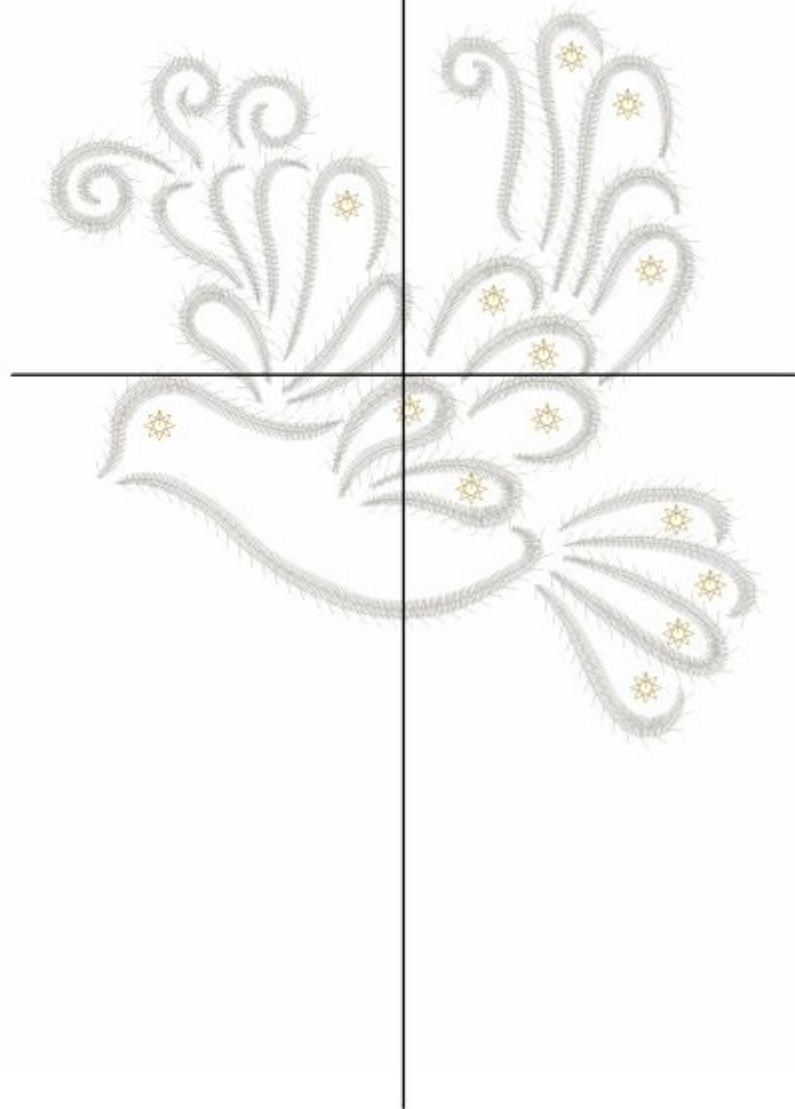



Color Sequence:

Th.1(Cloud.5783)  Th.2(TH Gold.5906) 




Design Name: atwmcm0147	Customer Name:	Machine Set: Default	
Size=97.9 mm x 81.0 mm (3.85 inch x 3.19 inch) Stitch No.=6480 ChangeColor No.=1 Trim No.=34			

Design Note: Color sequence 2 represents Swarovski Crystals. See instructions document.

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	10.80
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.37

ZOOM 100%

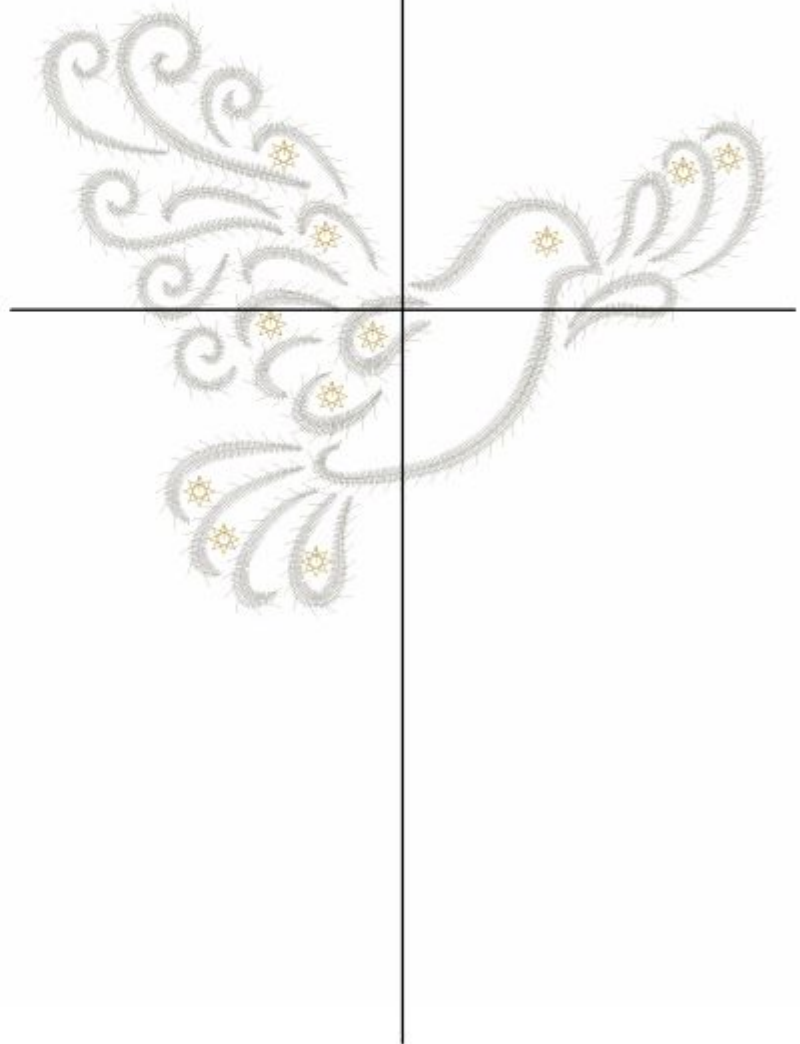



Color Sequence:

Th.1(Cloud.5783)  Th.2(TH Gold.5906) 




Design Name: atwmcm0148	Customer Name:	Machine Set: Default	
Size=69.6 mm x 98.6 mm (2.74 inch x 3.88 inch) Stitch No.=6925 ChangeColor No.=1 Trim No.=37			

Design Note: Color sequence 2 represents Swarovski Crystals. See instructions document.

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	11.65
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.31

ZOOM 100%

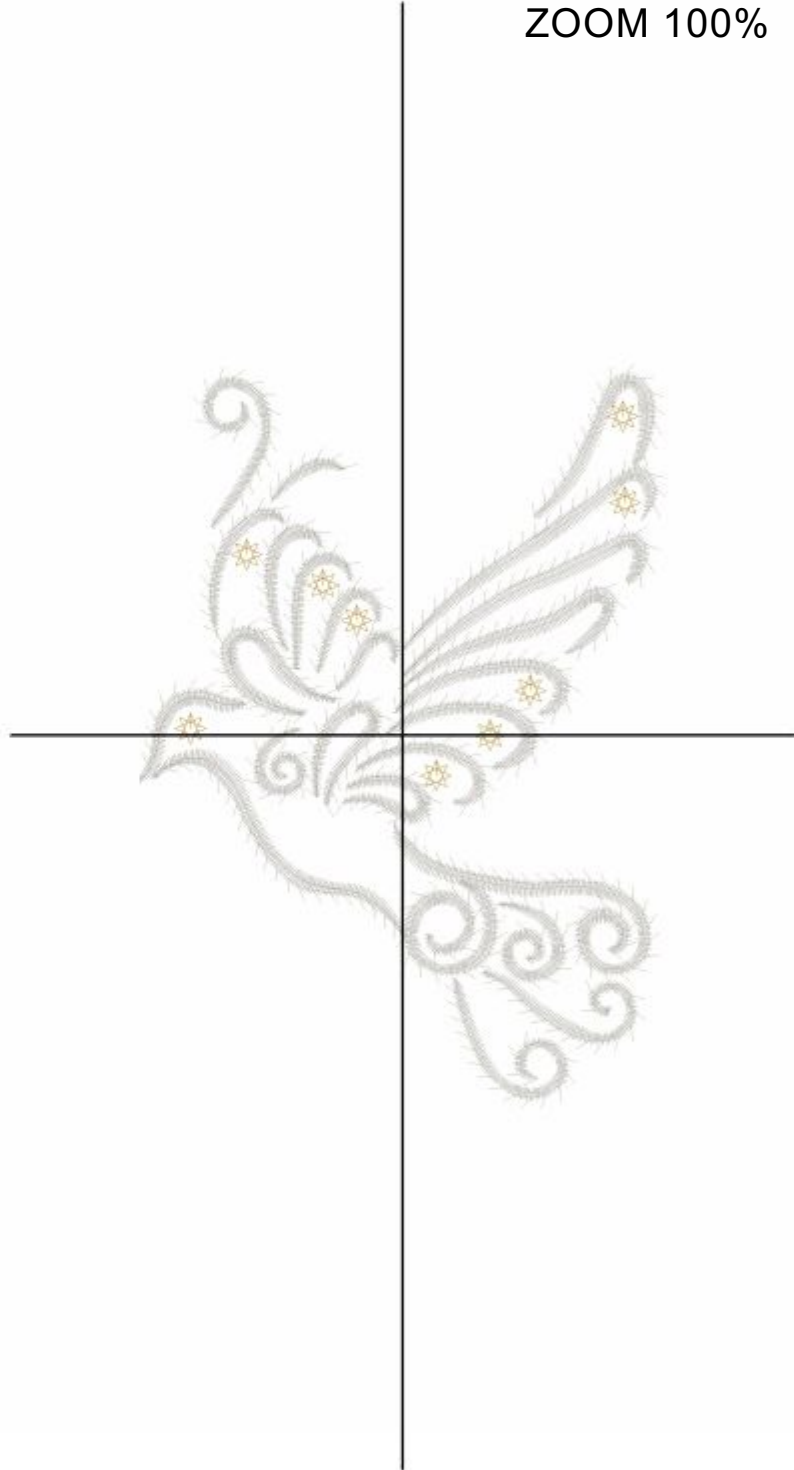

Color Sequence:

Th.1(Cloud.5783)  Th.2(TH Gold.5906) 





ATWMC0149

Print At: 2015-9-24


Design File: atwmcm0149.gen

Design Name: atwmcm0149	Customer Name:	Machine Set: Default	
Size=96.4 mm x 65.8 mm (3.80 inch x 2.59 inch) Stitch No.=6026 ChangeColor No.=1 Trim No.=27			

Design Note: Color sequence 2 represents Swarovski Crystals. See instructions document.

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	11.33
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.35

ZOOM 100%

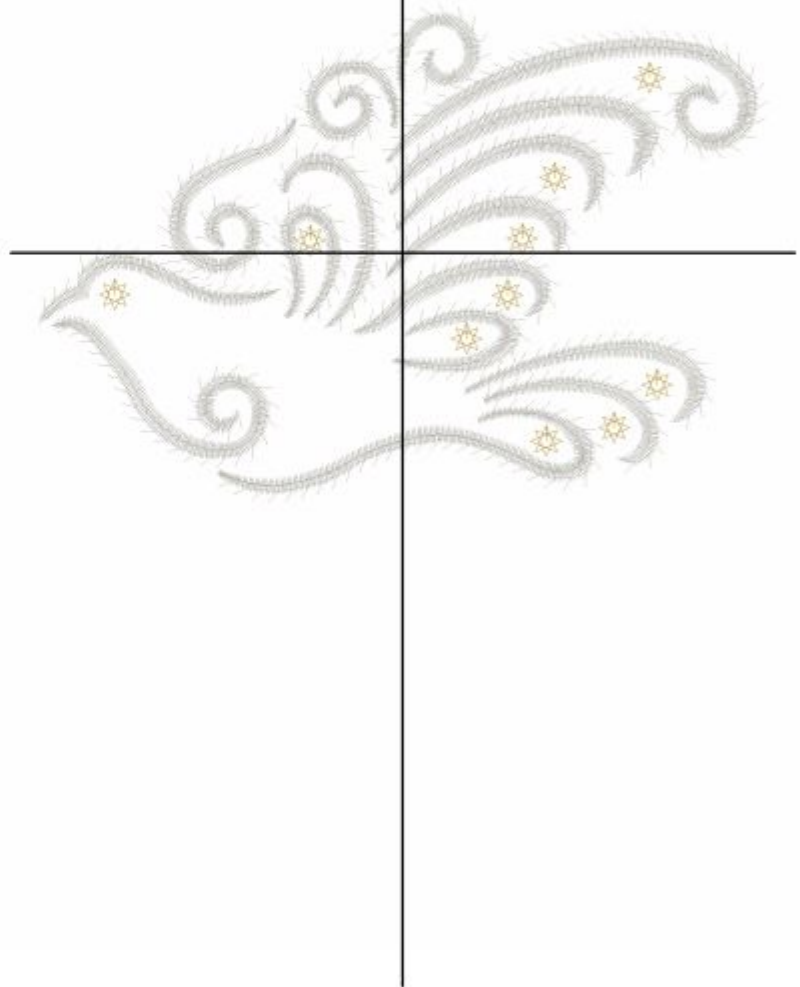



Color Sequence:

Th.1(Cloud.5783)  Th.2(TH Gold.5906) 




Design Name: atwmcm0150	Customer Name:	Machine Set: Default	
Size=95.4 mm x 98.8 mm (3.76 inch x 3.89 inch) Stitch No.=7398 ChangeColor No.=1 Trim No.=34			

Design Note: Color sequence 2 represents Swarovski Crystals. See instructions document.

No.	Thread	Length(m)
1.	 Robison Anton Super Brite Poly.Cloud.5783	15.16
2.	 Robison Anton Super Brite Poly.TH Gold.5906	0.35

ZOOM 100%

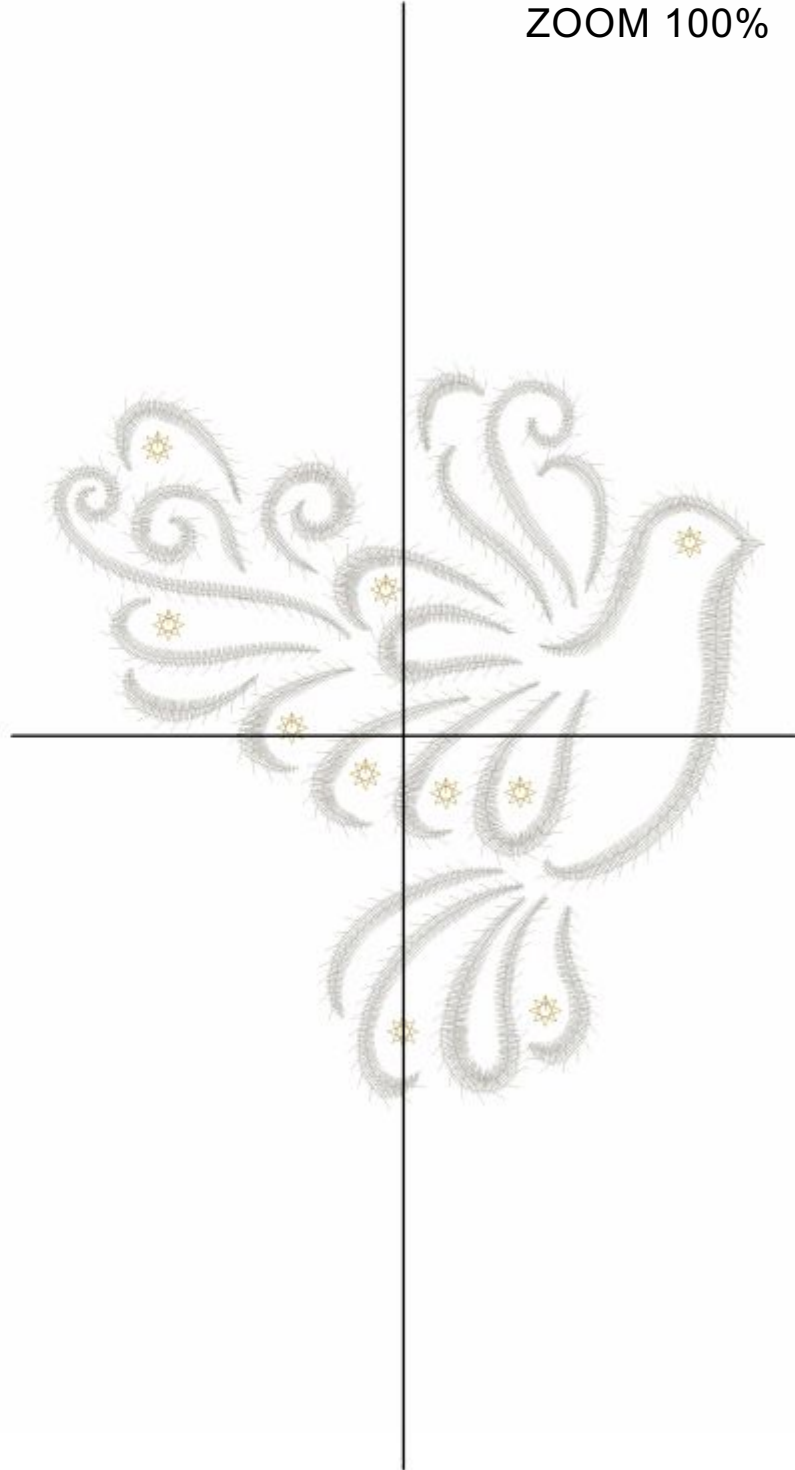

Color Sequence:

Th.1(Cloud.5783)  Th.2(TH Gold.5906) 



Doves Flight Embroidery Designs

All embroidery designs in this set were digitized in order to embellish them with Swarovski Crystals. However, you can also embroider these designs without using crystals. The following instructions describe each procedure.

Designs Embellished with Swarovski Crystals

Supplies:

1. Hot fix Swarovski Crystals (3mm/10ss)
2. Hot fix Applicator
3. Tweezers



Procedure:

1. Place the hoop on the embroidery machine and embroider Color #1.



2. Color #2 was included to force a color change stop. In this step, remove the hoop from the machine. Remove excess of stabilizer from the fabric and press. Use Color #2 as a guide to position the crystals. You will need about 120 crystals for the complete set (10 designs). You can use same color crystals or combine different colors as you like. Feel free to add more crystals as well.
3. Using the tweezers and the hot fix applicator, apply Swarovski crystals to the design. For complete information and to find a great variety of crystals, you can visit www.crystaleyecandy.com.

Here are some finished examples:



Designs without Swarovski Crystals

Procedure:

1. Place the hoop on the embroidery machine and embroider Color #1.



2. Embroider Color #2 (French Knots) using same color thread or a different one to add more interest.



3. Remove the hoop from the machine. Remove excess of stabilizer from the fabric and press.