

Axiom Lock Installation Instructions for Gekkos



Package Includes:

- One Lock
- One Lock Cover
- Two Keys
- One Curved Mounting Bar
- Two Tapered Head Bolts
- Two Socket Head Bolts
- Two Washers

Tools Required:

- One Allen Wrench



Mount the ends of the curved mounting bar onto the rim brake canti studs, using the two tapered head bolts.




Mount the lock onto the curved mounting bar, placing the washers and the socket head bolts into the middle slot on the lock. Secure it to the available holes on the mounting bar.

Axiom Lock Installation Instructions for Gekkos (cont.)



Secure the black lock cover onto the top of the lock. It will just snap into place.

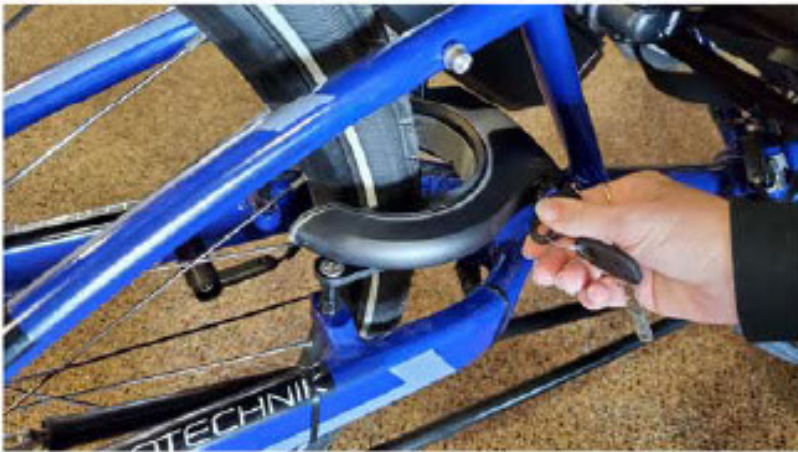

Insert the key and slide the black lever to close the lock.



The completed setup in closed position.