


Install the 3 pins at the end of the harness into the 4 way DT connectors included with your lights.

The pics below show the wires inserted into the end of the harness extensions. You just need to slide yours into the connectors in the correct location, and then snap on the Green or Orange Cap at the end depending. The pins will slide all the way in until the end of the pin is flush with the end of the other side of the connector.



This is IMPORTANT. The picture to the RIGHT is for Baja Designs lights. Notice where the clip is at the bottom. From there, you insert the black, top left, the white top right and the red, bottom right.

For Diode Dynamics (Left Picture), you install the black top left, white top right, and red bottom LEFT.

**Diode Dynamics**

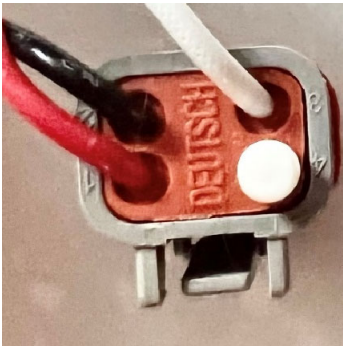

**Baja Designs**

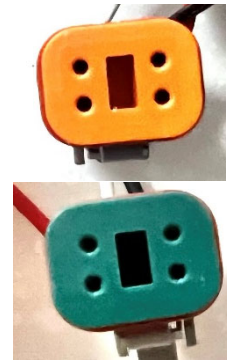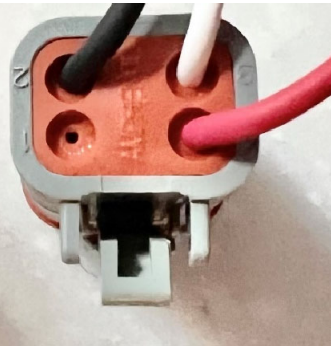


Install the 3 pins at the end of the harness into the 4 way DT connectors included with your lights.

The pics below show the wires inserted into the end of the harness extensions. You just need to slide yours into the connectors in the correct location, and then snap on the Green or Orange Cap at the end depending. The pins will slide all the way in until the end of the pin is flush with the end of the other side of the connector.

This is IMPORTANT. The picture to the RIGHT is for Baja Designs lights. Notice where the clip is at the bottom. From there, you insert the black, top left, the white top right and the red, bottom right.

For Diode Dynamics (Left Picture), you install the black top left, white top right, and red bottom LEFT.

**Diode Dynamics**

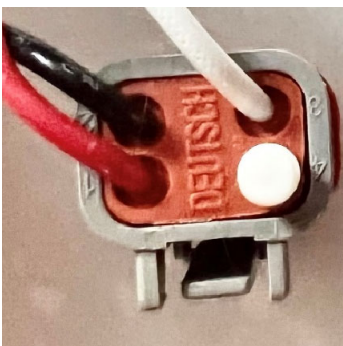

**Baja Designs**

