




BULB

TROUBLESHOOTING

DOCUMENT


Having trouble fully inserting the bulb into the headlight housing during installation?

In some instances, the bulb does not sit completely flush when it's put into the headlight housing. If you encounter this issue, you can quickly resolve it and all you'll need is a flat head screwdriver. Just follow these simple instructions:

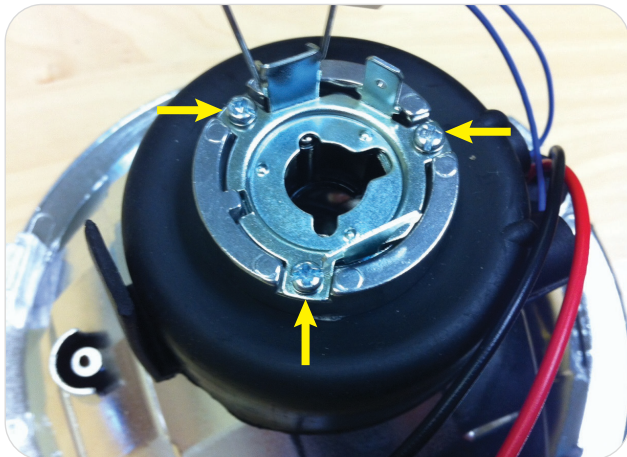

STEP 1:

After determining that the bulb will not sit flush in the headlight housing, unscrew the three screws on the back of the headlight housing.

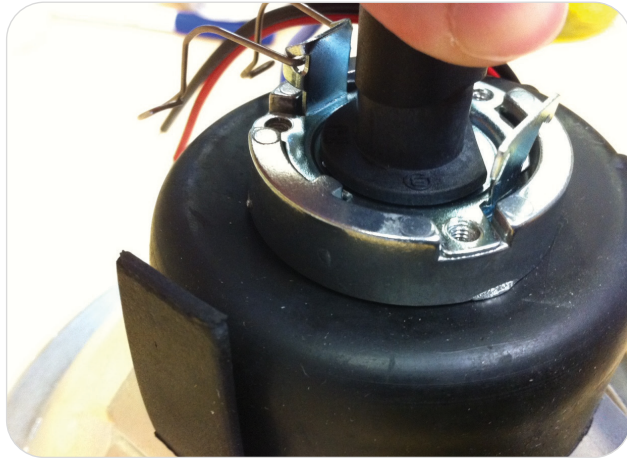

STEP 2:

With the screws removed, insert the bulb into the housing. When the two bumps at the base of the bulb enter the corresponding grooves in the headlight housing, the bulb is in place.



STEP 3:

Use the wire clamps to secure the bulb in place.

STEP 4:

With the bulb in place, screw all three screws back into the housing. Tighten two of the screws completely and do not over tighten the 3rd screw so as not to push the bulb out of place.