


Assembly Instruction: HAR Midsleeper



1		4	5		3	9		2
2		2	6		1			
3		2	7		1			
4		18	8		2			


A		M8X60mm	4	H		M8	4
B		M8X45mm	4	I		M6	1
C		M6X65mm	7	J			3
D		M6X45mm	1	K		Φ50mm	4
E		M6X35mm	4	L		Φ25mm	4
F		M6X16mm	20	M			5
G		M8	8				

STEP 1

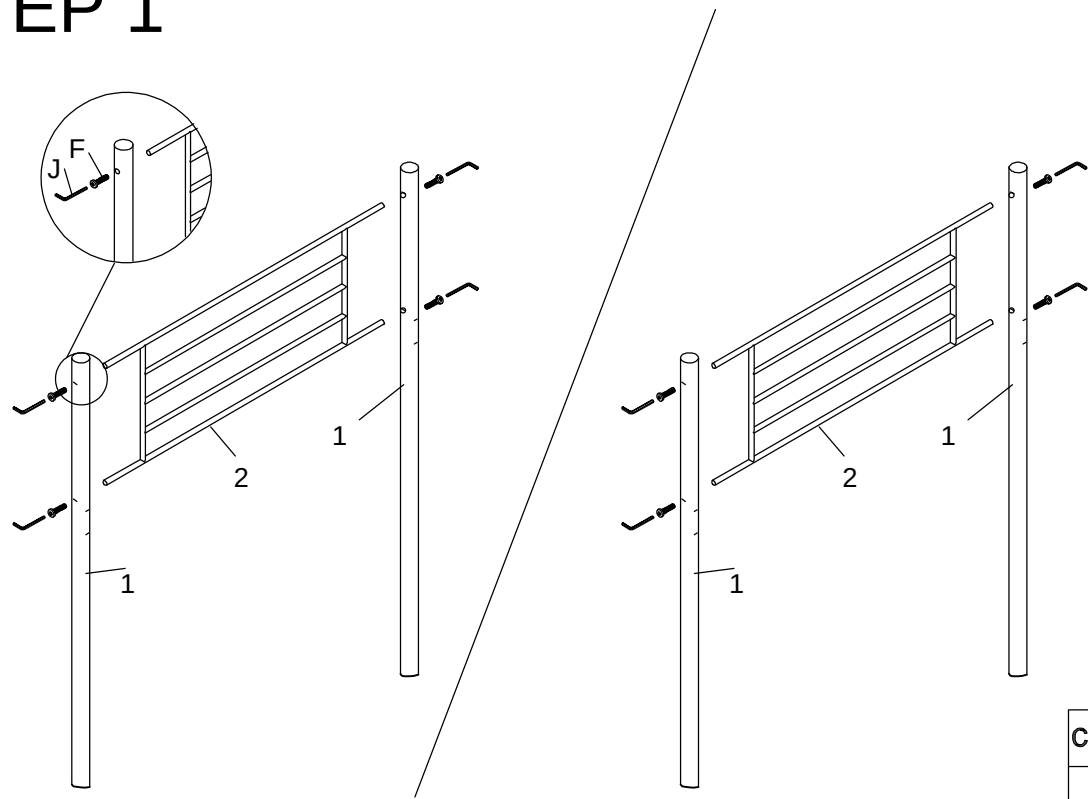


CODE	HARDWARE	QTY
F	 M6X16	8
J		1

STEP 2

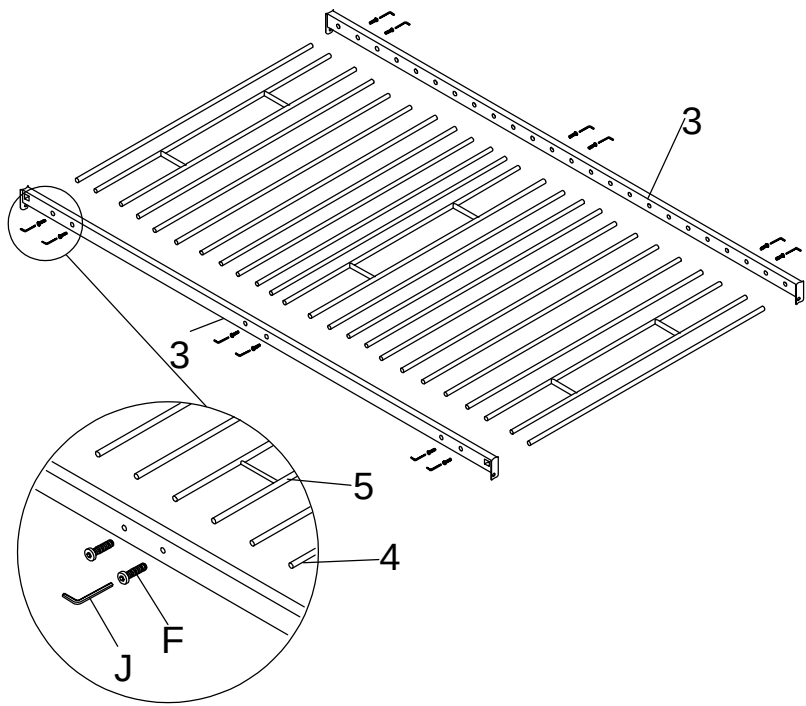


CODE	HARDWARE	QTY
F	 M6X16	12
J		1

STEP 3

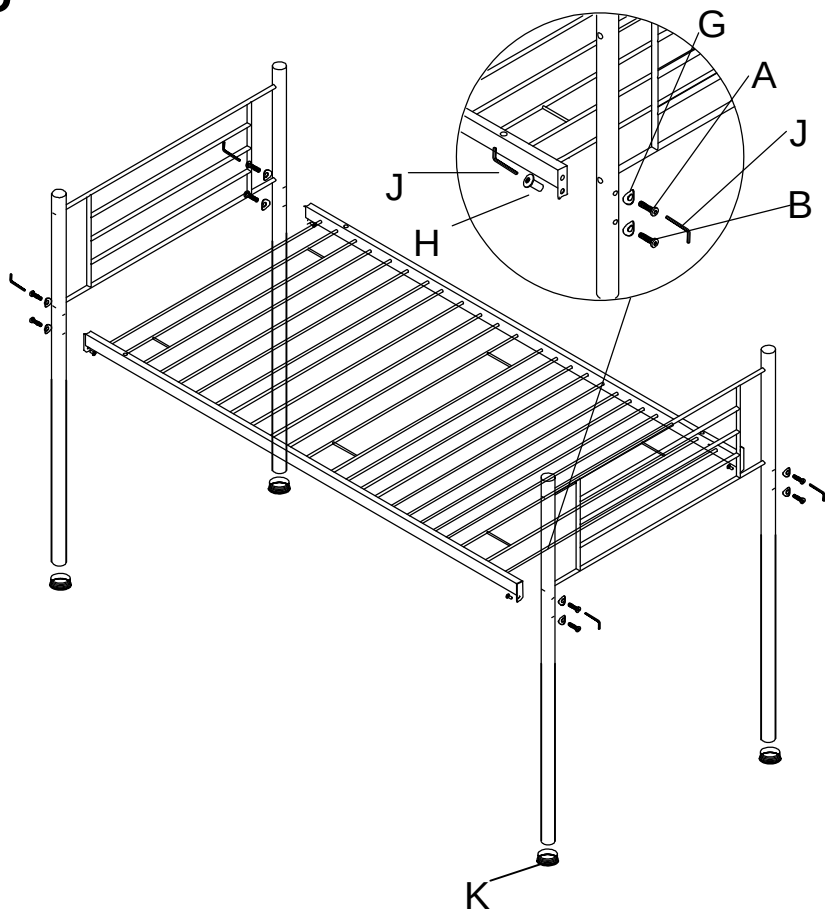

CODE	HARDWARE	QTY
A	 M8X60	4
B	 M8X45	4
G	 M8	8
H	 M8	4
J		1
K	 Φ 50mm	4

STEP 4

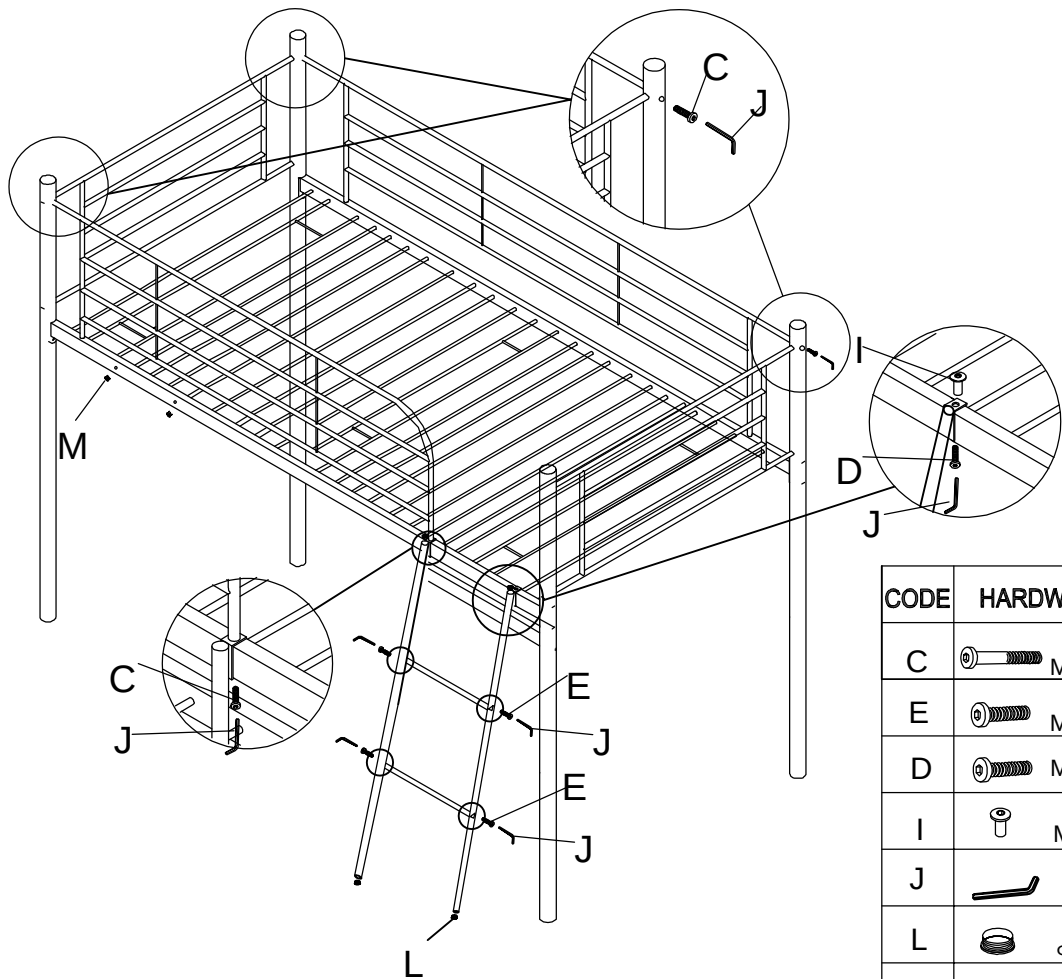

CODE	HARDWARE	QTY
C	 M6X65	7
E	 M6X35	4
D	 M6X45	1
I	 M6	1
J		2
L	 Φ 22mm	4
M		5