

ASSEMBLY INSTRUCTION


Page 1

MODEL : REI - AF CAISTER QUEEN BED - Wooden Slat - 1 Center Rail + 3 Center Legs

Before you begin, please follow Assembly Instruction carefully. Follow them step by step.


STEP 1

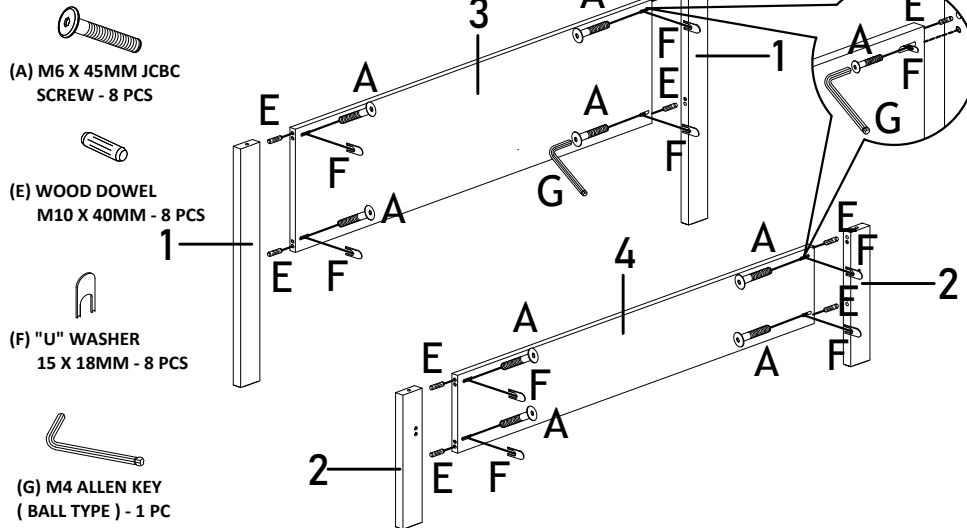" Back View "




STEP 2

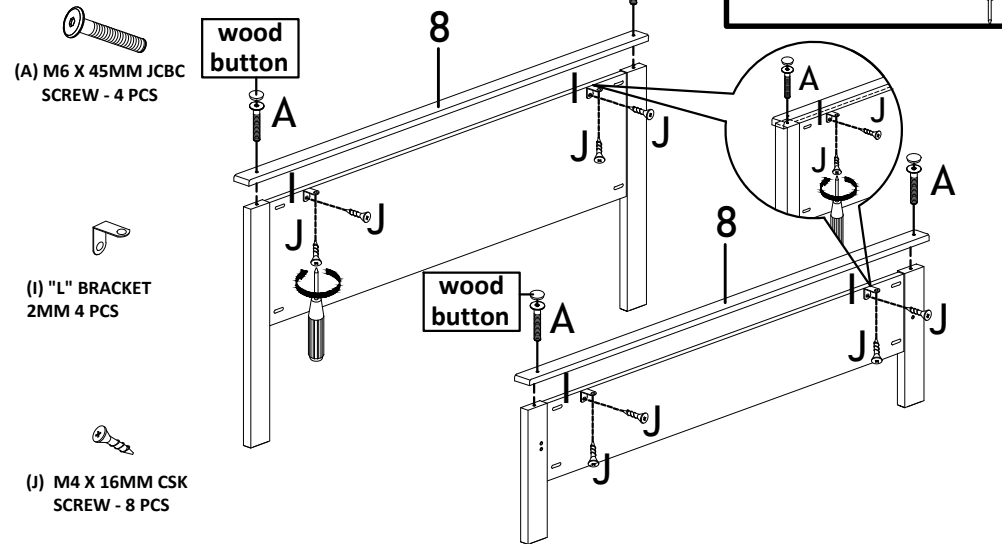
" Back View "



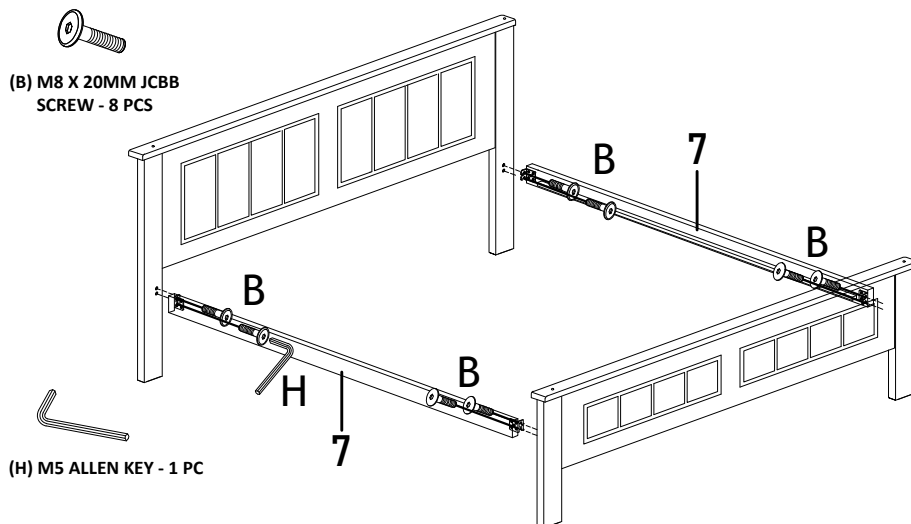STEP 3



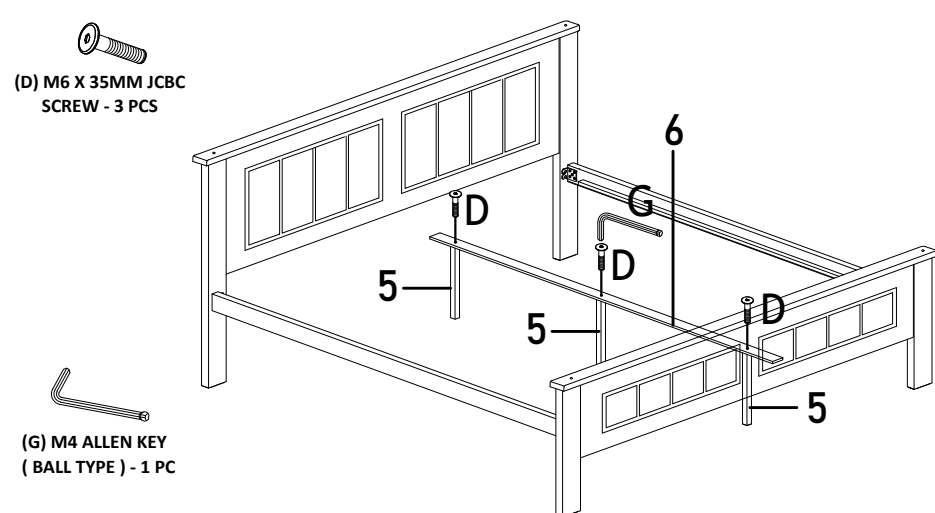STEP 4



ASSEMBLY INSTRUCTION

Page 2

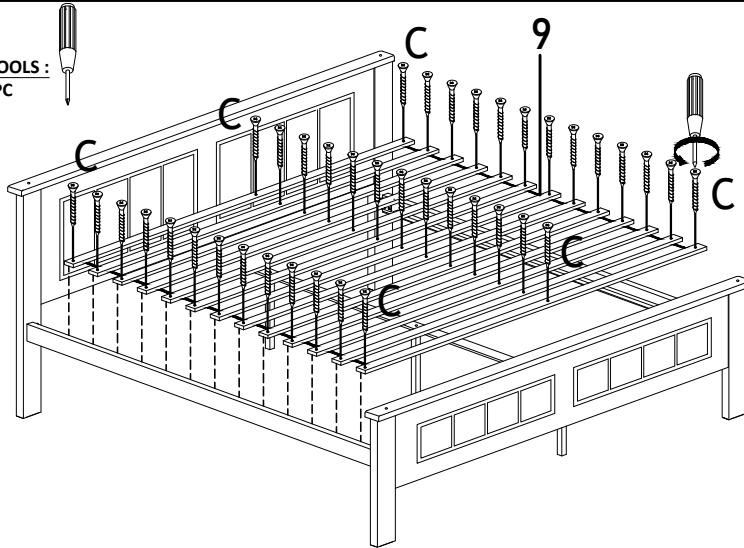
MODEL : REI - AF CAISTER QUEEN BED - Wooden Slat - 1 Center Rail + 3 Center Legs

Before you begin, please follow Assembly Instruction carefully. Follow them step by step.


STEP 5

REQUIRED ASSEMBLY TOOLS :
POZI SCREWDRIVER - 1PC

(C) M4 X 38MM CSK
SCREW - 39 PCS








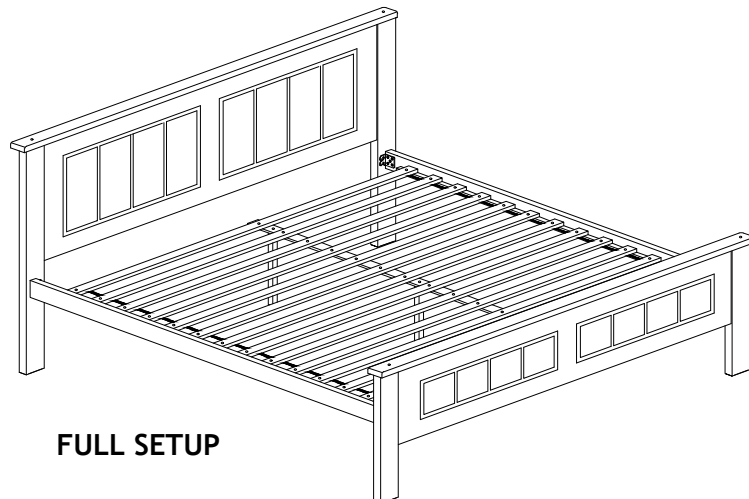REMARK : ATTACH PART 9 USING (C) SCREW AND POZI SCREWDRIVER AS SHOWN.








FULL SETUP

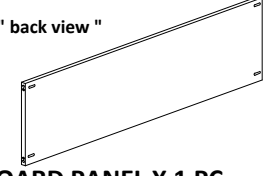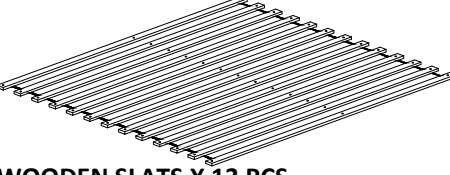PART LIST

			
1) HEAD POST X 2 PCS	2) FOOT POST X 2 PCS	3) CENTER LEGS X 3 PCS	6) CENTER RAIL X 1 PC
			
3) HEADBOARD PANEL X 1 PC	7) WOODEN SIDE RAIL X 2 PCS	8) TOP RAIL X 2 PCS	
			
4) FOOTBOARD PANEL X 1 PC	9) WOODEN SLATS X 13 PCS		

HARDWARE LIST

			
(A) M6 X 45MM JCBC SCREW - 12 PCS	(B) M8 X 20MM JCBB SCREW - 8 PCS	(G) M4 ALLEN KEY (ball type) X 1 PC	
			
(C) M4 X 38MM CSK SCREW - 39 PCS	(D) M6 X 35MM SCREW - 3 PCS	(H) M5 ALLEN KEY X 1 PC	
			
(E) WOOD DOWEL M10 X 40MM - 8 PCS	(F) "U" WASHER 15 X 18MM - 8 PCS	(I) "L" BRACKET 2MM - 4 PCS	(J) M4 X 16MM CSK SCREW - 8 PCS