
Wooden Bunk Bed Instructions

Contents

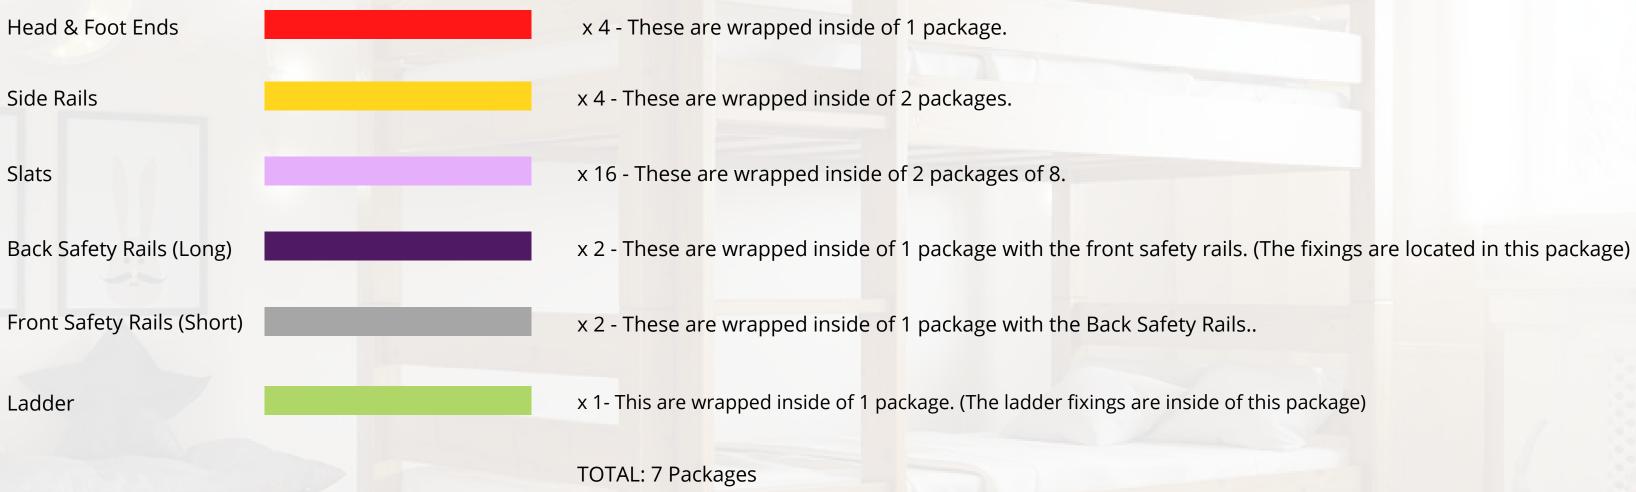

Fixings

M8 Threaded Bolts - x 14 (Bolt x1 into each corner of the bases and 1 into each safety rail into the corner posts).

M8 Nuts - x 14 - To receive the M8 Threaded bolts into the corner posts

Half Moon - x 14 - To secure the M8 Threaded bolts into the corners posts

M10 Wooden Dowels - x 32 - To secure the rails into the corner posts (x2 in each corner)

M4 x 40mm Wood Screws - x 40 - (x1 on each side of the slats)

Ladder Screws - x 12 (See instructions for location).

M8 Spanner

