

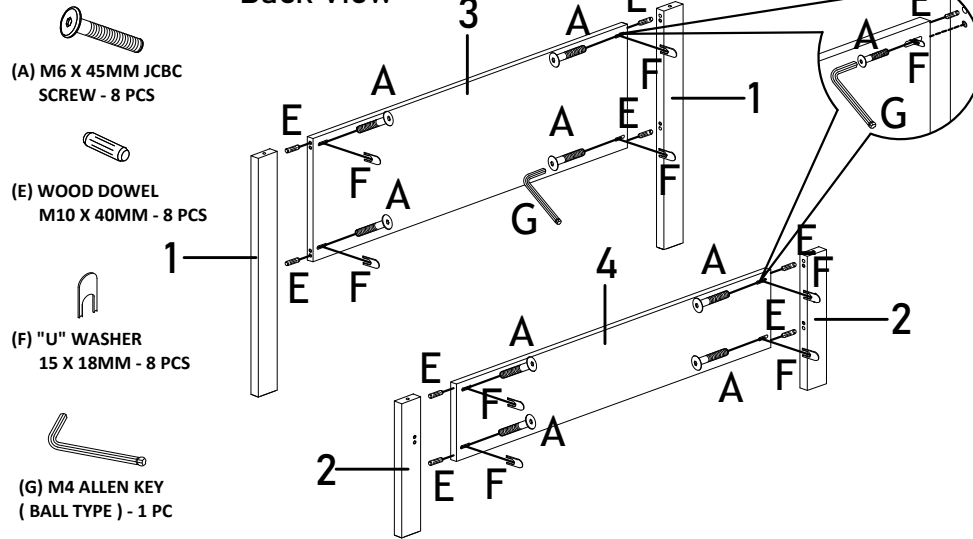
ASSEMBLY INSTRUCTION

MODEL : REI - AF CAISTER DOUBLE BED - Wooden Slat

Before you begin, please follow Assembly Instruction carefully. Follow them step by step.


STEP 1

" Back View "




STEP 2

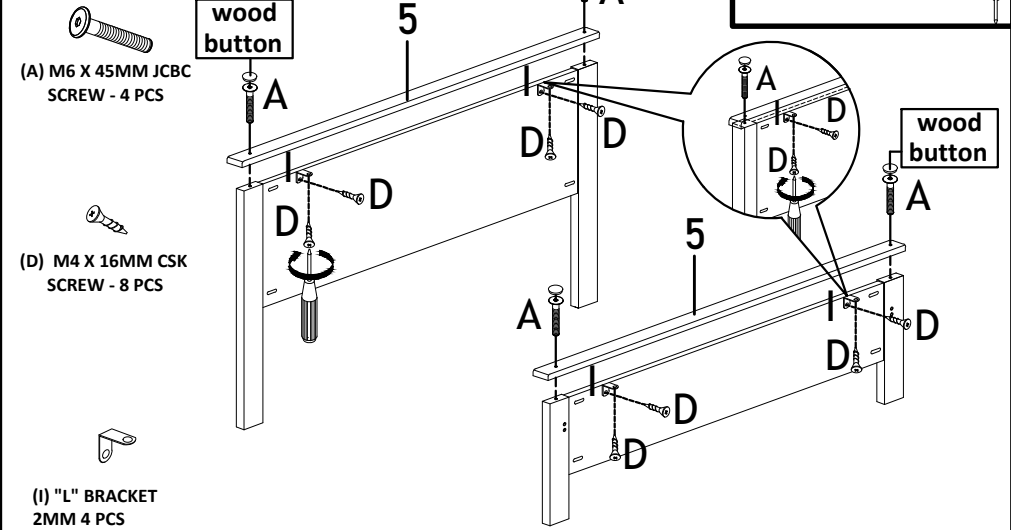
" Back View "



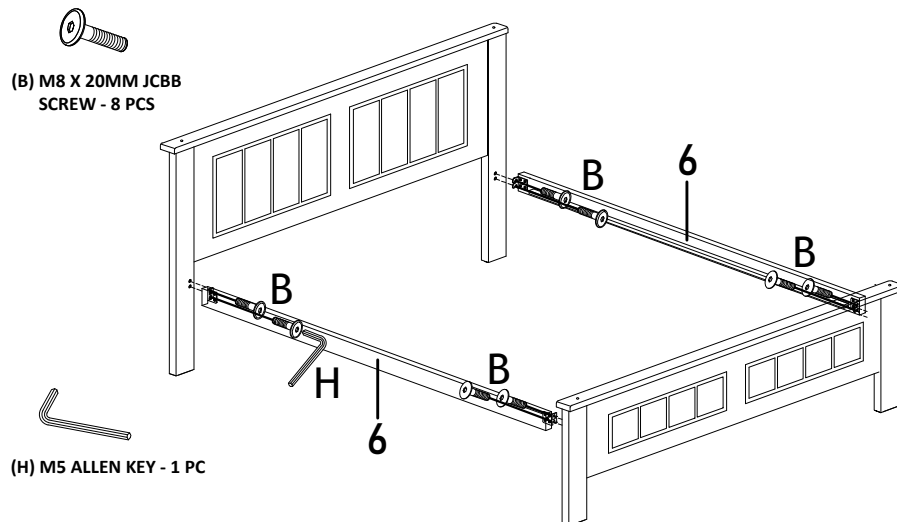STEP 3



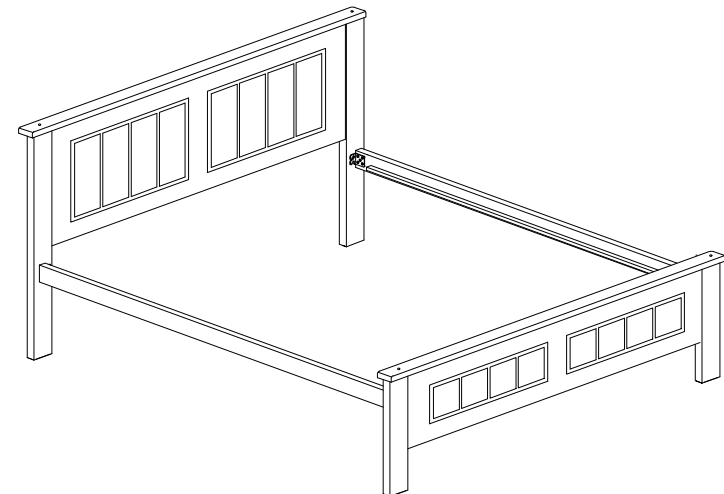STEP 4



ASSEMBLY INSTRUCTION

Page 2

MODEL : REI - AF CAISTER DOUBLE BED - Wooden Slat

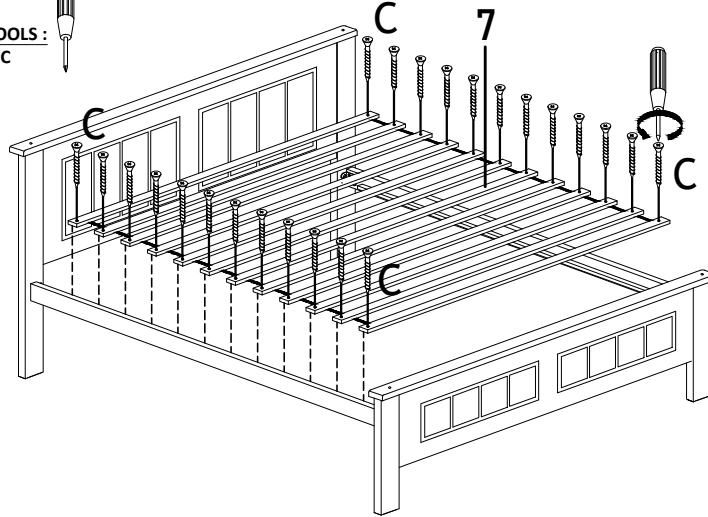
Before you begin, please follow Assembly Instruction carefully. Follow them step by step.

STEP 5


REQUIRED ASSEMBLY TOOLS :
POZI SCREWDRIVER - 1PC



(C) M4 X 38MM CSK
SCREW - 24 PCS








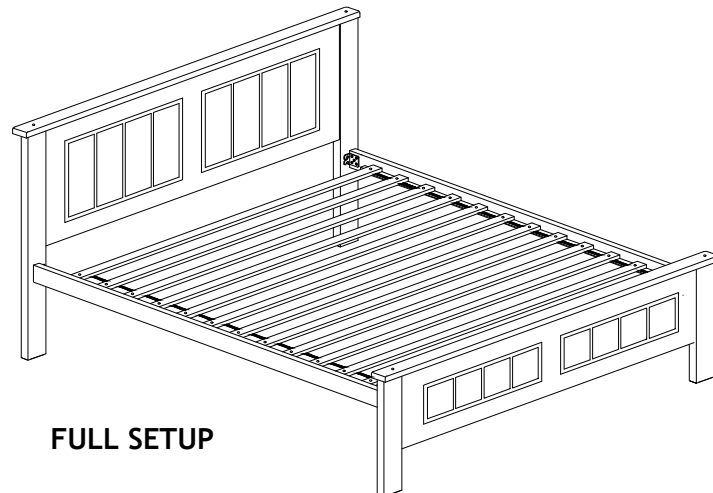REMARK : ATTACH PART 7 USING (C) SCREW AND POZI SCREWDRIVER AS SHOWN.






FULL SETUP

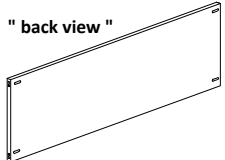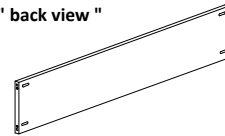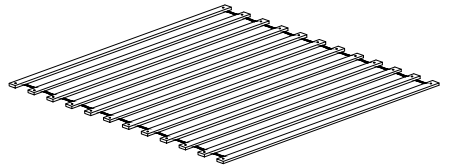PART LIST

		
1) HEAD POST X 2 PCS	2) FOOT POST X 2 PCS	5) TOP RAIL X 2 PCS
		
3) HEADBOARD PANEL X 1 PC	6) WOODEN SIDE RAIL X 2 PCS	
		
4) FOOTBOARD PANEL X 1 PC	7) WOODEN SLATS X 12 PCS	

HARDWARE LIST

		
(A) M6 X 45MM JCBC SCREW - 12 PCS	(B) M8 X 20MM JCBB SCREW - 8 PCS	(G) M4 ALLEN KEY (ball type) X 1 PC
		
(C) M4 X 38MM CSK SCREW - 24 PCS	(D) M4 X 16MM CSK SCREW - 8 PCS	(H) M5 ALLEN KEY X 1 PC
		
(E) WOOD DOWEL M10 X 40MM - 8 PCS	(F) "U" WASHER 15 X 18MM - 8 PCS	(I) "L" BRACKET 2MM - 4 PCS