




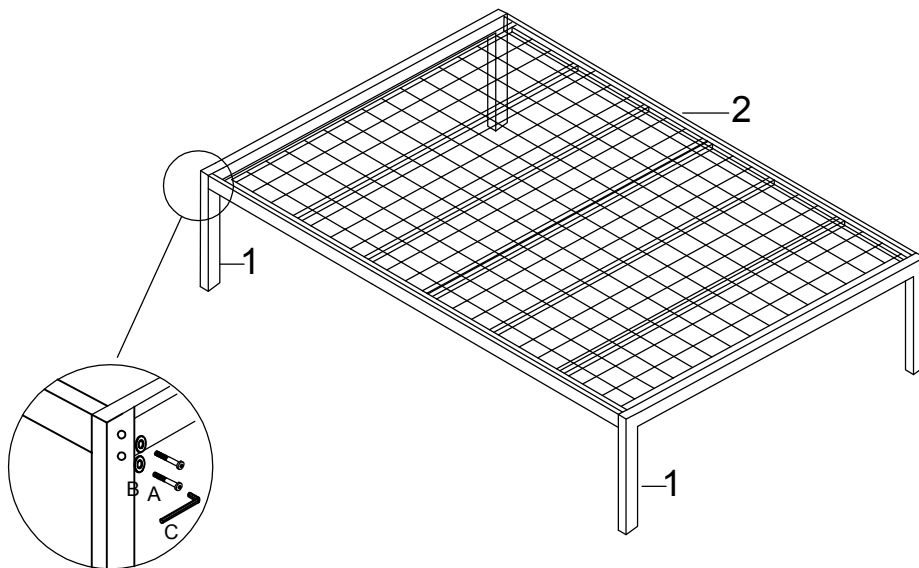


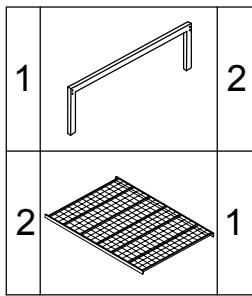


Assembly Instructions: Thornham Bed (3'0)

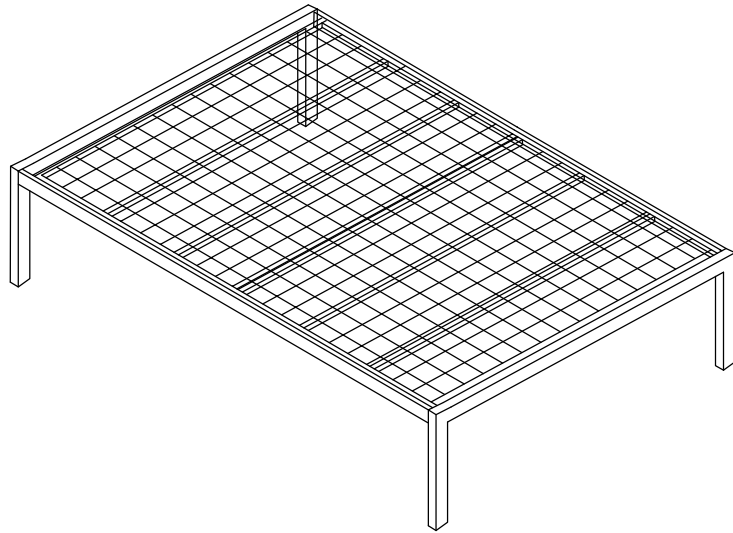

A		M8X40mm	8
B		M8	8
C			1



CODE	HARDWARE	QTY
A	 M8X40	8
B	 M8	8
C		1