



INSTALLMENT INSTRUCTIONS

2012-2015 Toyota Tacoma Mesh

Please note read entire instruction prior to installation.

1. Lay down a towel on a flat surface. Make sure you have a clean area to work in to avoid scratching the grill/mesh.



2. Carefully set your original grill face down on the towel and unscrew the screws shown depicted below.



- Using a flathead screwdriver to open the clips and separate the outer frame of the grill from the inner shroud.



- Locate the tabs on the inside surface of the grill frame, and remove them using nippers



5. Smooth the sharp surfaces from the clipped tabs with a Dremel or sanding tool. Set grill frame aside.



6. On the other piece from your original grill (inner shroud), use a Dremel or hand saw to cut the middle from the outer portion.






7. Clip off the tabs at the top of the grill.



8. Smooth the entire rough inside edge with a Dremel or sanding tool. Set piece aside and clean away any debris from the trimming process.



9. Locate your new Bullet Proof Fabricating mesh. You may need to trim off the outer notches around the edges of the mesh if they interfere with where the screws mount.

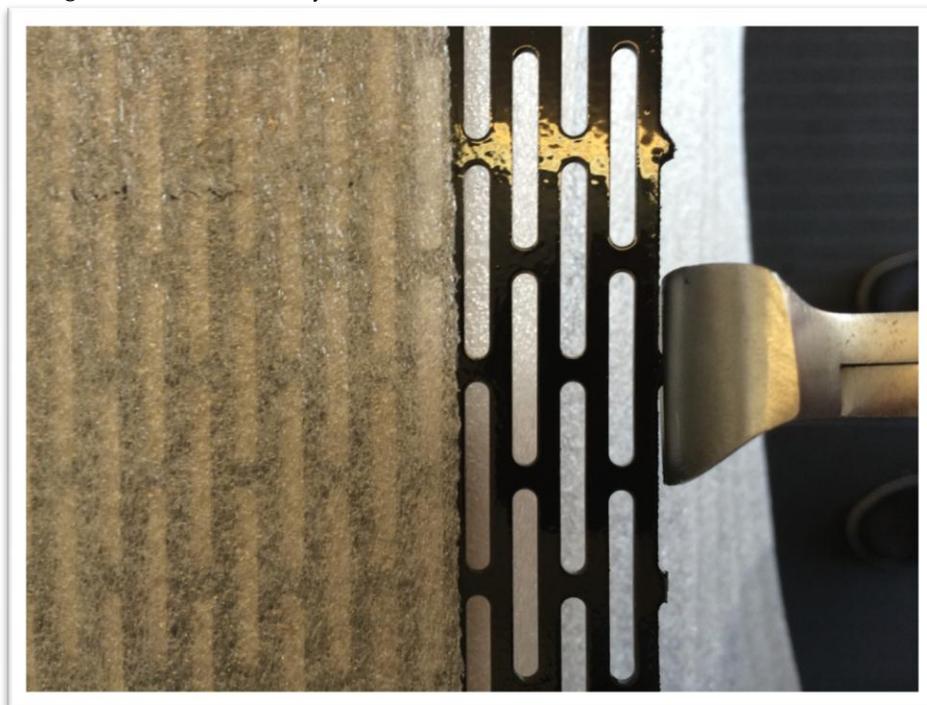


10. Carefully put the mesh into the outer grill frame.



11. Place the inner shroud overtop the mesh that is mounted on the outer grill frame, lining it up up to the clips and screw placements. Now make sure the mesh is level.



12. Bend the high points of the mesh on either side down, so that you will be able to clip the piece together with ease.

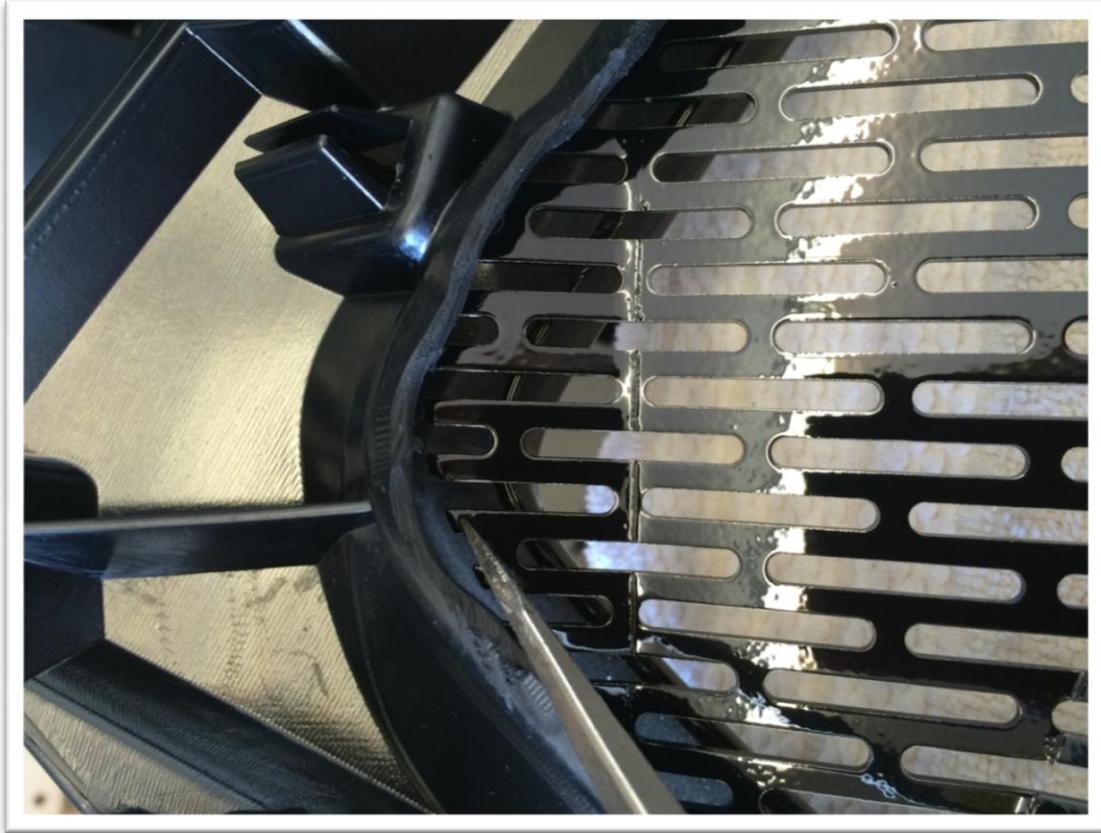

13. Screw together the inner shroud to the outer grill frame with the mesh in between. Next, clip the piece together. For best assistance, use pliers for added force.



14. Mesh installment is now complete. Your grill is now ready to be re-installed on your truck. Enjoy!
(If you ordered lettering, they can be applied with 3M double sided tape)

