

Installation Instructions for BPF FJ Cruiser Grill Mesh

**BULLET
PROOF**
fabricating

**Be sure to read all install instructions before starting.*


Tools Required:

Philips Screwdriver
Flat-headed Screwdriver
Nippers
Dremel or Rotary Tool
Dremel Multi Max
Zap Straps

- 1) Using a Philips Screwdriver remove all the Philips screws holding the inner and outer grill frame.



- 2) Next, using a Flat-headed screwdriver separate the two grill pieces by pushing back all the tabs, working you way around the grill.

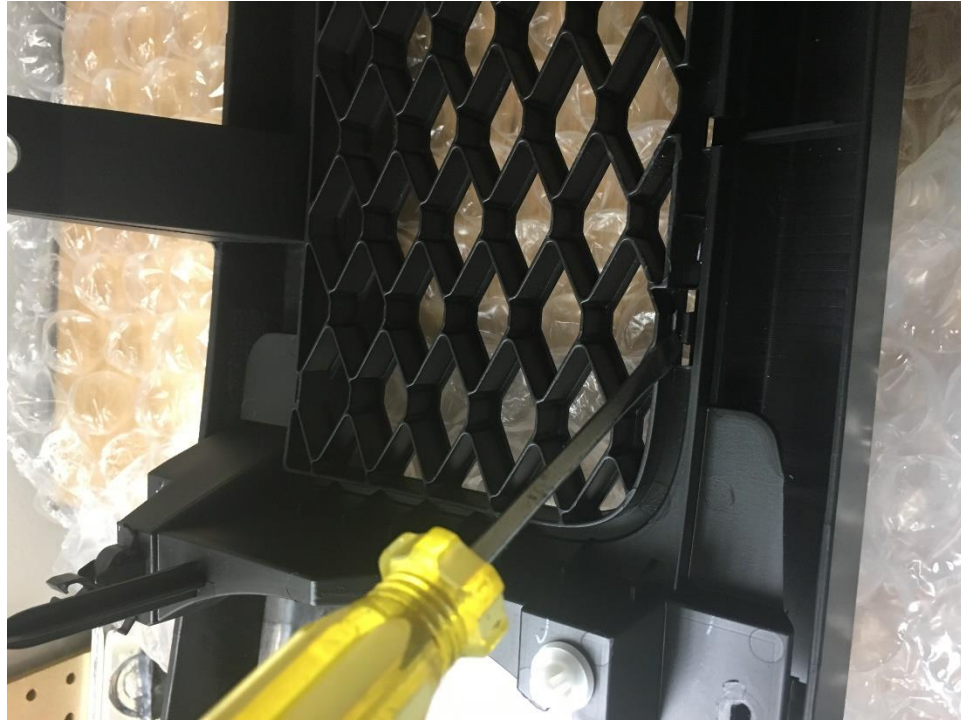

- 3) Use a set of nippers to trim off all the tabs. Be careful not to cut off too much.



4} Using a Dremel or a rotary tool, sand down the tab enough to make it flush with the rest of the grill. You want to take off just enough so the mesh will sit flat against it.



5) Set the mesh on the grill. It should sit snugly between the grill mounts.






6) You can now zap strap the mesh in place at all mounting points/supports.



- 7) You will now need to cut the inner grill like then pictures below. Be sure to test fit frequently to insure not to cut to much.



- 8) Once trimmed you can use nippers to trim the tabs on the inner grill, so that it will sit flat against the mesh. Once done you can put the two trimmed grill pieces back on using the Philips screws (removed earlier).

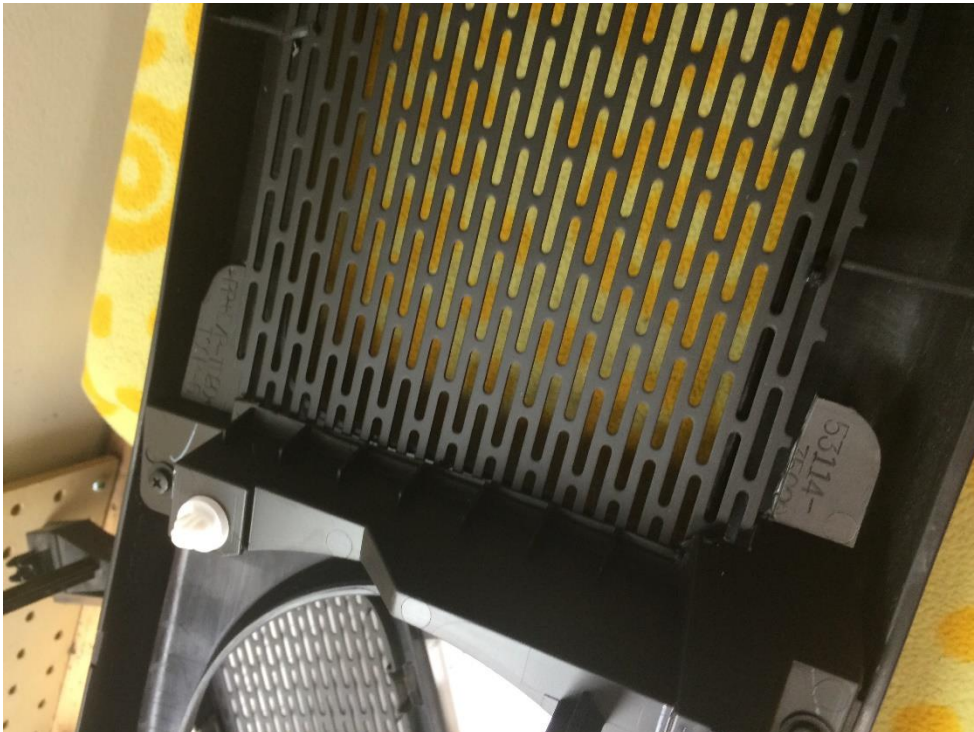

The Mesh is now installed. If you purchased lettering now is the time to install it using 3M double-sided tape. Enjoy your new BPF Grill.



Questions?

Please e-mail us at bpfabricating@gmail.com

