


1




Required Tools; 325 Zero Side Mount, 330 Alignment Pins,
913 Pilot Drill 5MM Center Point Drill & Stop

2

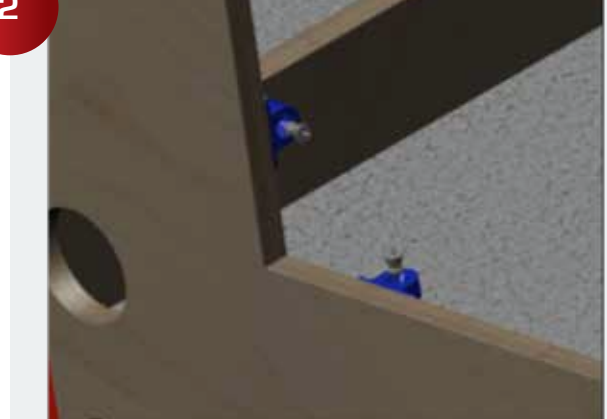


The 325 Zero Side Mounts can be used to install the removable booth seating. Install the Zero Side Mounts flush with the intersecting panel edge.

3

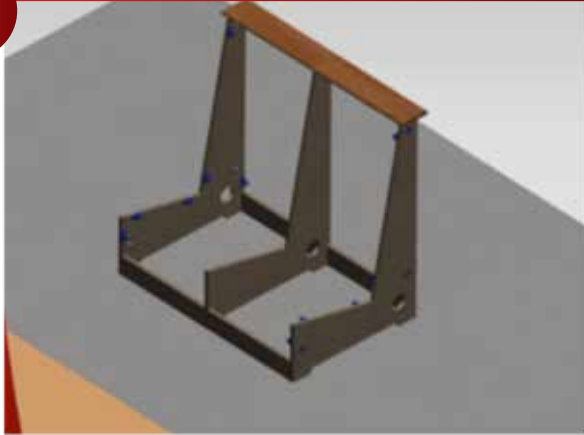


Install the 330 Zero Alignment Pins for marking
the 334 Mounting Screw locations.

4

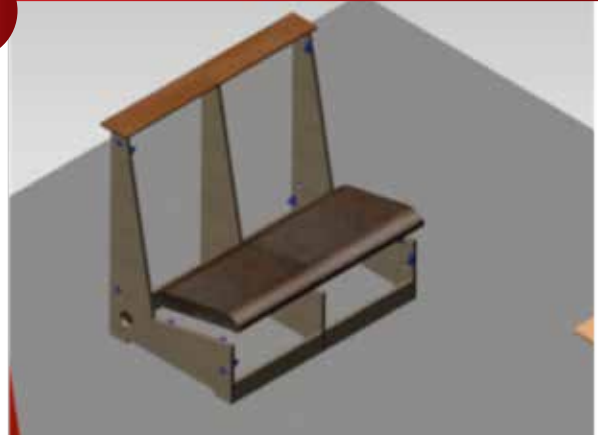

Firmly push the panels into place to mark the
334 Mounting Screw locations. Install the mounting
screws using a 913 Brad Point Drill Bit, 5mm.

5

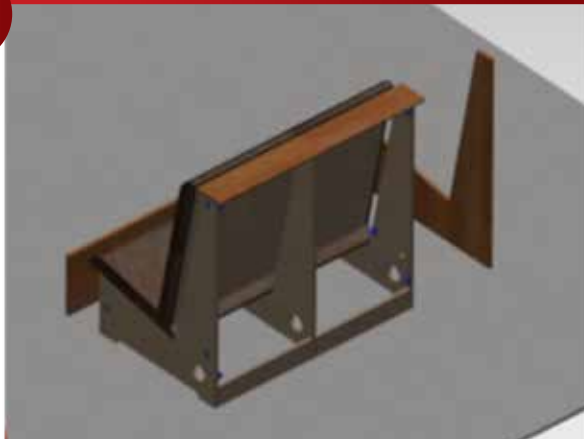

Other components can also be installed
using the 325 Zero Side Mount.

6



The upholstery snaps into place and is removable with
about 25 pounds of force, a small pry bar helps.