




1




Required Tools.

2

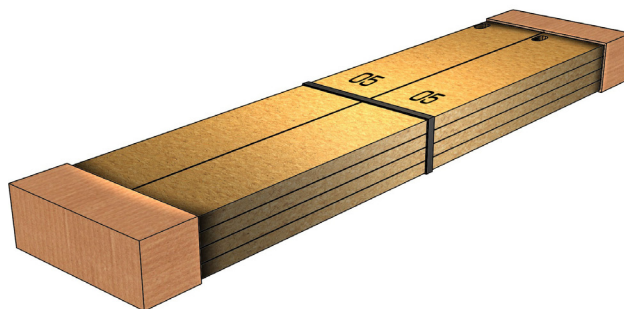


325 Zero Side Mount can be used with a 450 J Rail to build a flat packed ADA Unit.

3

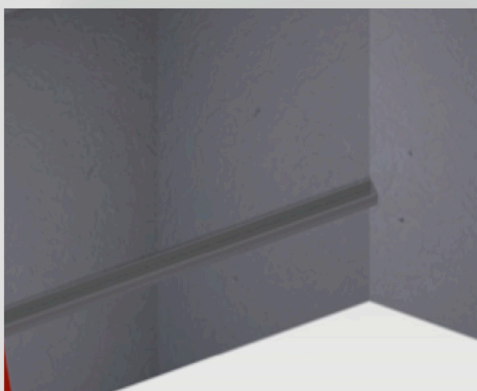


Determine the high point of the floor and mark the top and bottom of the J Rail locations.

4

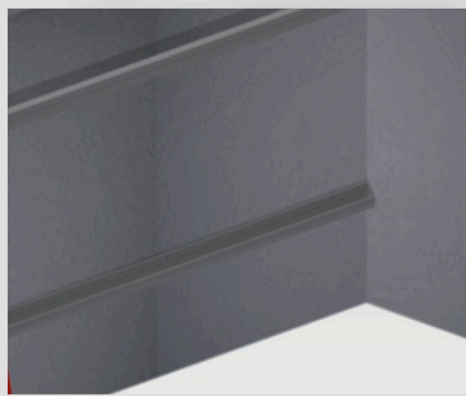

Install both 450 J rails with heavy duty self-tapping screws being sure to hit the steel studs.

5

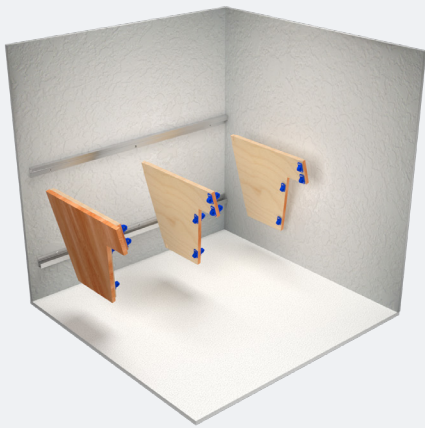

Lock each gusset plate into position and secure each gusset plates with angle brackets.


6



Install the 452 "L" Brackets onto gusset plates.


450 J RAIL & 325 ZERO SIDE MOUNT, ADA UNIT, INSTALLATION GUIDE

7

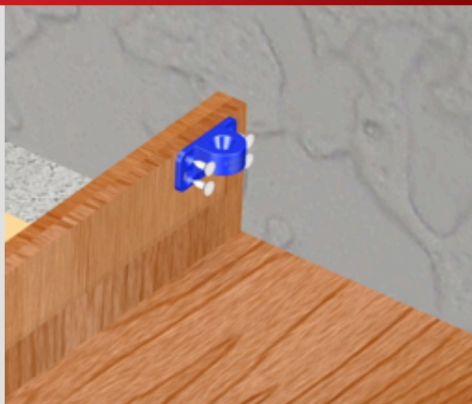

Install 325 Side Mounts to interior gussets.

8

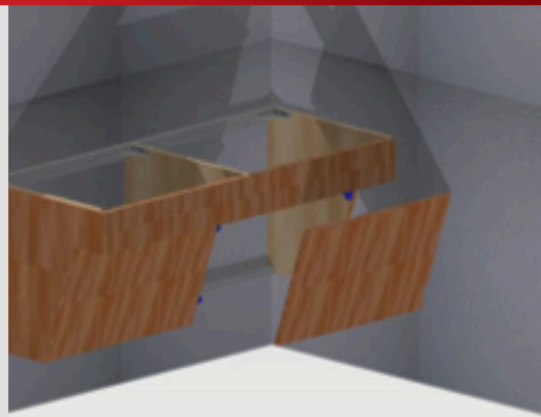

Install 334 Mounting Screw on panels.
(**Tip:** The 330 Zero Alignment Pin is available for quick and accurate marking for the 334 Mounting Screws) Press panel into place firmly.

9



Completed ADA unit can be installed in about 30 minutes.