



Star Traditional Panel Clip Installation Guide




Required Tools

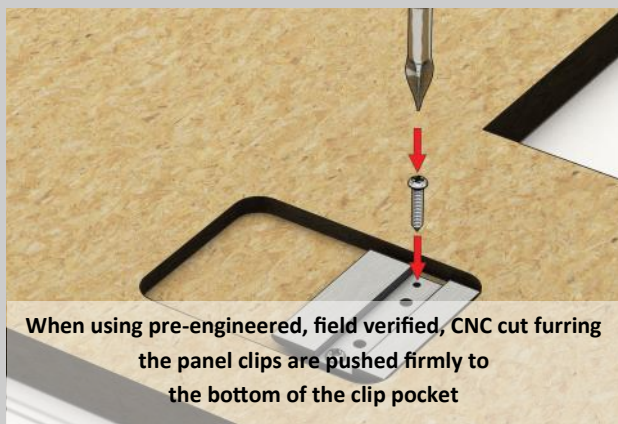

When using pre-engineered, field verified, CNC cut furring the panel clips are pushed firmly to the bottom of the clip pocket

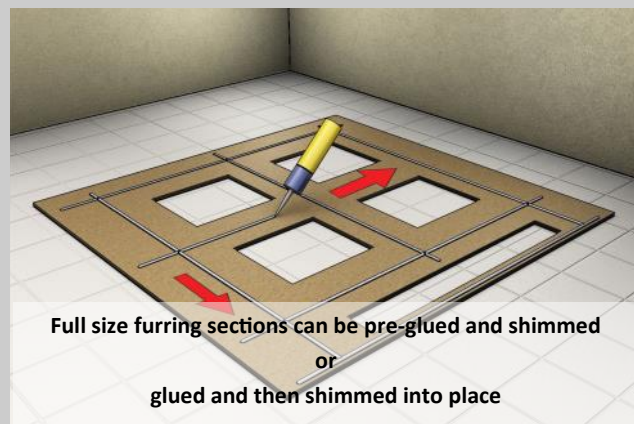


Full size furring sections can be pre-glued and shimmed or glued and then shimmed into place

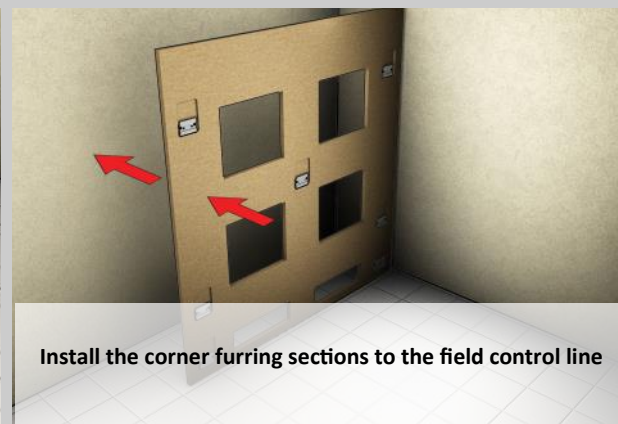


Install the corner furring sections to the field control line




Install furring sections level and square

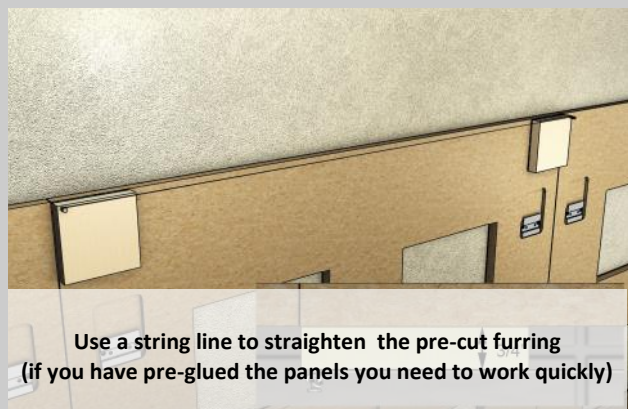

Use a string line to straighten the pre-cut furring (if you have pre-glued the panels you need to work quickly)

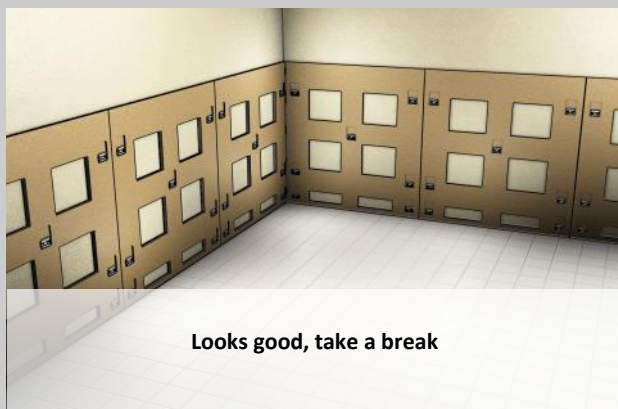


Looks good, take a break

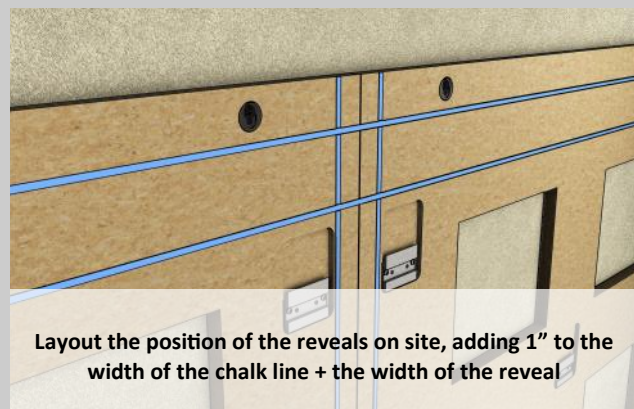


Layout the position of the reveals on site, adding 1" to the width of the chalk line + the width of the reveal




Use contact adhesive to install 3/62" thick pre-cut reveal strips (careful to leave your layout lines showing)

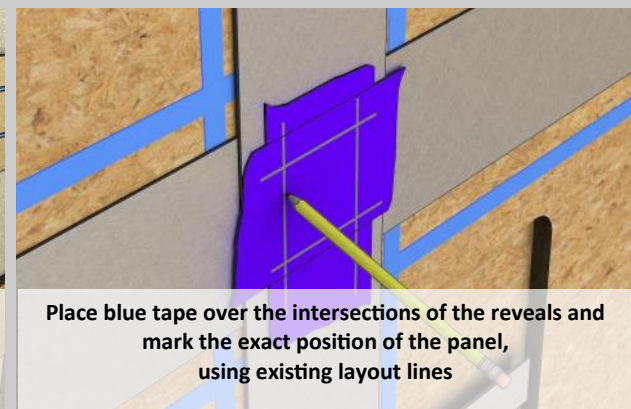


Place blue tape over the intersections of the reveals and mark the exact position of the panel, using existing layout lines

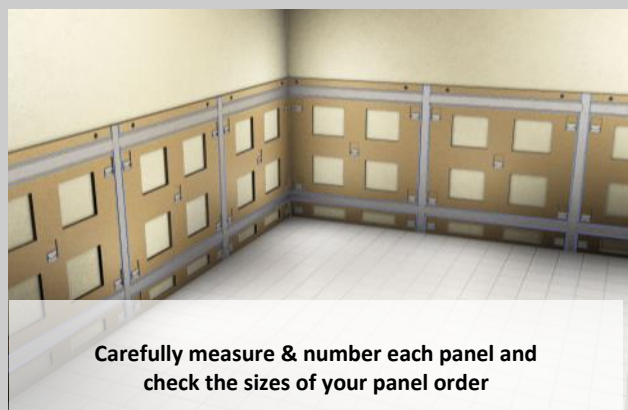


Carefully measure & number each panel and check the sizes of your panel order

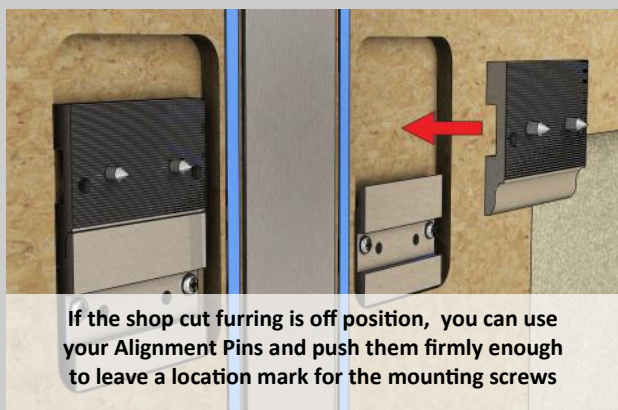

If the shop cut furring is off position, you can use your Alignment Pins and push them firmly enough to leave a location mark for the mounting screws

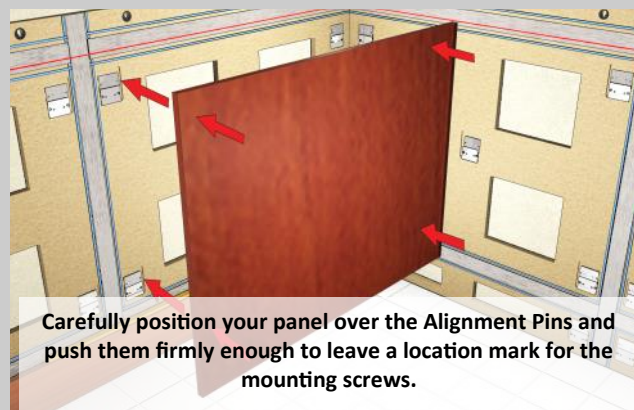

Carefully position your panel over the Alignment Pins and push them firmly enough to leave a location mark for the mounting screws.

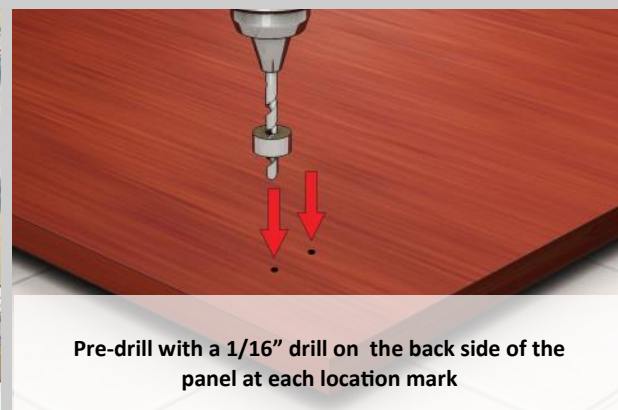


Pre-drill with a 1/16" drill on the back side of the panel at each location mark



Insert supplied screws



Lift the panel into place about 1/2" above marks, push in and down firmly to lock the panels into their final position

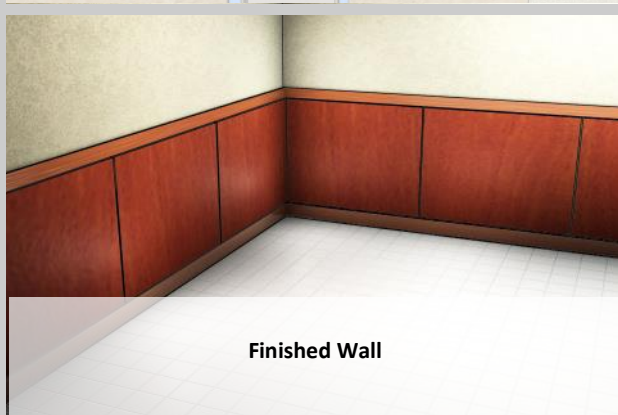

Finished Wall

1700 Syrup Mill Road
Blythewood, SC 29016
803.250.9608

Marketing@starhanger.com