

Star Ceiling Panel Clip Installation Guide: Showing Wood Ceiling Panels Mounted Directly to Furring Wood Splines.




Required Tools



Select your support system and sizes. The Ceiling Clip works well with a variety of sizes.




Securely install the wood ceiling furring. Lap over joints in the grid with full-length furring strips.

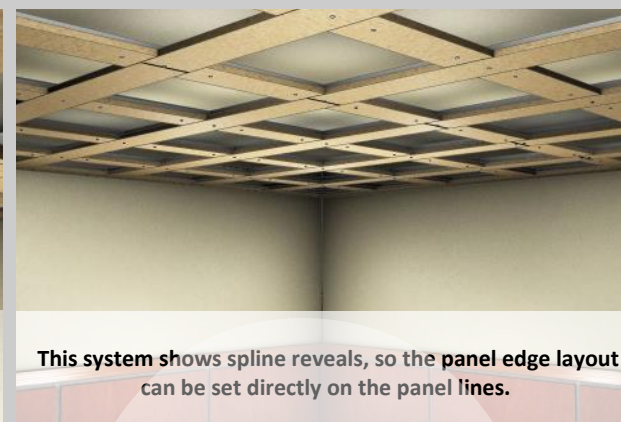


This system shows spline reveals, so the panel edge layout can be set directly on the panel lines.



Use gauge blocks to install the hanger a specific distance from each panel's corner.

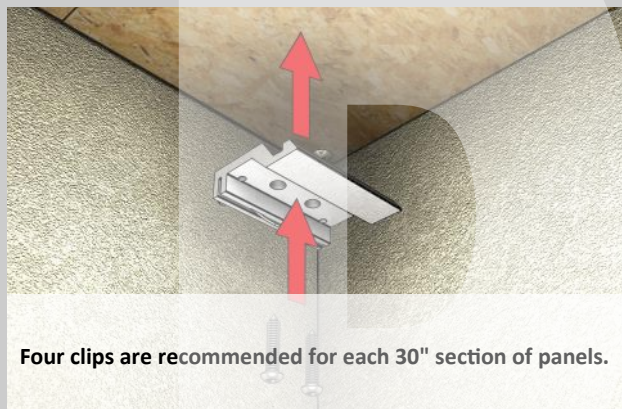


Four clips are recommended for each 30" section of panels.

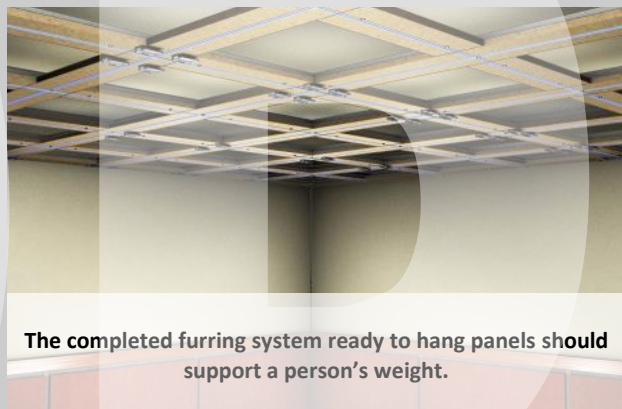


The completed furring system ready to hang panels should support a person's weight.



Pre-drill the back of the panel at each location mark and insert two Pan Head 3/4" # 8 Wood Screws.

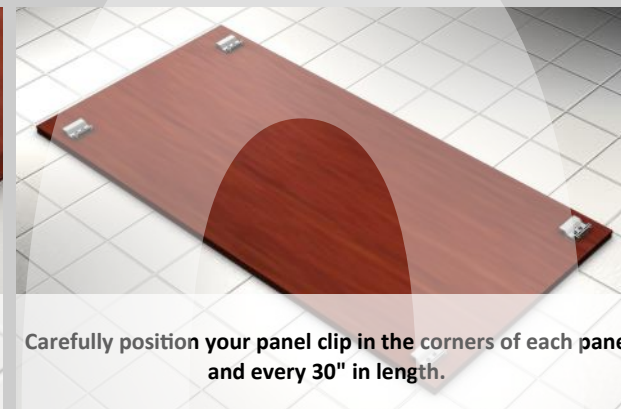


Carefully position your panel clip in the corners of each panel and every 30" in length.

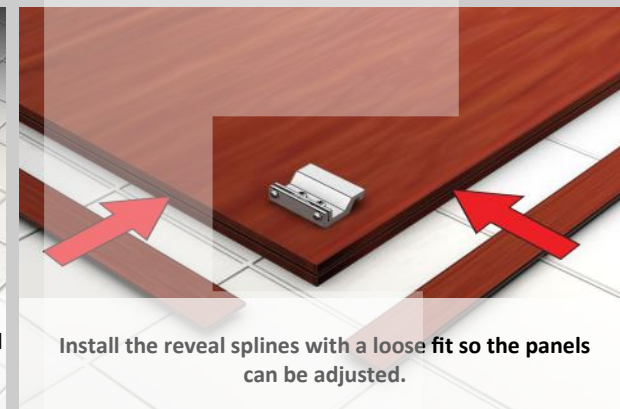


Install the reveal splines with a loose fit so the panels can be adjusted.



Lift, slide and drop 1/8" to lock the panel into position, make sure all clips drop into place.

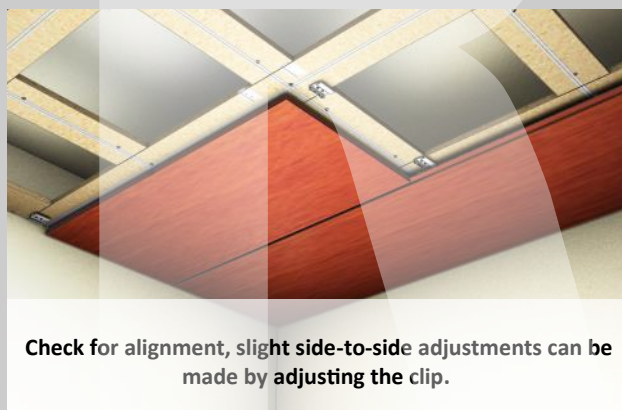

Check for alignment, slight side-to-side adjustments can be made by adjusting the clip.

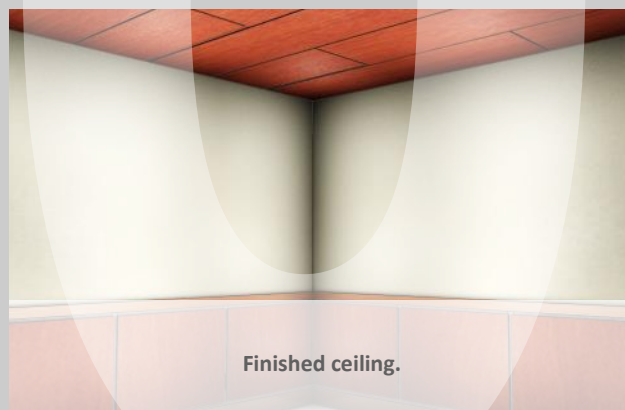

Finished ceiling.

1700 Syrup Mill Road
Blythewood, SC 29016
803.250.9608

Marketing@starhanger.com