




COMPANY WITH QUALITY SYSTEM CERTIFIED BY DNV GL = ISO 9001 =




WAVE

Kit content

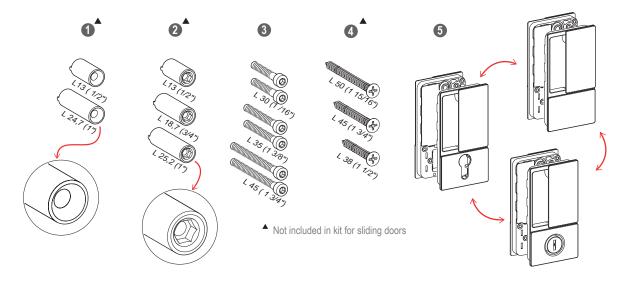


Installation on flush doors with or without rebate

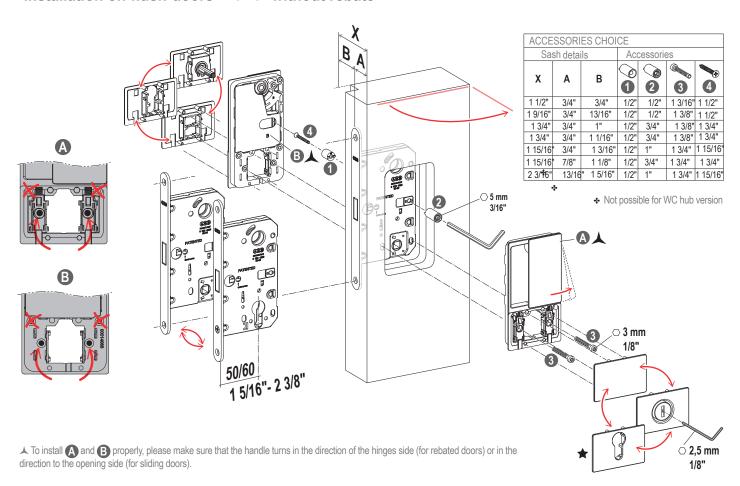


★ Block the cylinder only after the handle fastening and the cover application



Installation on sliding doors with lock

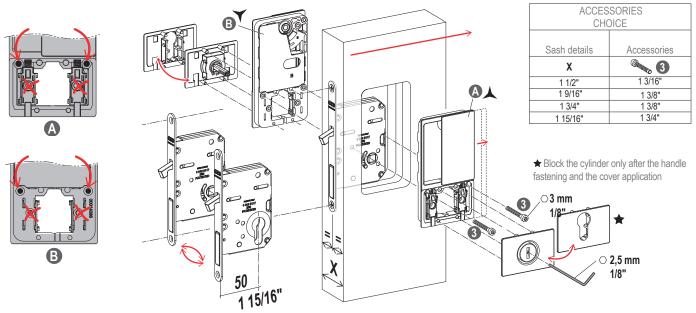

Installation on sliding doors with pull out lever

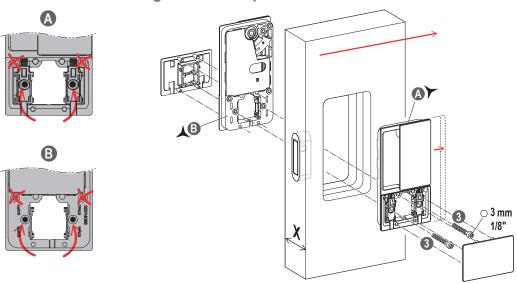

ACCESSORIES	
CHOICE	
Sash details	Accessories
Х	3
1 7/16"*	1 3/16"
1 1/2"	1 3/16"
1 9/16"	1 3/8"
1 3/4"	1 3/8"
1 3/4"	1 3/8"
1 15/16"	1 3/4"
2 3/16" *	1 3/4"

To install (A) and (B) properly, please make sure that the handle turns in the direction of the hinges side (for rebated doors) or in the direction to the opening side (for sliding doors).

Cover removal

