
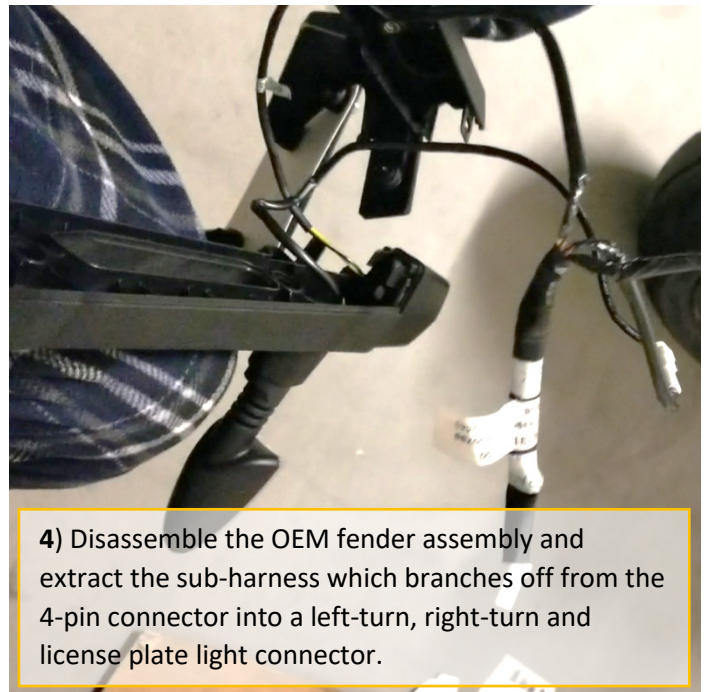
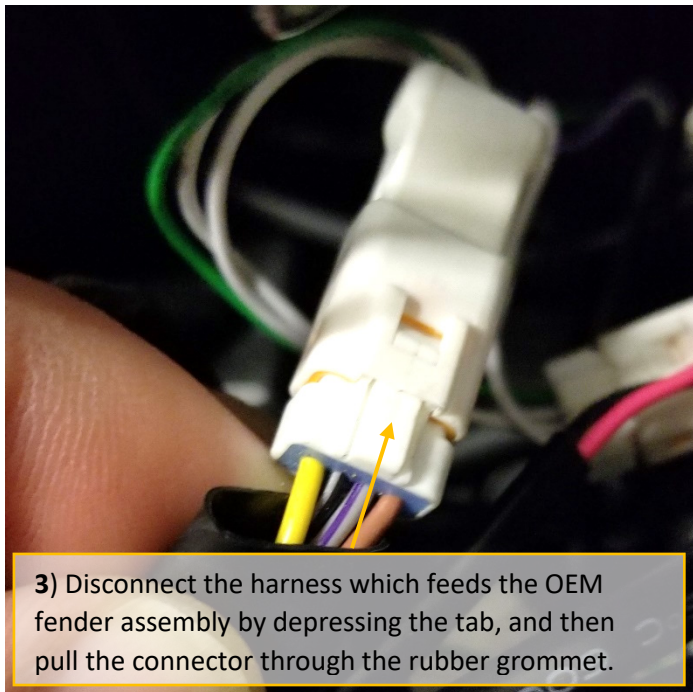
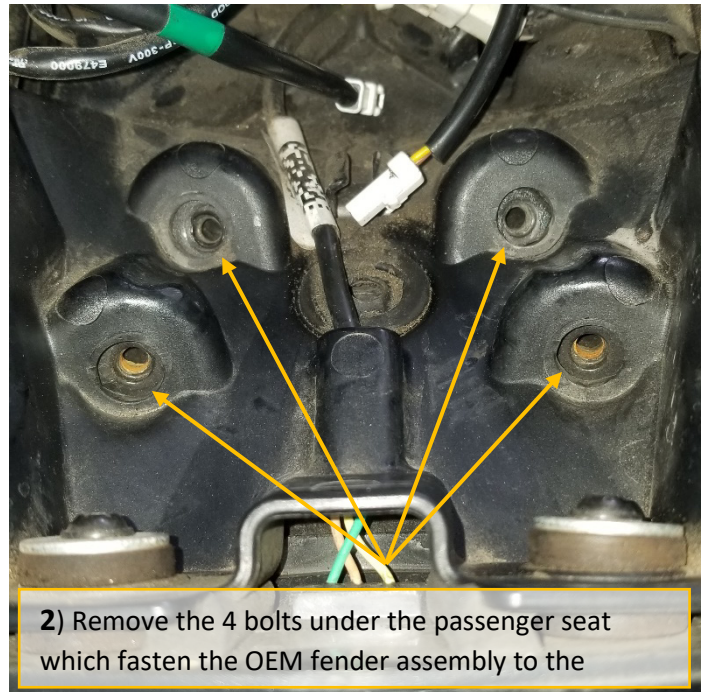


## 2014-2019 KTM 1290 SDR Ultimate Stealth License Plate Bracket (V3) Illustrated Installation Instructions

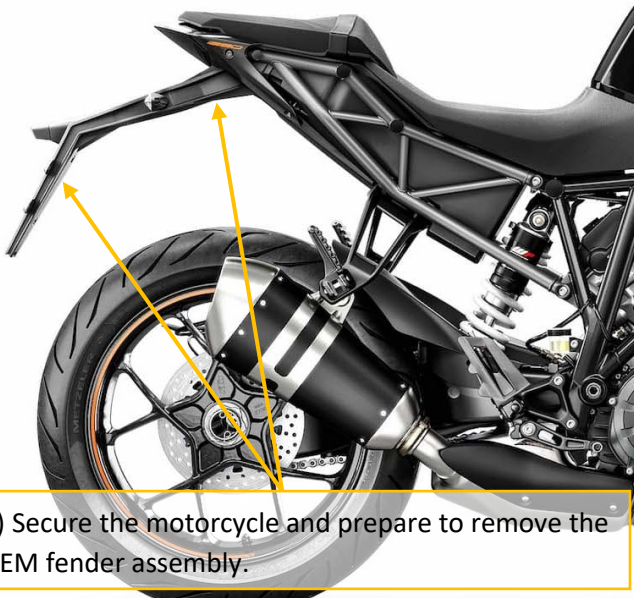


5) You will use this sub-harness with your new setup. Connect it back to the 4-pin connector which was disconnected in step 3. It will be kept inside of the tail section of the motorcycle.


6) If you are going to use the OEM turn signals on the plate bracket, remove them from the OEM fender assembly at this time.

7) You may want to attach the license plate to the plate bracket at this time based on your plate mounting hardware.


8) If desired, attach turn signals to the plate bracket using the appropriate holes. **NOTE:** The OEM turn signals have an alignment pin which will match a relief notch on the plate bracket (V2 plate bracket shown).

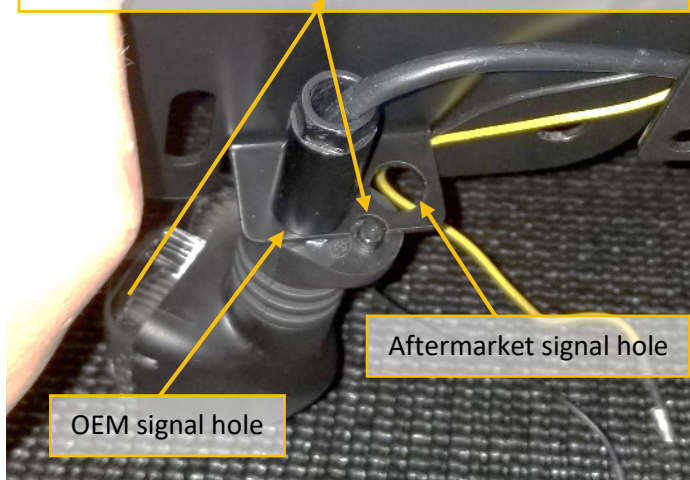

9) Pass the connectors/wires from the plate bracket through the grommet and into the undertail.

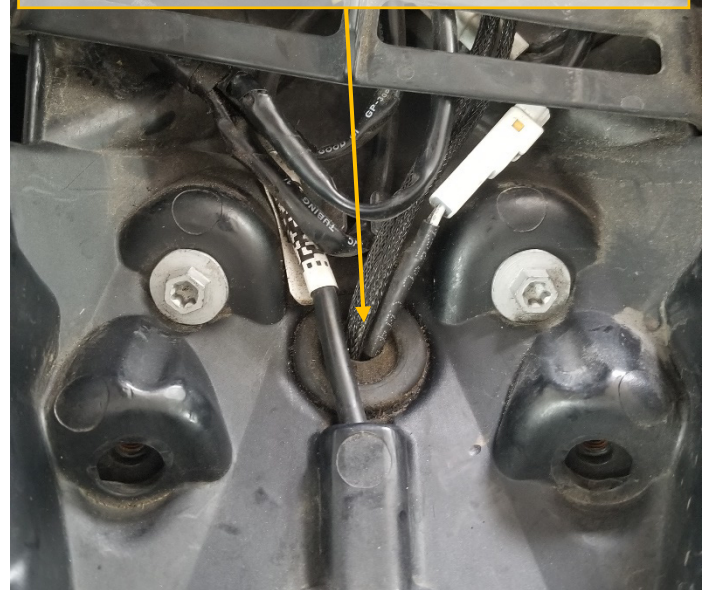

10) Slide the plate bracket into the lower two slots (closest to the shock-absorber/tire). Be sure no wires are pinched or impinged by the plate bracket.

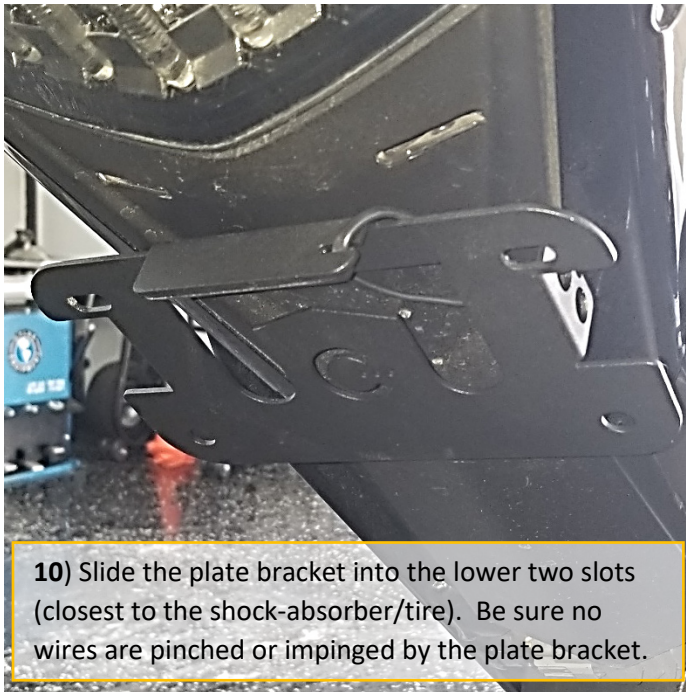

11) Tighten the plate bracket by reinstalling two of the bolts removed in step 2, into the lower holes.



12) Connect the turn signals and license plate light to the sub-harness that was relocated into the tail section.

**Thank you** for choosing Custom LED, and supporting USA manufacturing. Please help spread the word! You can share Video of this product in action on **YouTube**, and share your pre and post-install pictures on **Instagram**. Be sure to tag us **@Custom\_LED\_LLC** in the pictures so they will appear on our website Instagram feed!