

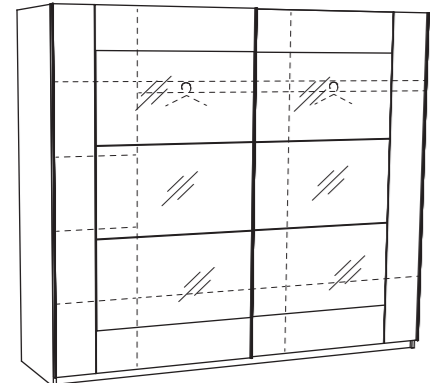


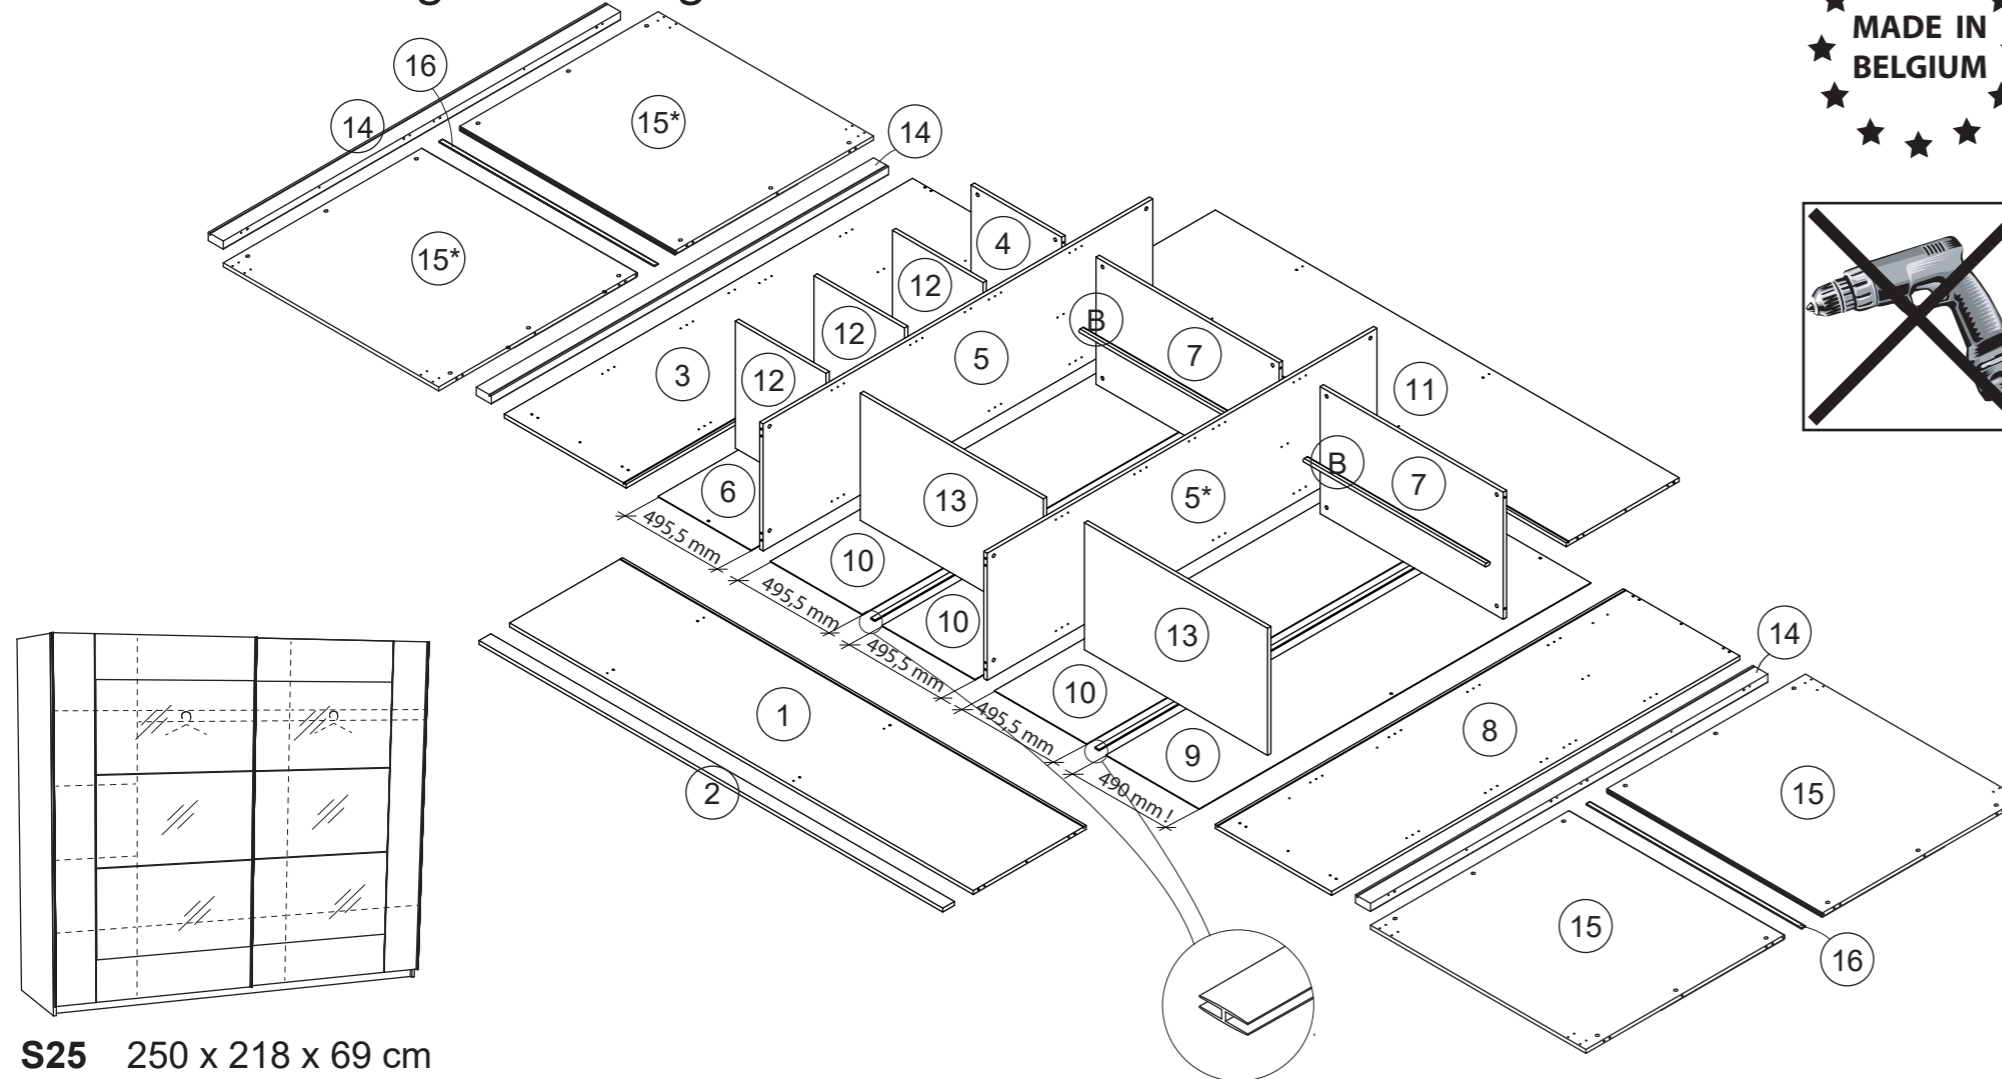

montage instructies
instructions de montage
assembly instructions
montage anleitung


NANI

S25



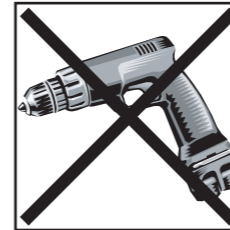














S25 250 x 218 x 69 cm











Hettich 9242738

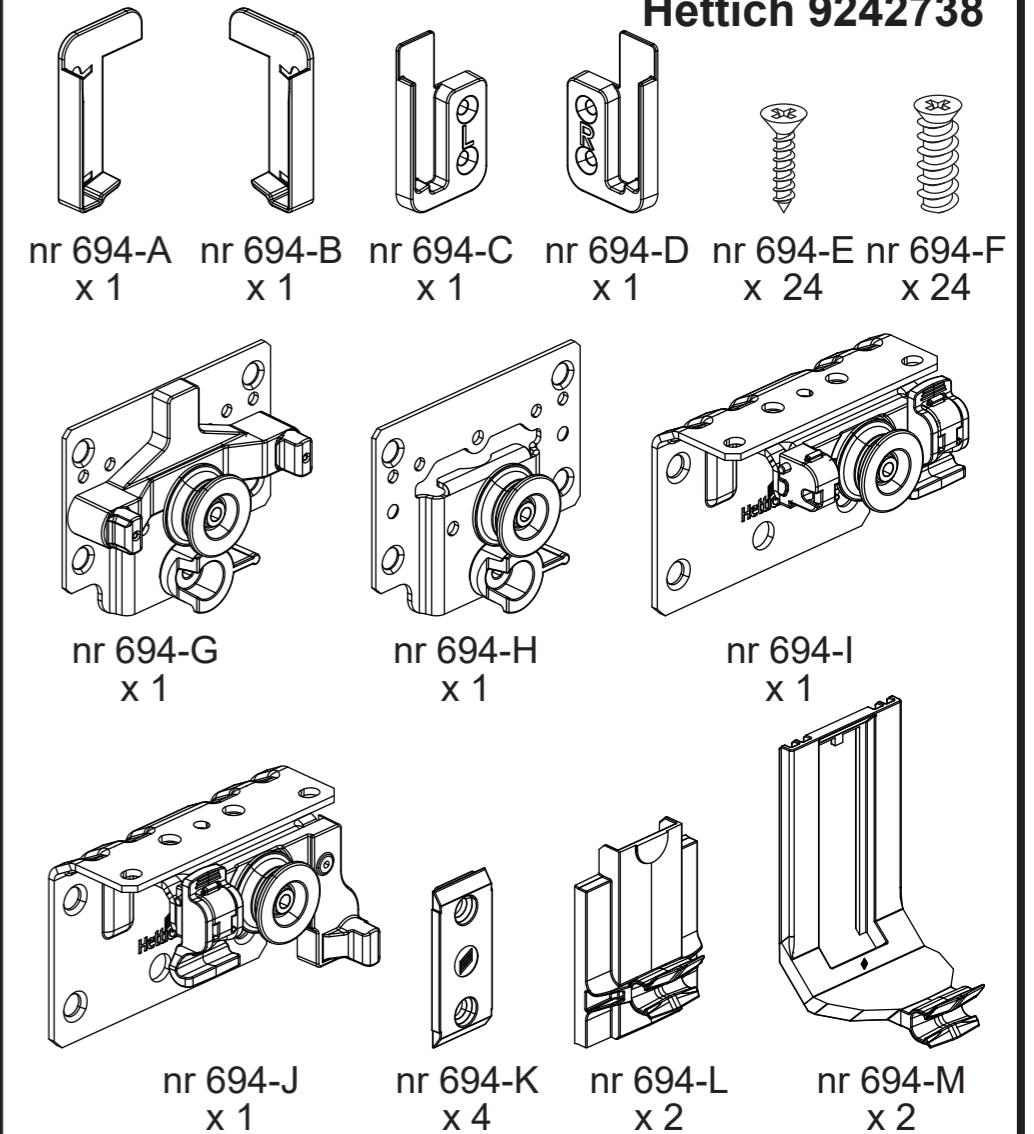


Hettich 9242219

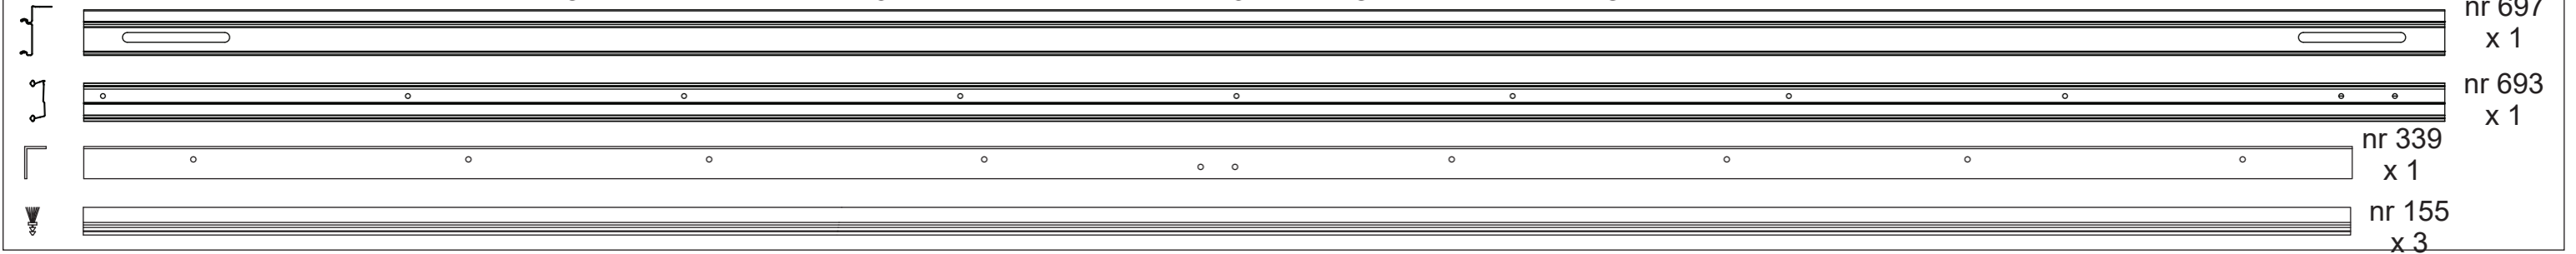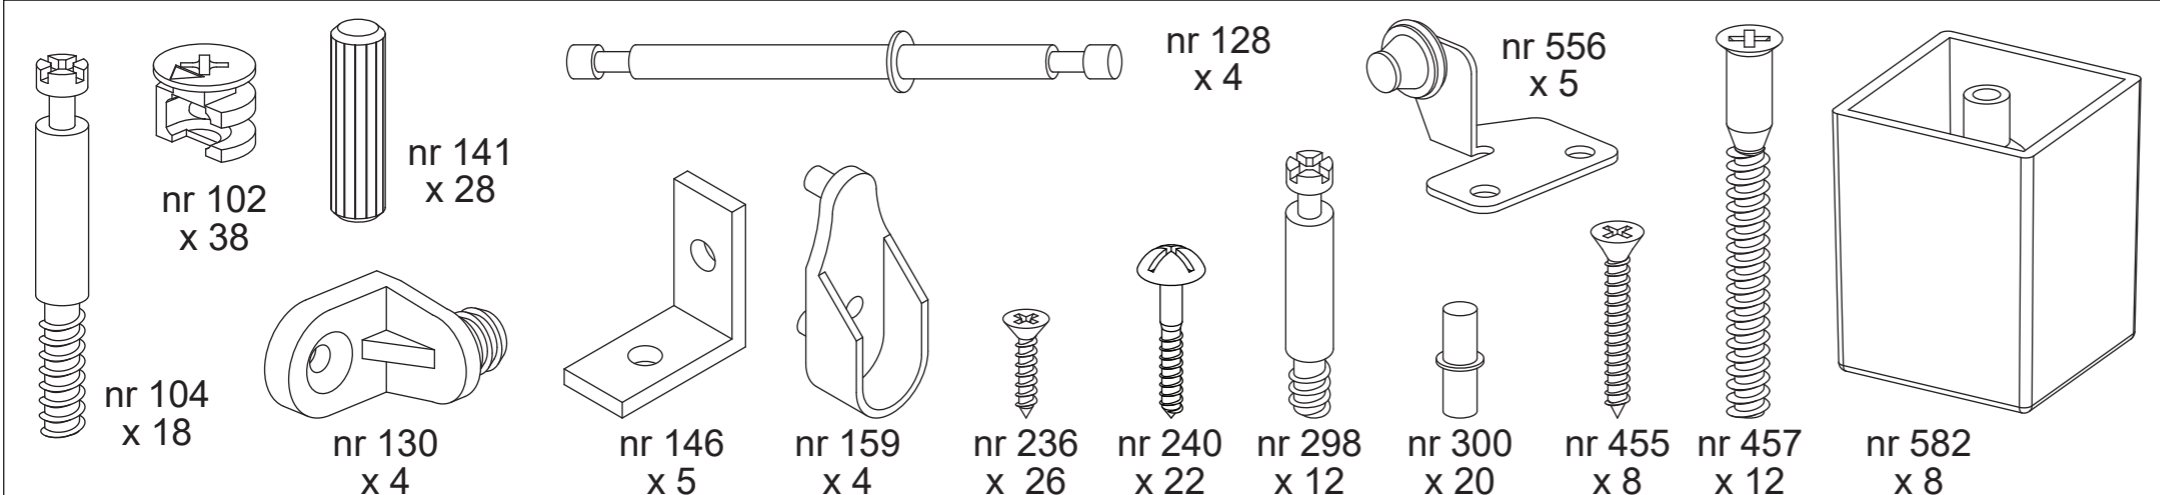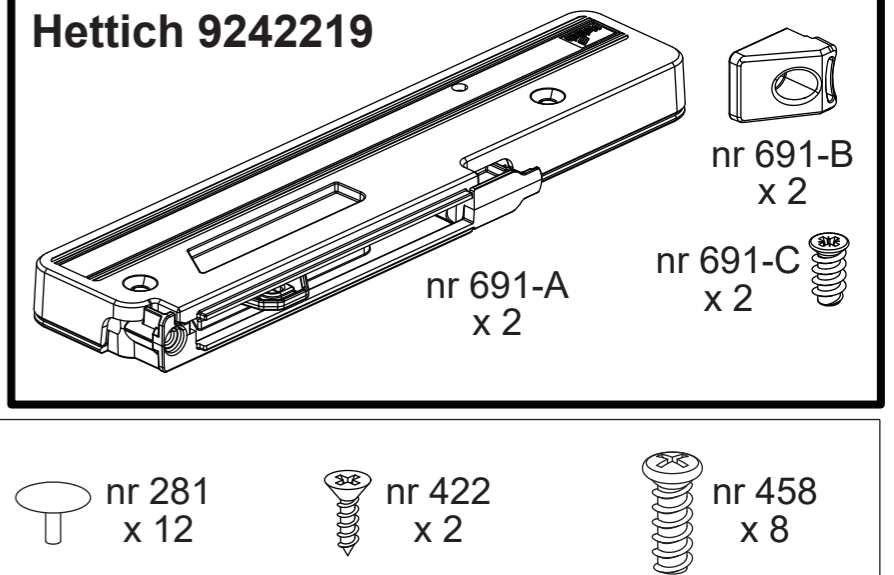

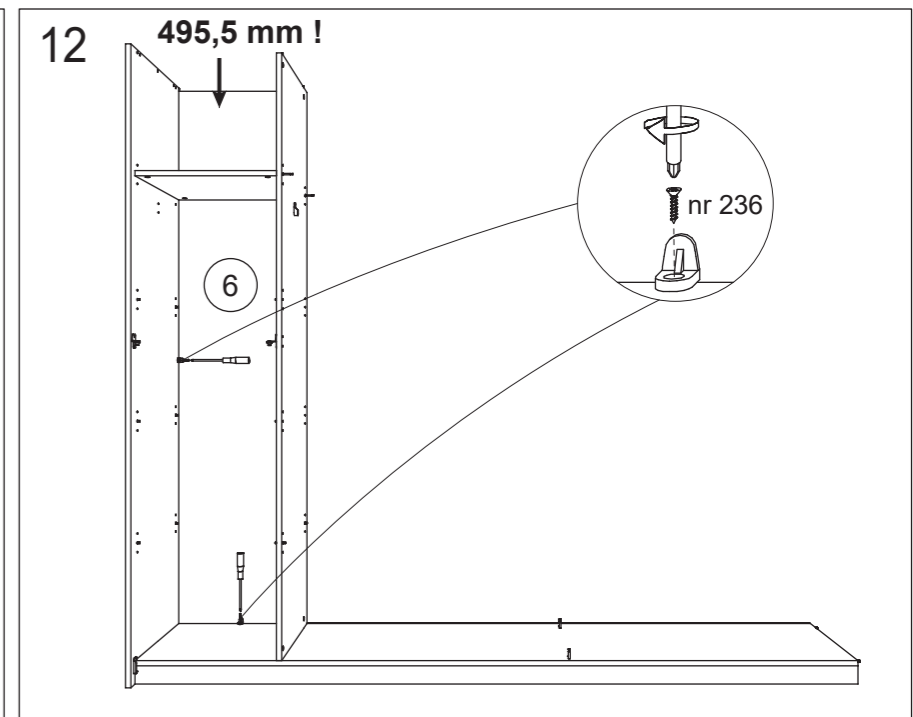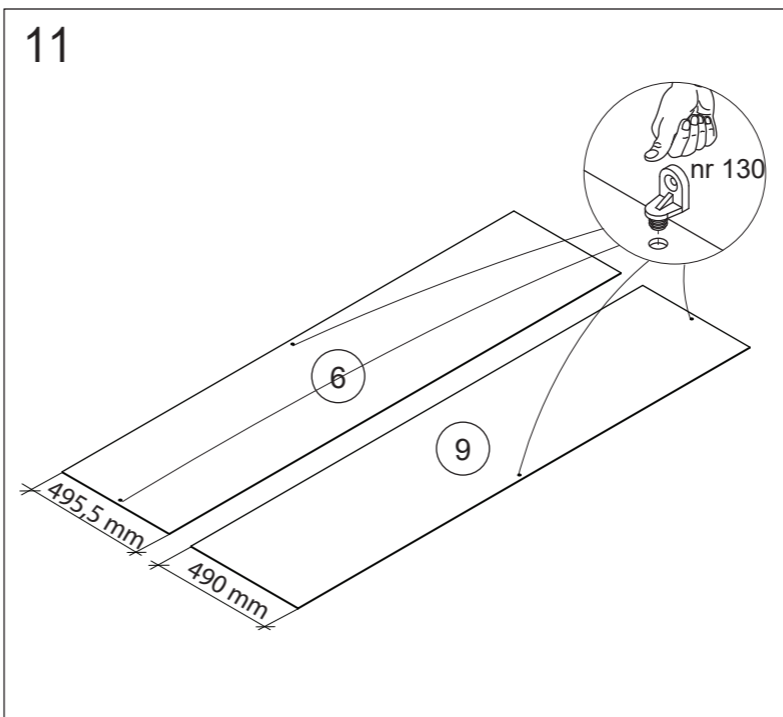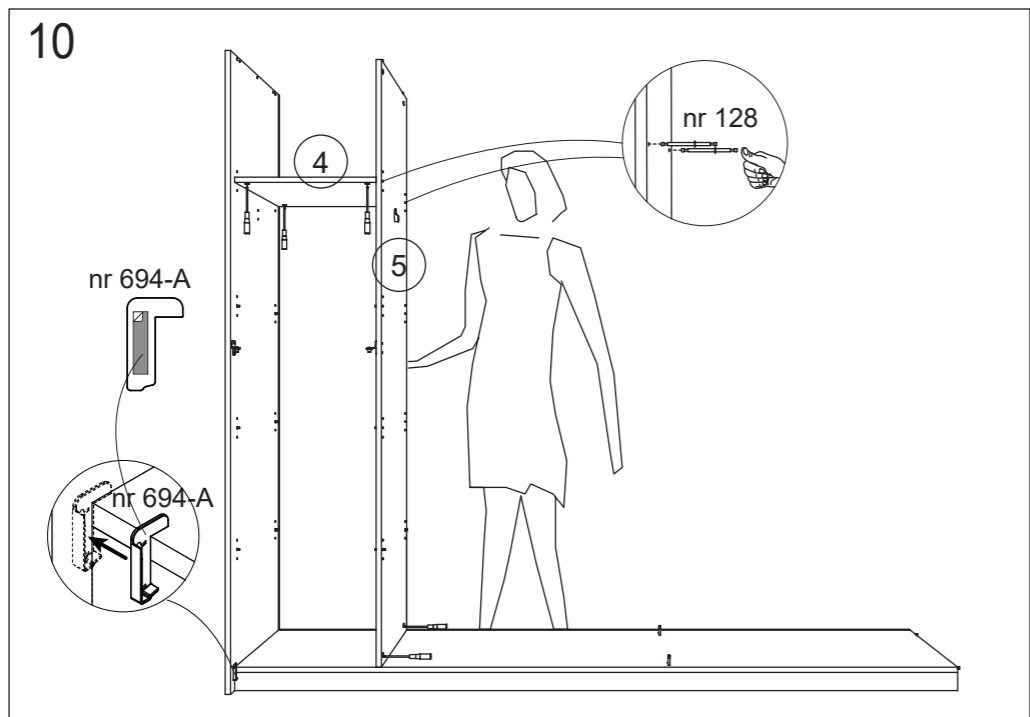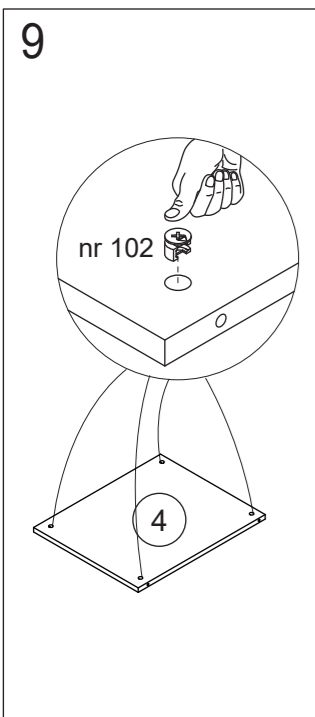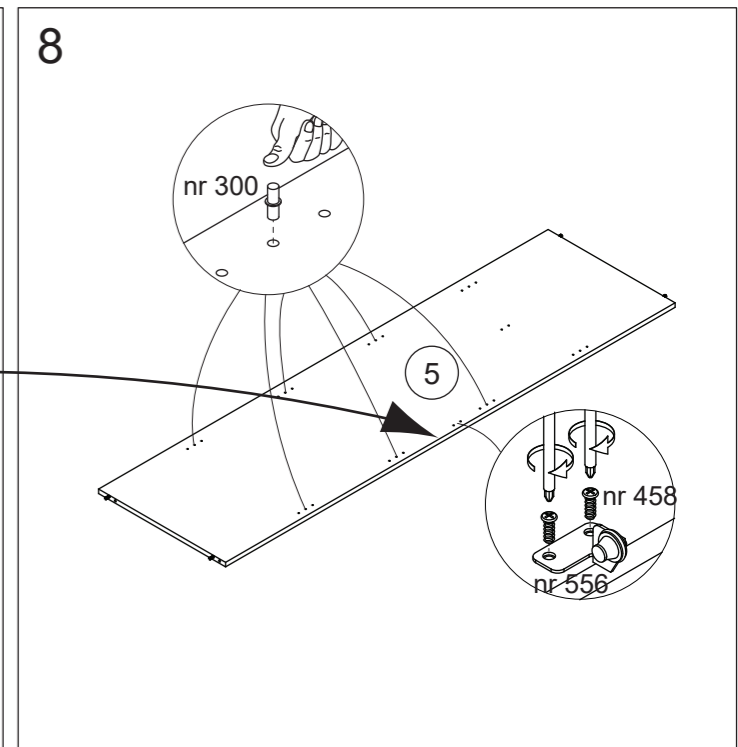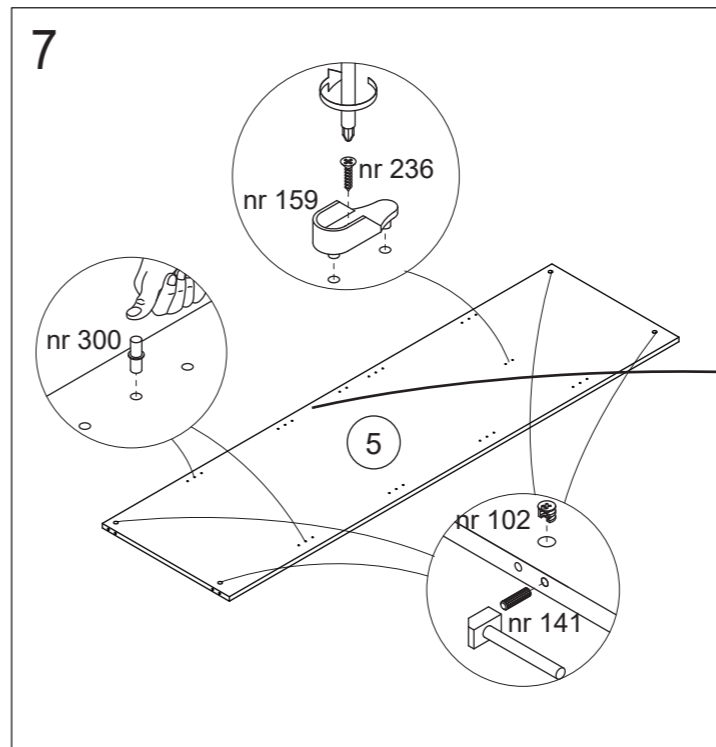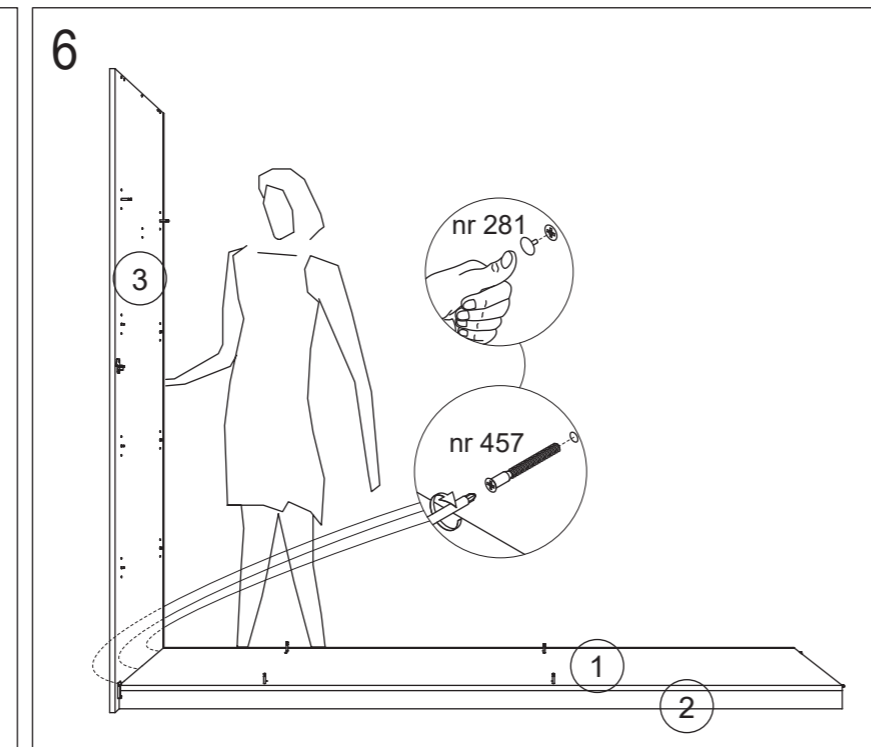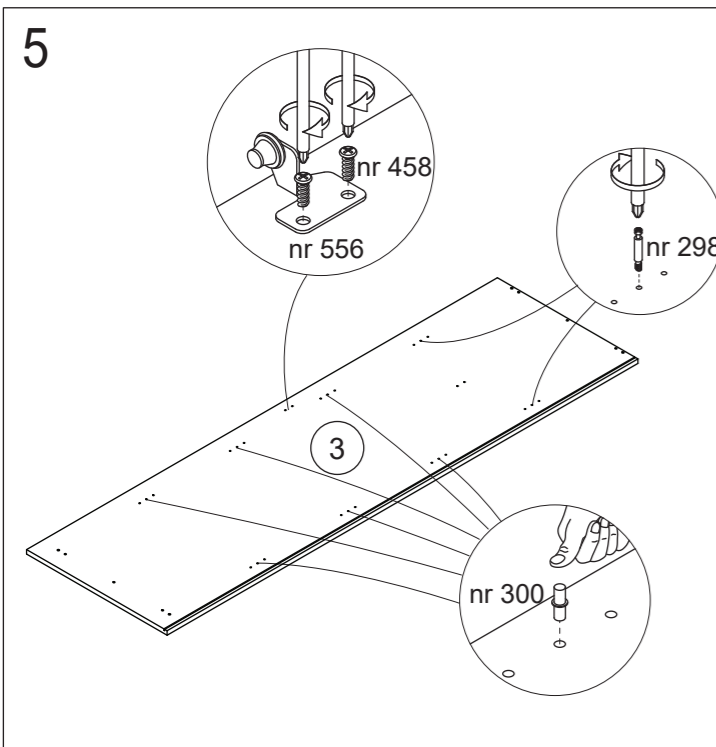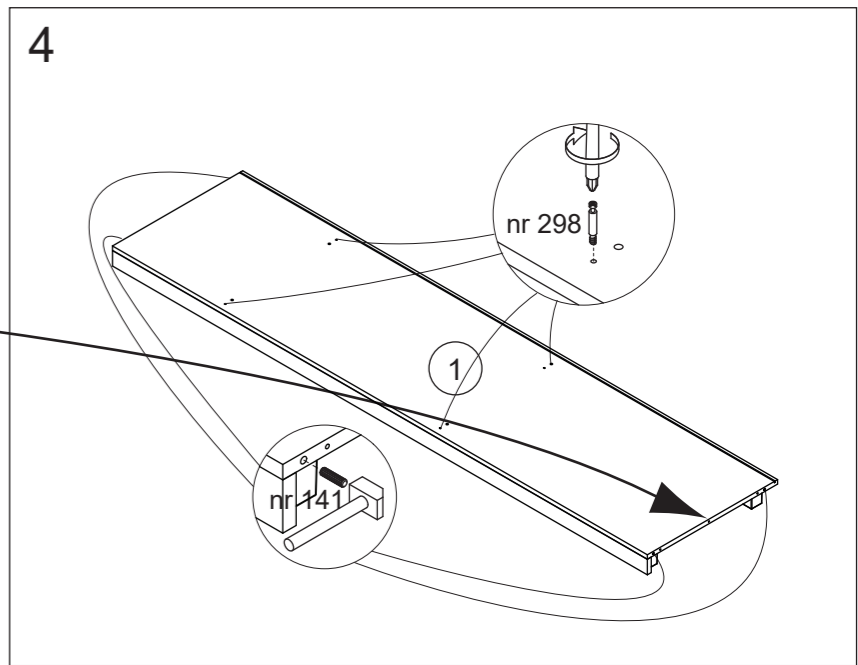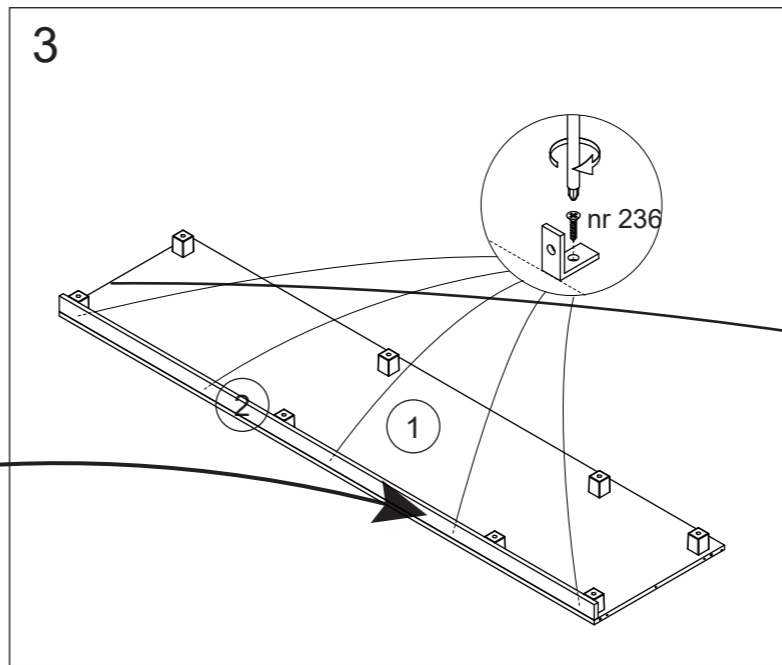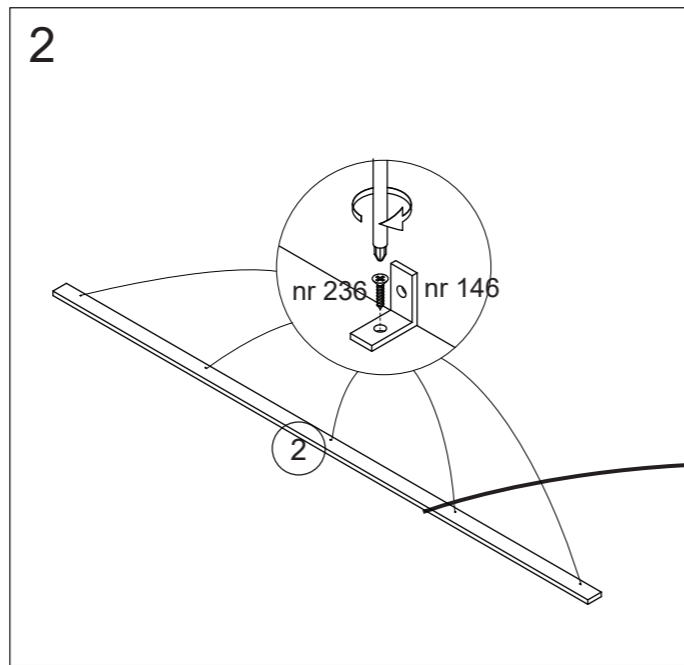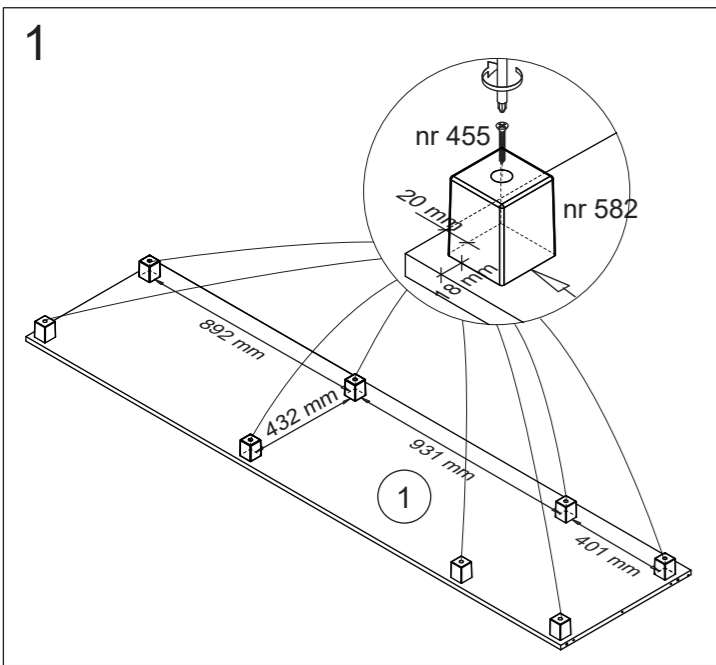


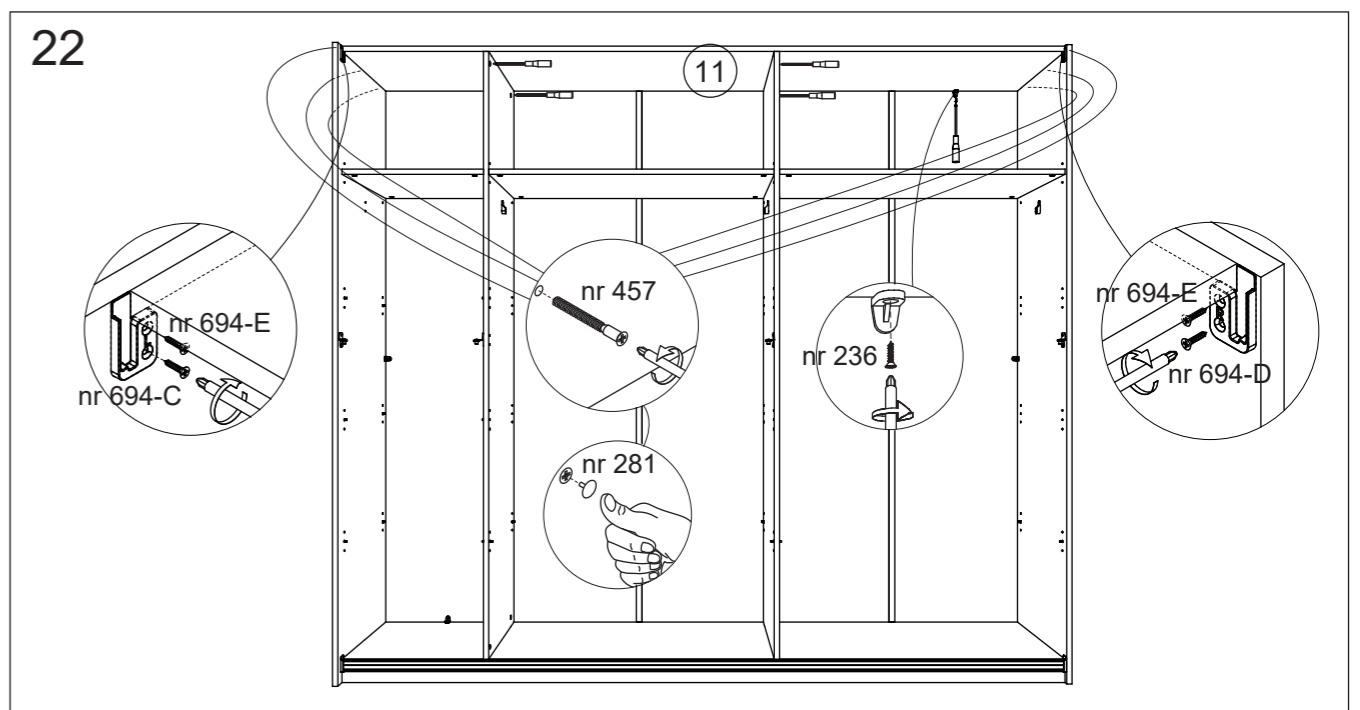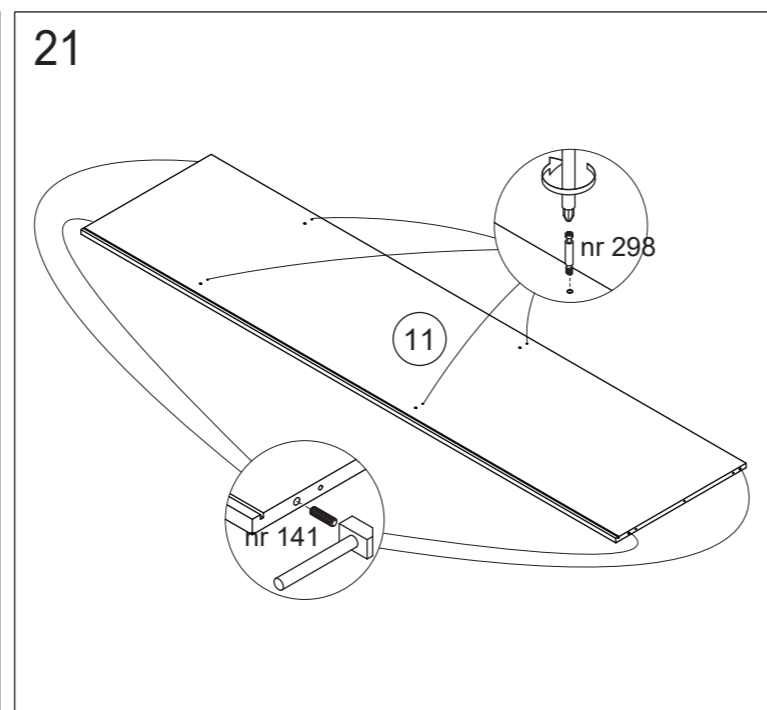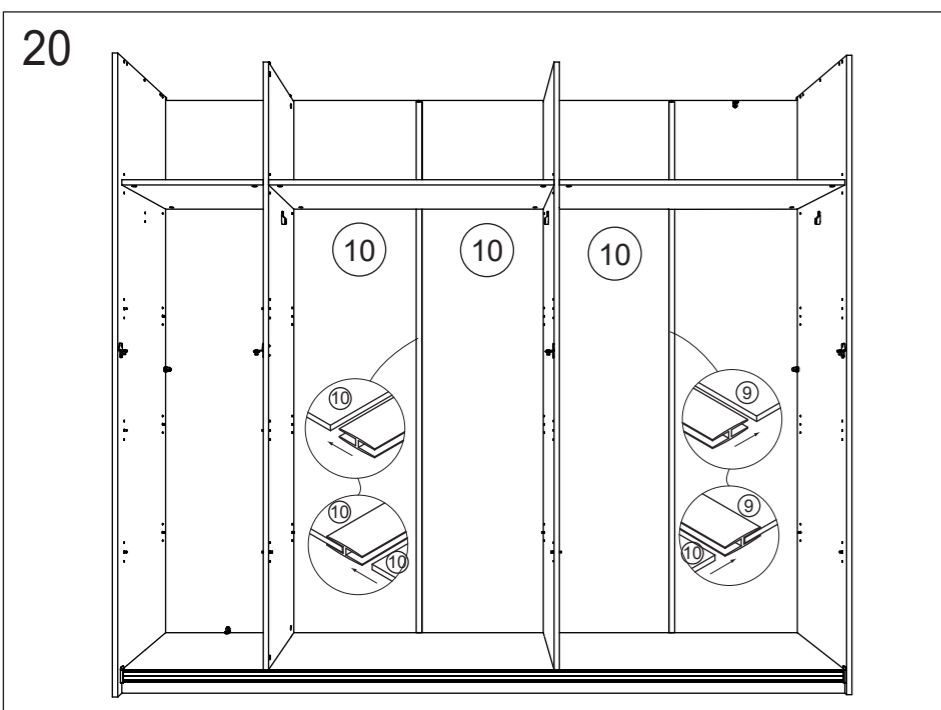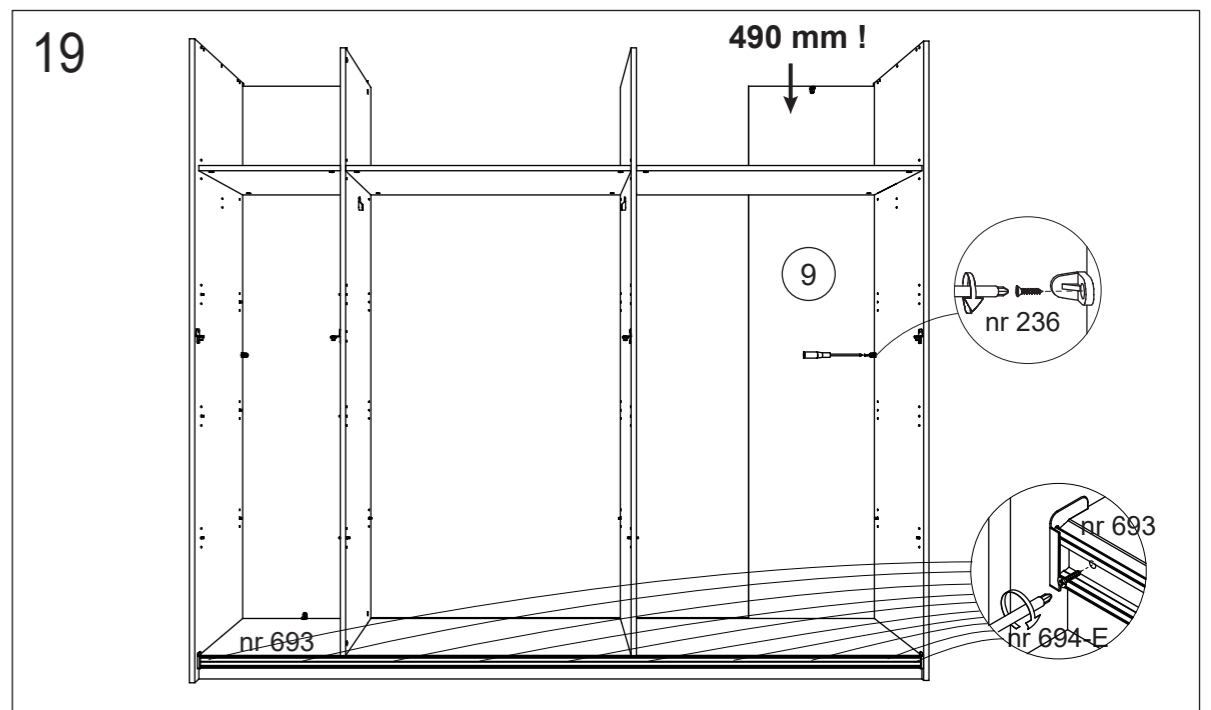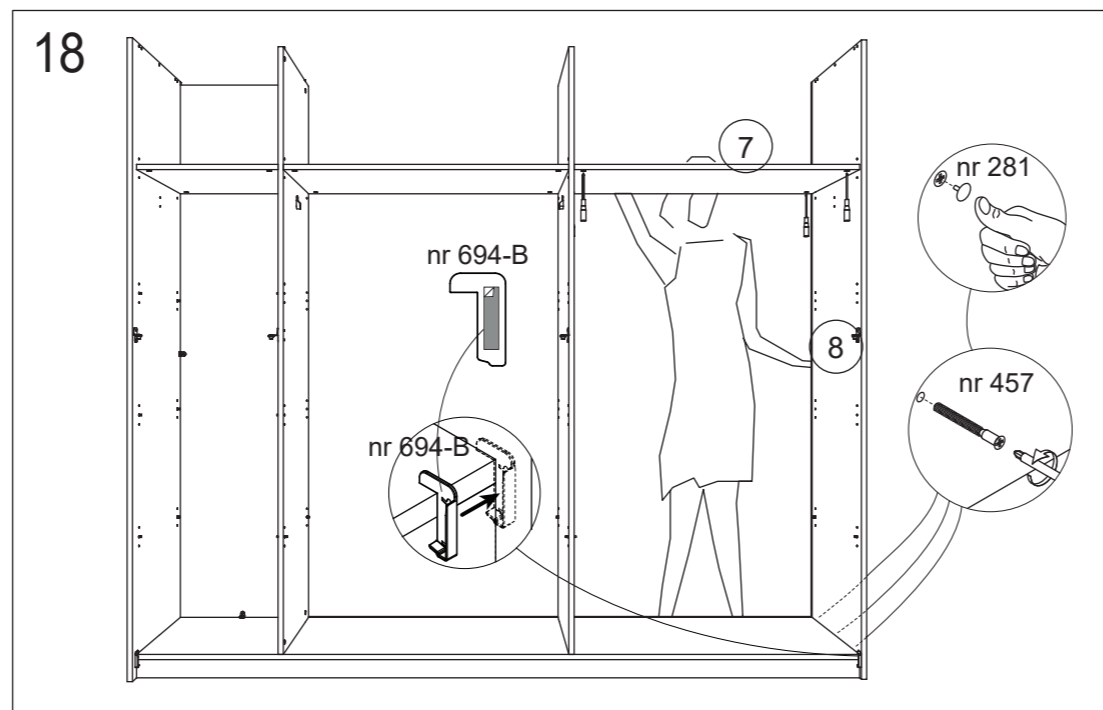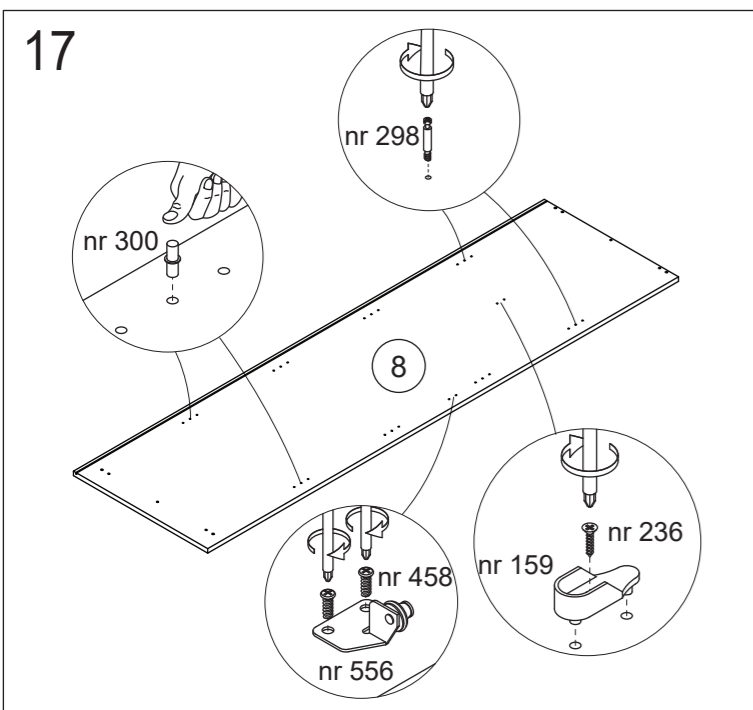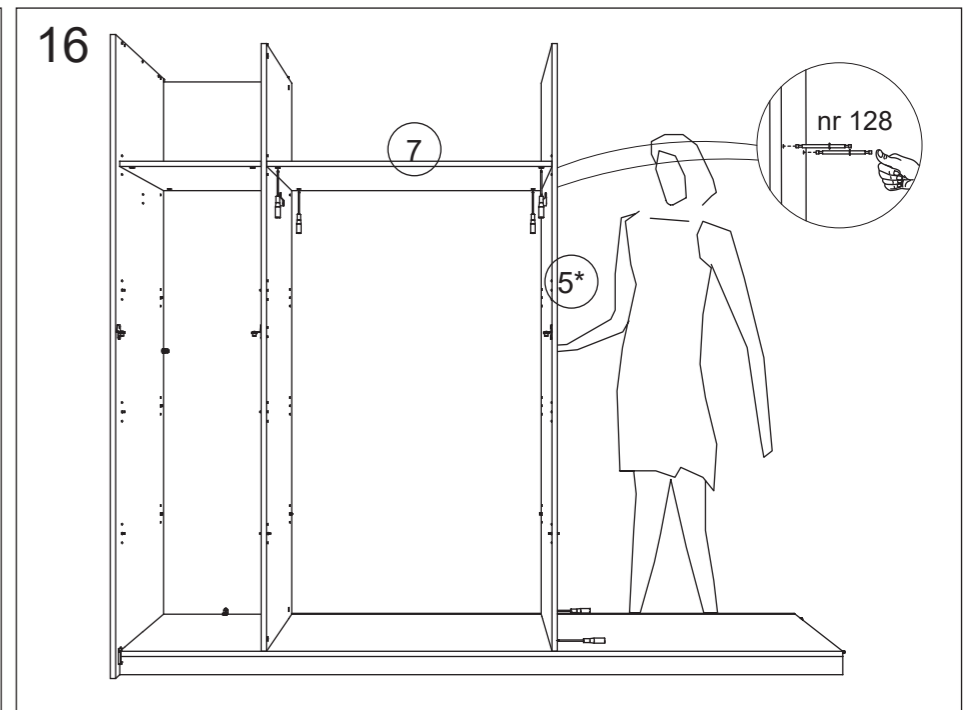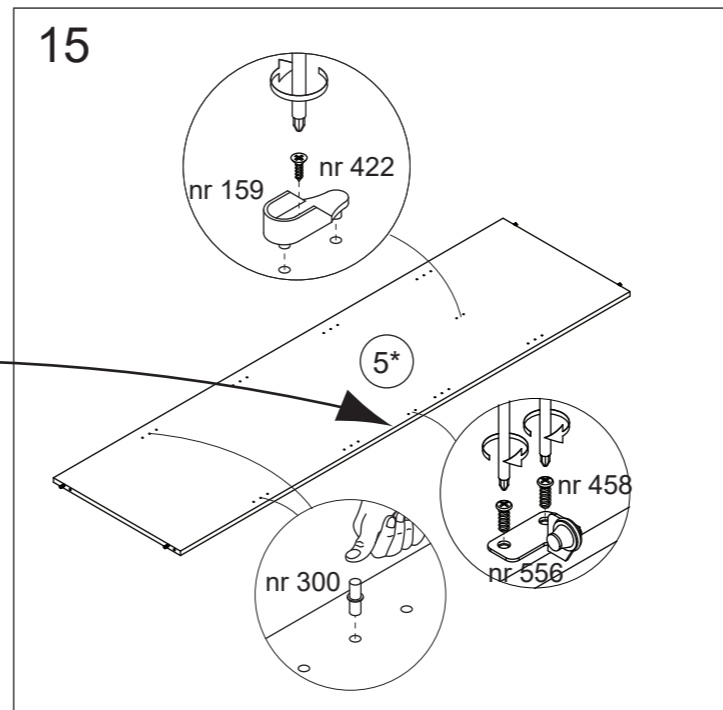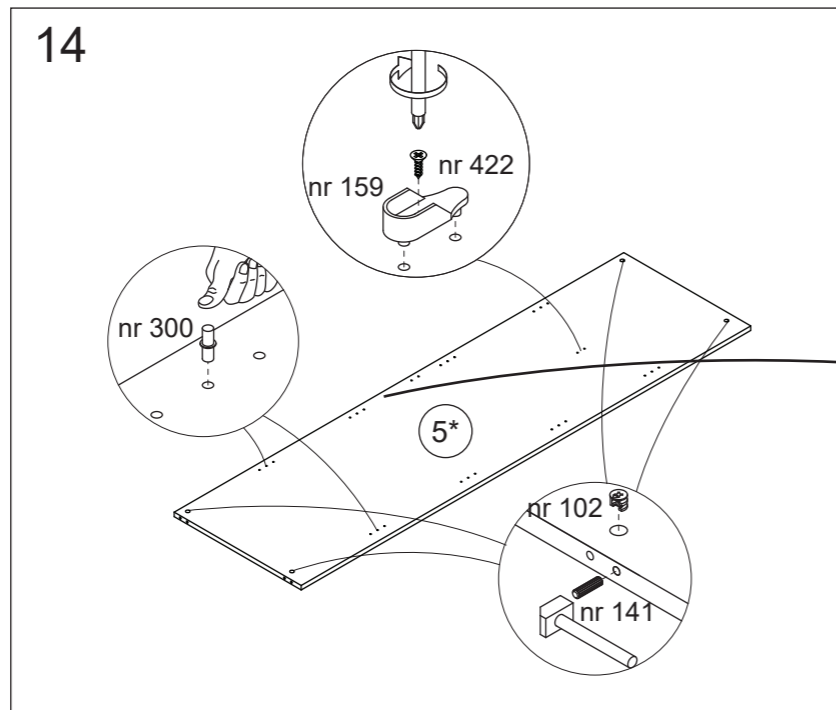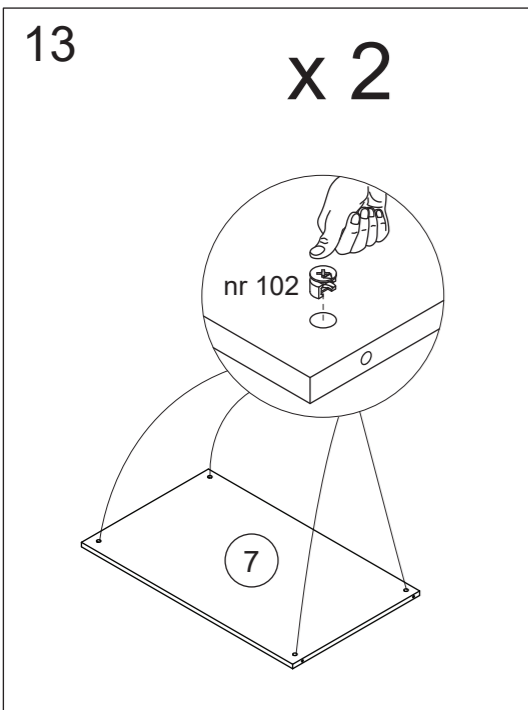


23

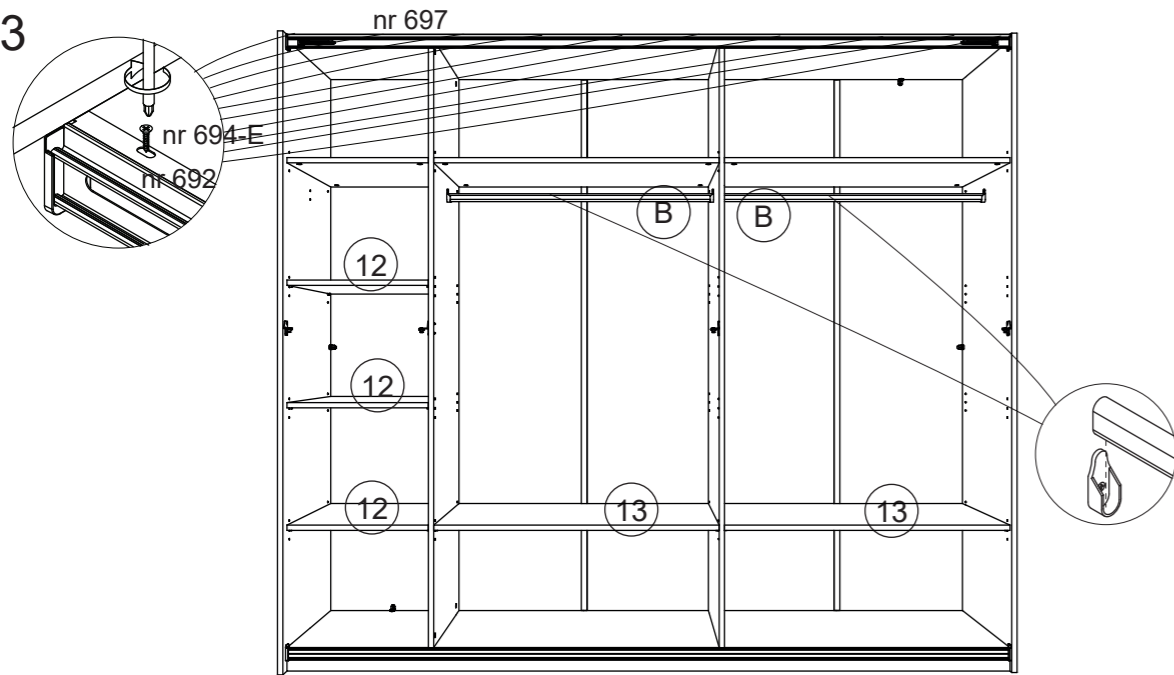

24

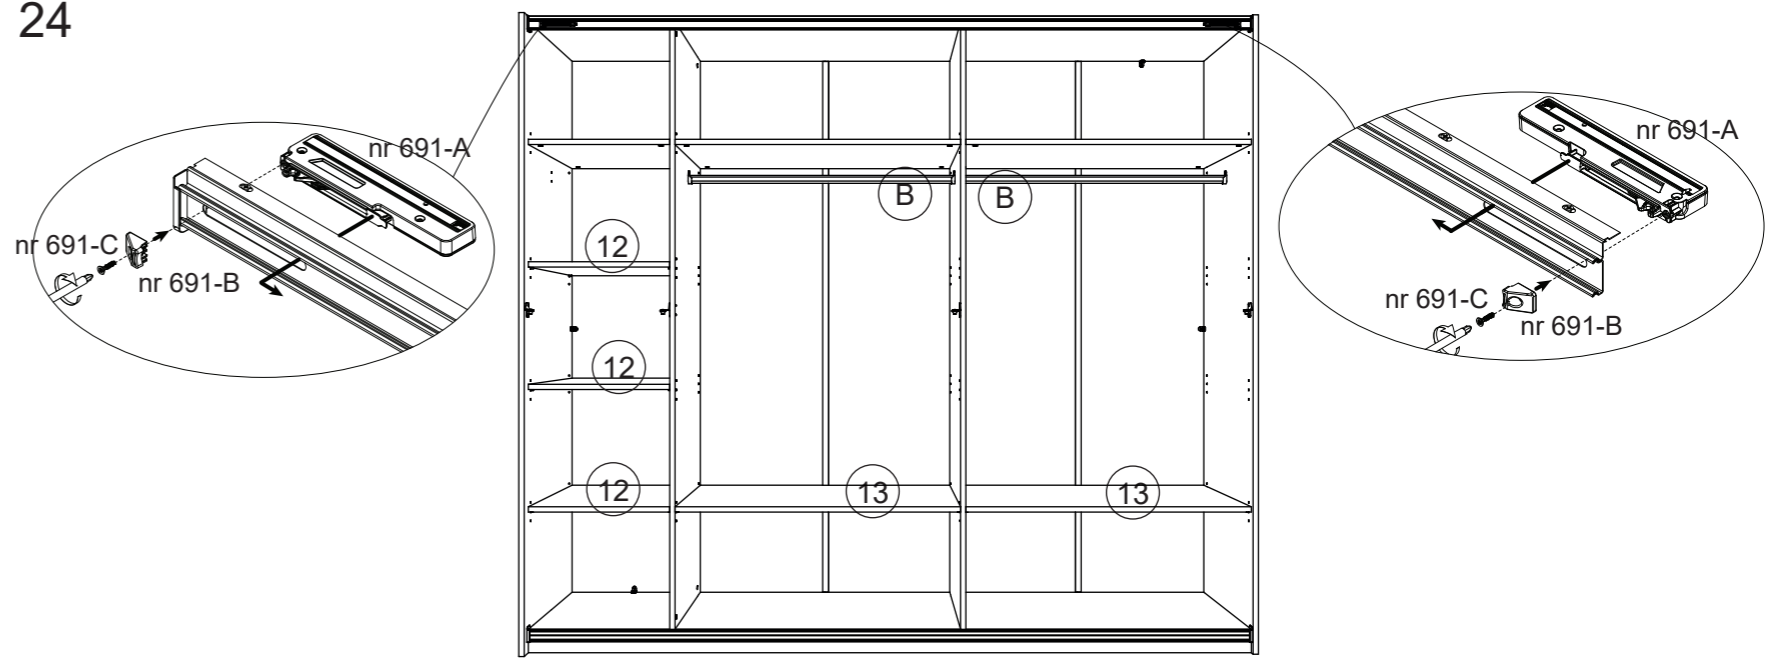

25

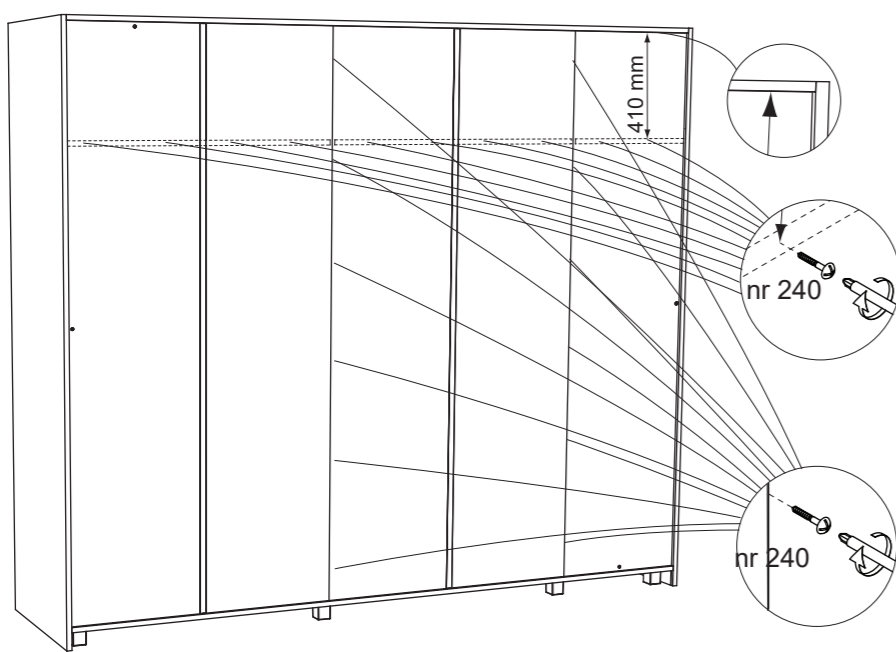


Voor de regeling van het sluiten van de deuren, moet u nu de kast goed waterpas zetten.

Pour le règlement de fermeture des portes, il faut mettre l'armoire de niveau maintenant.


To adjust the closing of the doors, you have to put the robe at level now.

Der Schrank soll jetzt waagrecht stehen, für die Regelung des Schliessens der Türe


26

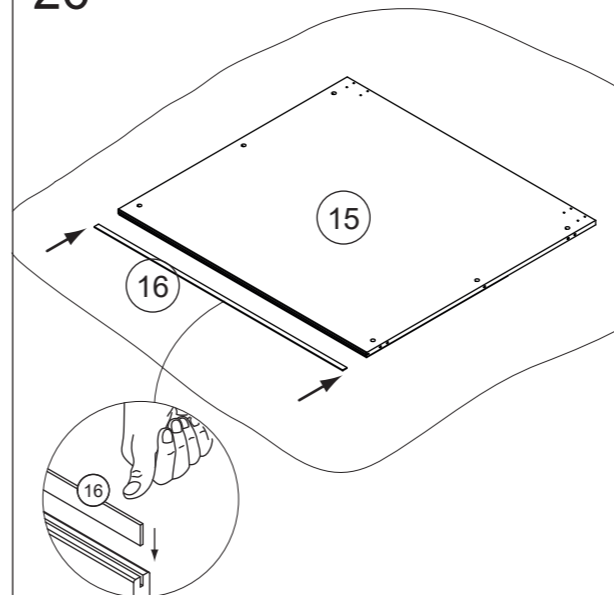


27

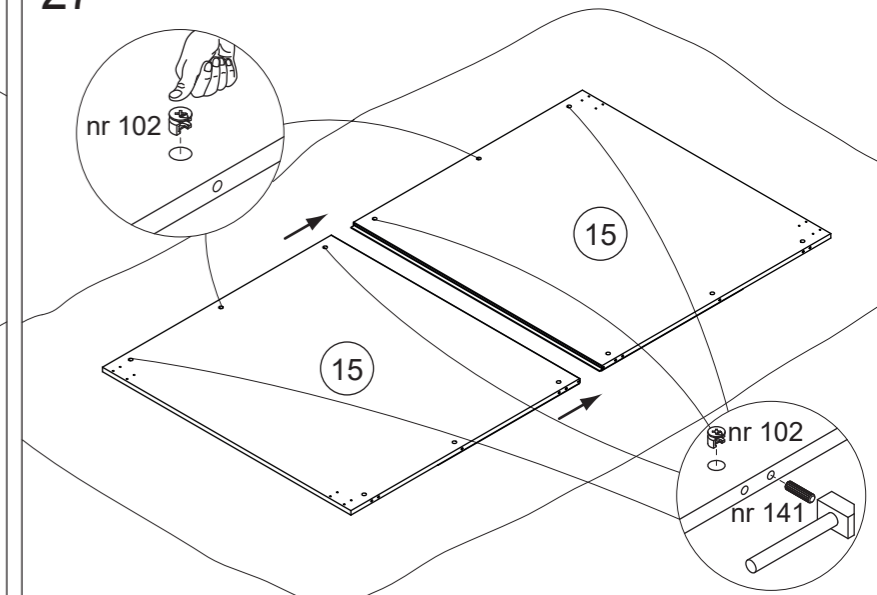


28

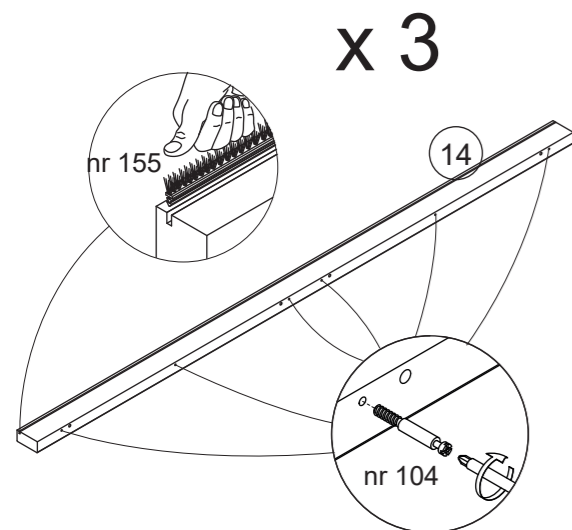


29

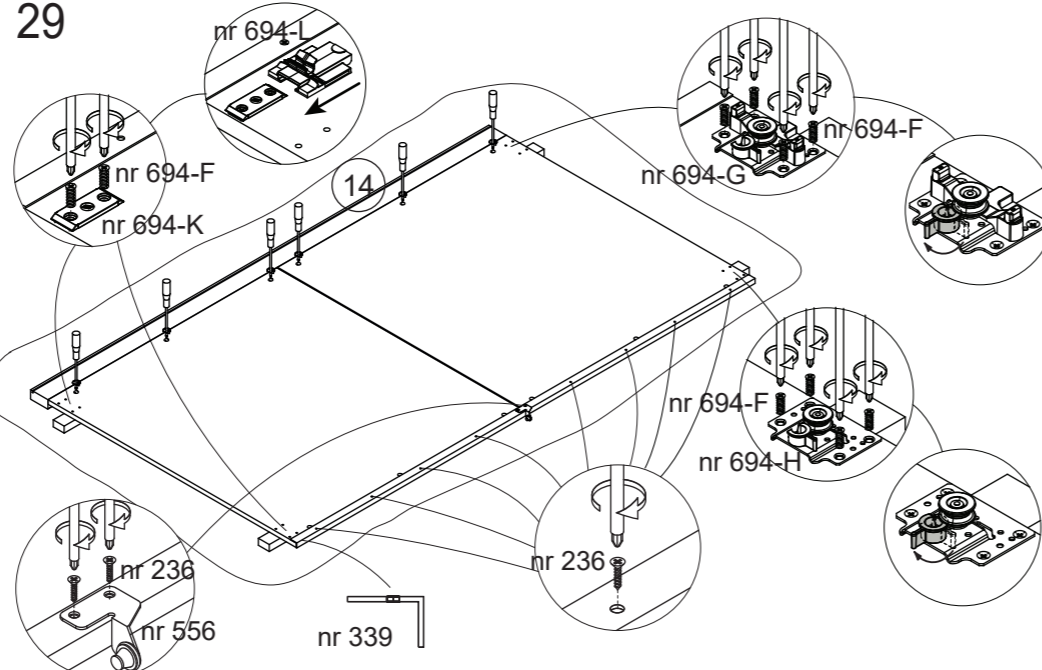


30

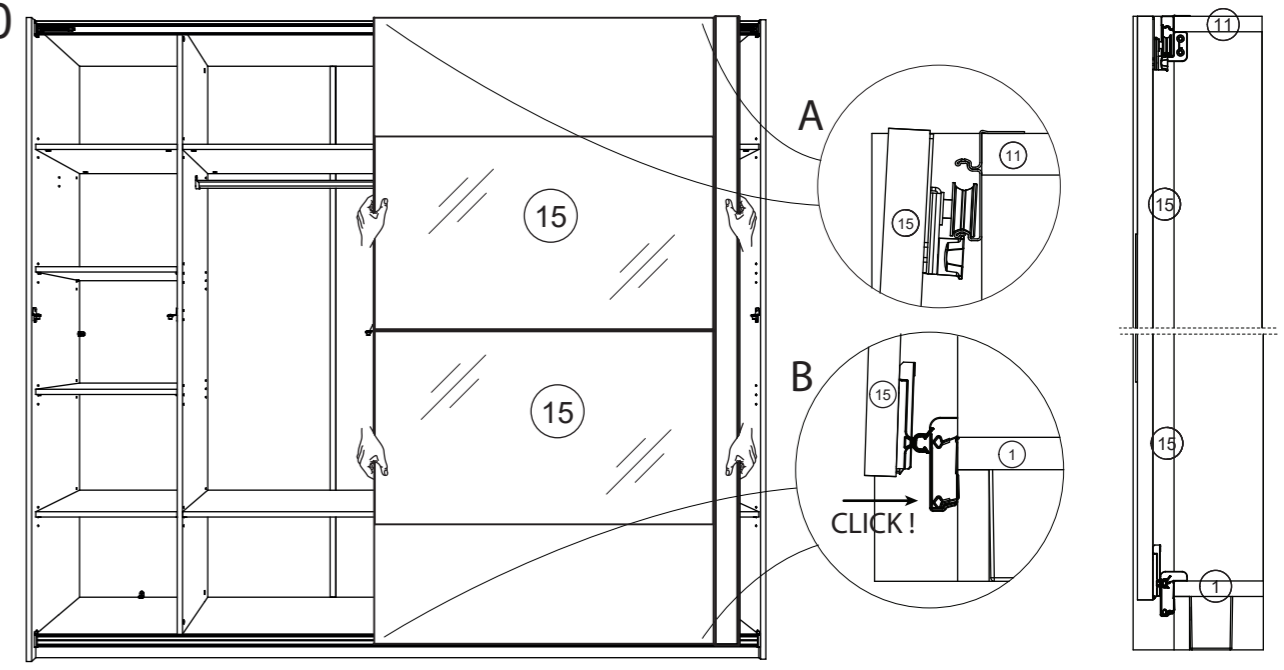


31

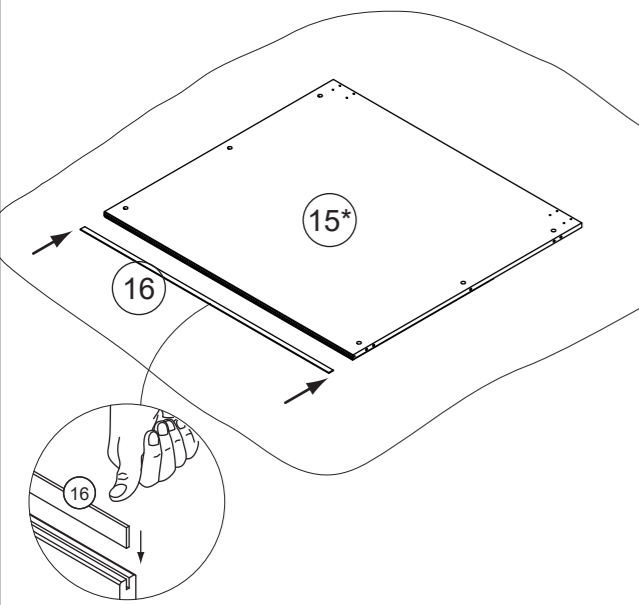


32

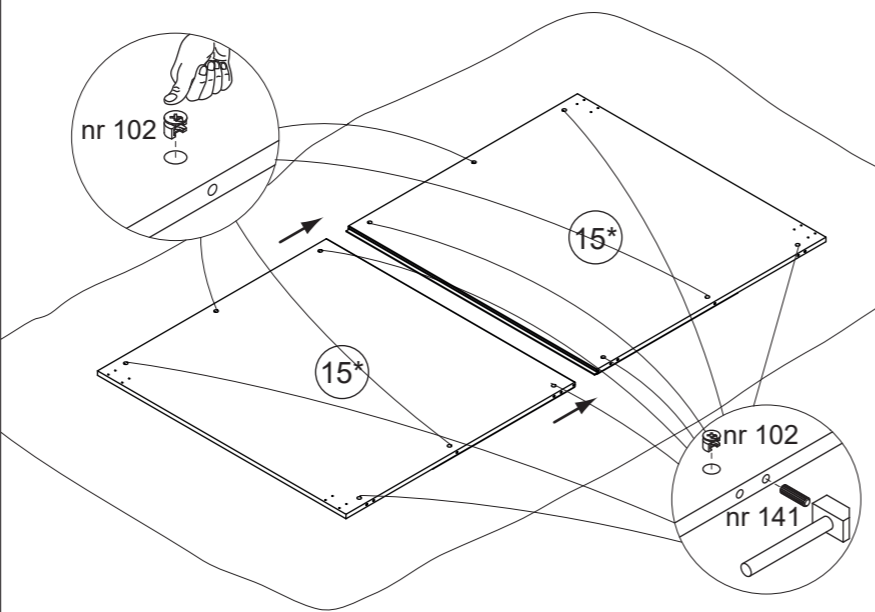

33

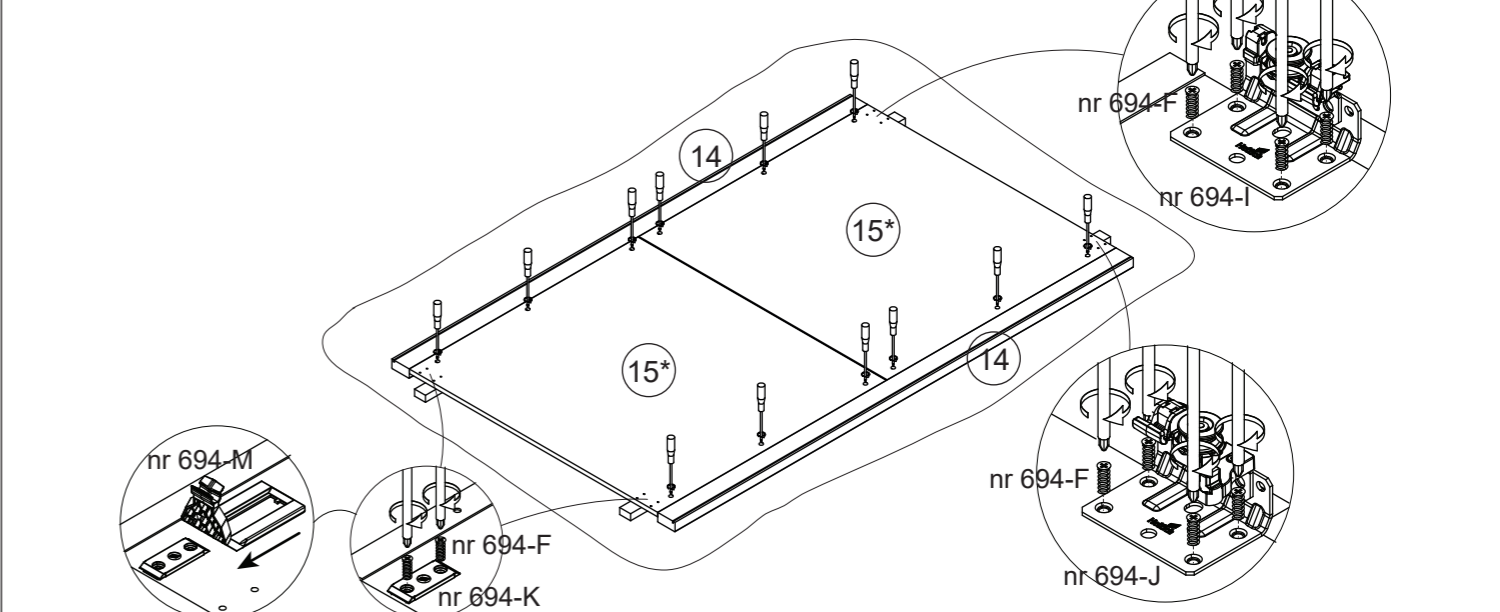

34

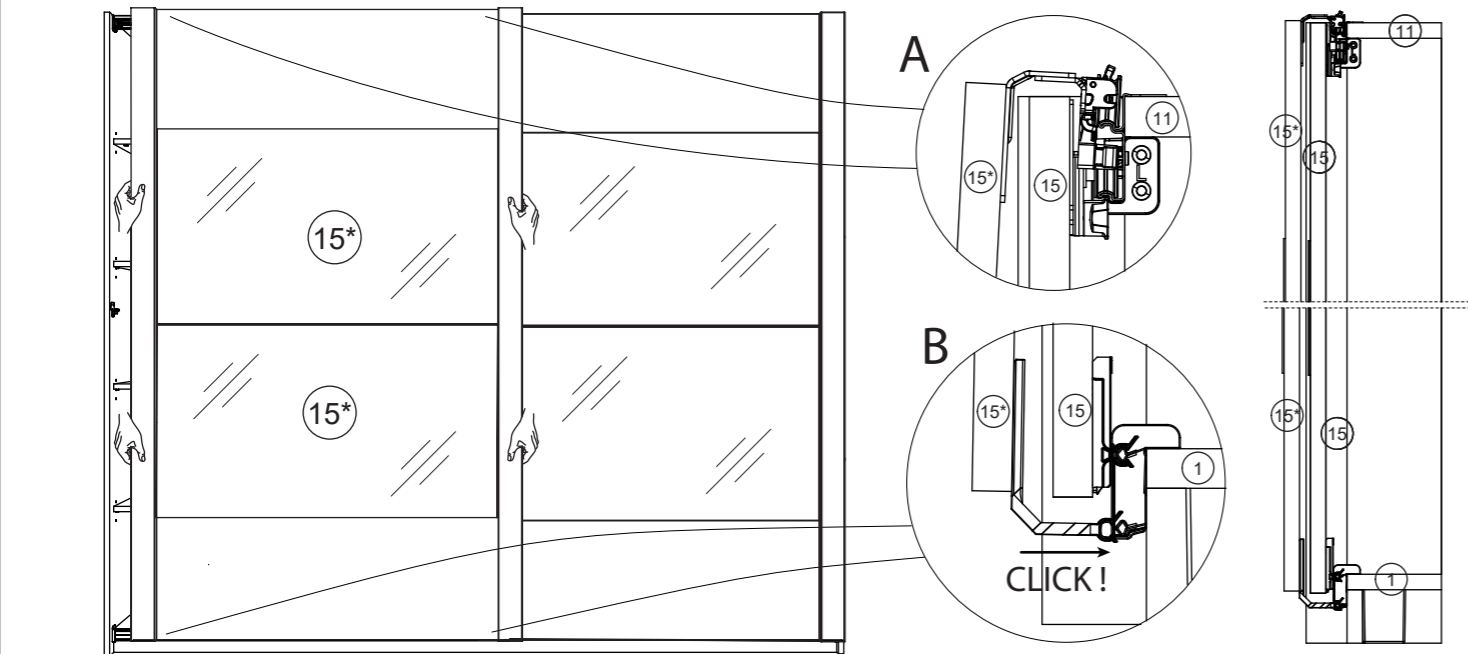

35

