


E12
warm light recommended
Bulb(Not Included)

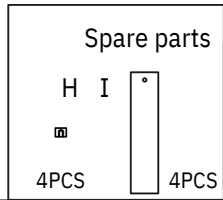

Assembly Instructions

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

1. Carefully remove all parts from the box
2. Remove the mounting bracket (B) from the canopy (D) by loosening the screws (A)
3. Link the tubes (E) (F) together (you need link them according the height you want) and thread the linked pipe to the fixture body screw nipple (G) with putting the cables through the linked pipe till the canopy (D) as well.
4. INSURE THE ELECTRICITY SUPPLY IS TURNED OFF
5. Affix the mounting bracket (B) on the outlet box
6. Wrap both safety cables with nipples (C), push the cable into the outlet box.
7. Attach the canopy (D) to the mounting bracket (B) and secure with screws (A)
8. Install the bulbs (NOT INCLUDING) in the sockets.
9. Install the alabaster pieces (I) in the right places and secure them with the screw balls (H) according to the illustration.
10. If the fluorite piece is a little leaned when hanging on the lamp body, please flip the other side and it won't leaned
11. Installation is complete, turn on power at fuse or circuit breaker.

Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents

