




Lazy Susan Cabinet ASSEMBLY INSTRUCTIONS

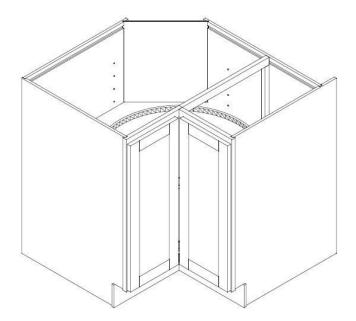

These assembly instructions are only applicable for all base reach Lazy Susan ITEM# CB33, CB36



ATTENTION: For questions or concerns about your cabinets, assembly or installation, please contact our dedicated Customer Care Team at **1-800-CABINET (222-4638)**. Our Customer Care associates are here for you every step of the way.

► General Instructions:

Thank you for purchasing a Cabinets To Go product. You are now the proud owner of a high quality product designed to face the test of daily use and guaranteeing your enjoyment for many years to come.

Carefully read the instructions before starting the installation.

During assembly, please follow all generally accepted safety procedures.

Failure to adhere to the following instructions will invalidate the warranty and Cabinets To Go will decline any responsibility for any damages caused. Any installation which does not correspond to the instructions may result in defects, malfunctioning parts, significant damage and/or injury.

Before the assembly begins, check that all appropriate and required plumbing and electrical connections exist.


Before drilling, make absolutely sure that there are no pipes (gas, water, electricity, heating, etc.) at the drilling location. Cabinets To Go will not be held responsible for failure to follow these instructions.

PRIOR TO ASSEMBLY, PLEASE MAKE SURE YOU HAVE ONE FACE FRAME BOX AND ONE CARCASS BOX, WHICH HAVE ALL THE PARTS IN THE QUANTITIES MENTIONED BELOW. IF YOU ARE MISSING ANY PARTS, PLEASE STOP AND CONTACT CUSTOMER CARE IMMEDIATELY AT 1-800-CABINET.

► Items Quantity:

Item	Description	Qty
Α	Face Frame (A1) & Short Face Frame (A2)	2
В	Side Panels {Left (B1) and Right (B2)}	2
С	Left Rear Side Panel	1
D	Right Rear Side Panel	1
Е	Bottom with Turntable	1
F	BackPanel	1
G	Shelf with Turntable	1
Н	Long Toe Kick (H1) & Short Toe Kick (H2)	2
Ι	Hardware Box:	1
	Plastic Corner Braces 5pcs, 1/2" Large Round Head Screws 16pcs, Invisible Hinge with Screws 2 sets, 1/2" Round Head Screws 10pcs,	
	1/2" flat head screws 12pcs, Door Hinge with screws 2 sets, round buttons 4pcs, (pre-installed magnetic latch & plate)	
J	Doors (J1) & (J2)	2

Required Tools:

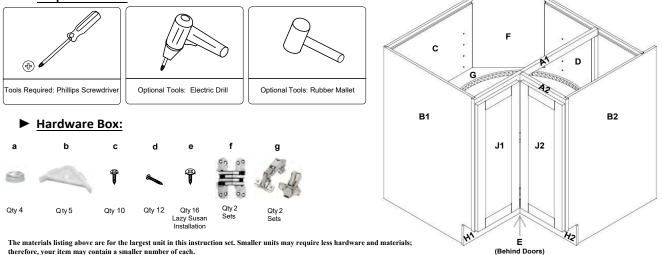

► Instructions:

- 1. Assembling the Door Set: Place two doors (J1&J2) on a flat surface and align them from the pilot holes. Attach them together using the invisible hinge sets (f) and the provided screws, and set aside.
- (Note: If the doors are already 00 00 assembled, please continue to Step 2)


f

Qty 2 Sets

2. Place face frame (A1) face down on a flat soft working surface (Figure 1).




3. Insert left side panel (B1) into the grooves of face frame (A1) on the magnetic latch side. Align the plastic half part of the cam lock connectors. Make sure it fits and lock connectors with screwdriver by turning the screw located on the cam lock connector to the right 180° (Figure 2) Stand up side panel up right at this time. (Figure 3)




4. Insert the bottom (E) with turn table through face frame resting it in the groves provided on the side panel. (Note: If the turn tables are not assembled



- to the bottom and shelf, go ahead and attach them at this time before completing Step 4.)
- 5. Insert Right Rear Side Panel (D) connect with the face frame (A1). Insert Left Rear Side Panel (C) (Figure 5) Align the cam lock connectors and lock.



6. Place the back panel (E) connect with rear side panels and align the cam lock connectors. (Figure 6) Align the cam lock connectors and lock.



7. Insert shelf with turntable (G) into position, align the cam locks under the shelf and lock. (Figure 7)



8. Place the Right Side Panel (B2) and align the cam lock connectors with right rear side panel. (Figure 8) Lock the cam lock connectors. Place the Short Frame (A2) and align the cam lock connectors with the side panel (B2) and frame (A1) and lock the cam lock connectors.




9. Place and attach door assembly (J) from Step 1 onto face frame (A2) using door hinges (g) and screws (d) (Figure 9) Attach the short toe kick (H2) to long toe-kick (H1) with cam locks, then put onto the cabinet under the door. Make sure that all fit and lock the cam lock connectors. Reposition the cabinet, laying it on the back panel, (Figure 10) lock cam locks to the frame under the door. Return cabinet to upright position.

42

Figure 10



Installing the Corner Braces (Figures 11&12): Position and insert the 5 plastic corner braces (b) in the locations shown in (Figures 11&12) secure them with ¹/₂" screws (c). Install round buttons (a) onto the doors where they contact the frames.

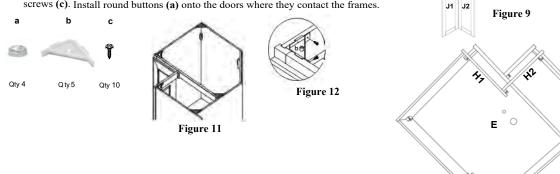

► Maintenance

For daily cleaning, use a dry cloth and a soft liquid cleaner.

Never use abrasive cleaners containing acetone, chlorine or strong bleach. Also, do not use tools as scrapers, metallic brushes, and other products which can scratch or tarnish surfaces.

Under no circumstances should you use chrome cleaner on chrome-plated or brass trim, hinges, handles, sockets etc.

Good ventilation is essential for maintaining the quality and look of this furniture.

Warranty and Customer Care Information

For the most up to date warranty information for your product, please visit our website - www.cabinetstogo.com to get the specific details. If you have any questions with warranties or to make a claim, please contact Customer Care by email - customercare@cabinetstogo.com or call 1-800-CABINET.