



**Wall Diagonal Cabinet  
ASSEMBLY INSTRUCTIONS**

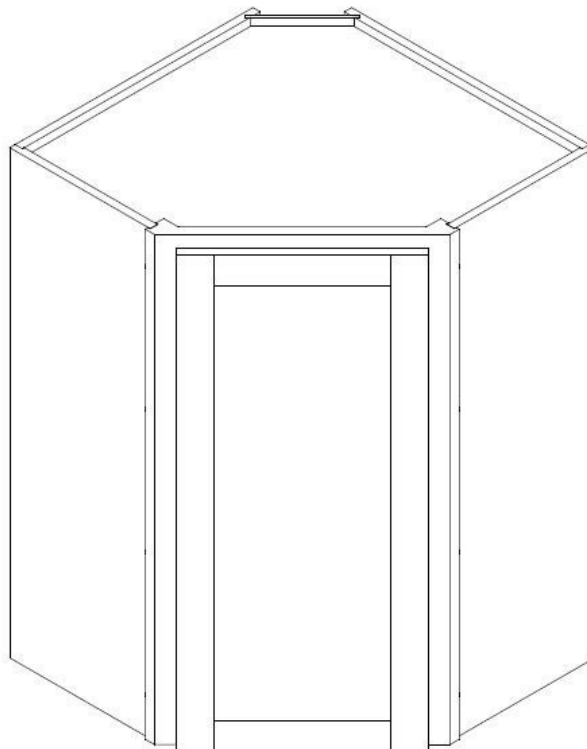

These assembly instructions are only applicable for all Wall Diagonal Cabinets (2 shelves)

**ITEM# WD2430, WD2436**

  
**WOW  
SERVICE**

**ATTENTION:** For questions or concerns about your cabinets, assembly or installation, please contact our dedicated Customer Care Team at **1-800-CABINET (222-4638)**. Our Customer Care associates are here for you every step of the way.

**► General Instructions:**

Thank you for purchasing a Cabinets To Go product. You are now the proud owner of a high quality product designed to face the test of daily use and guaranteeing your enjoyment for many years to come.

Carefully read the instructions before starting the installation.

During assembly, please follow all generally accepted safety procedures.

Failure to adhere to the following instructions will invalidate the warranty and Cabinets To Go will decline any responsibility for any damages caused. Any installation which does not correspond to the instructions may result in defects, malfunctioning parts, significant damage and/or injury.

Before the assembly begins, check that all appropriate and required plumbing and electrical connections exist.


Before drilling, make absolutely sure that there are no pipes (gas, water, electricity, heating, etc.) at the drilling location. Cabinets To Go will not be held responsible for failure to follow these instructions.

PRIOR TO ASSEMBLY, PLEASE MAKE SURE YOU HAVE ONE FACE FRAME BOX AND ONE CARCASS BOX, WHICH HAVE ALL THE PARTS IN THE QUANTITIES MENTIONED BELOW. IF YOU ARE MISSING ANY PARTS, PLEASE STOP AND CONTACT CUSTOMER CARE IMMEDIATELY AT 1-800-CABINET.


**► Items Quantity**

Item	Description	Qty
A	Face Frame with Door	1
B1 & B2	Front Side Panels (Right & Left)	2
C1 & C2	Rear Side Panels (Right & Left)	2
D	Top & Bottom Panels	2
E	Back Panel	1
F	Shelves	2
G	Hardware box	1
	Corner Bracket 135 degree 4pcs, Corner Bracket 90 degree 6pcs, shelf clips 8pcs, 1" screws for back panel 4pcs	
	round bumpers 2pcs, 1/2" flat head screws 20pcs, drywall anchors 8pcs, 2" flat head screws 8pcs	


**► Required tools:**

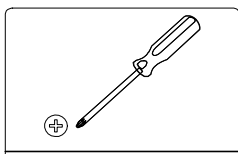

Tools Required: Phillips Screwdriver

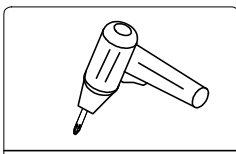


Optional Tools: Electric Drill

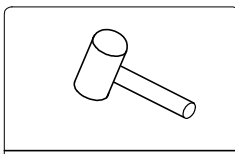

Optional Tools: Rubber Mallet

**► Hardware Box:**

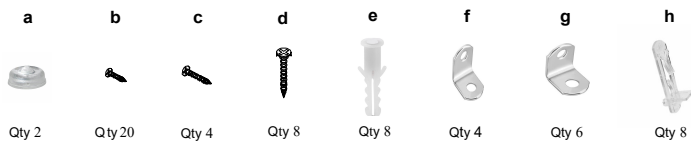

Qty 2    Qty 20    Qty 4    Qty 8    Qty 8    Qty 4    Qty 6    Qty 8

The materials listing above are for the largest unit in this instruction set. Smaller units may require less hardware and materials; therefore, your item may contain a smaller number of each.

**► Instructions:**

1. Place the face frame (A) face down on a flat soft working surface to ensure that the face is not scratched or damaged (Figure 1).


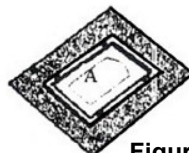


Figure 1

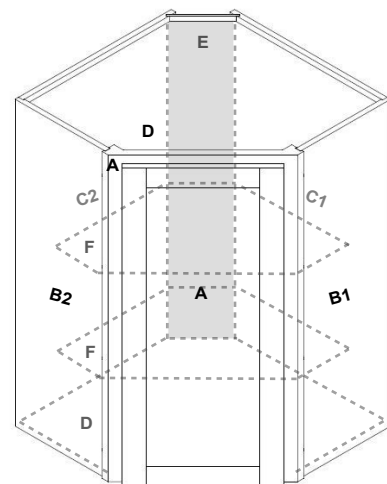

**2. Installing the Front Side Panels (B1 & B2):** Insert the right and left front side panels into the grooves of face frame (A) and align the cam lock connectors (Figure 2). Lock the cam lock with a screwdriver by turning the screw 180° clockwise (Figure 3)

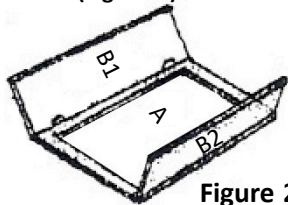


Figure 2

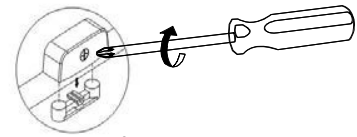


Figure 3

**3. Installing the Top and Bottom (Figure 4):** Gently spread side panels and insert top & bottom panels (D) into the grooves of side panels (B1 & B2) until it touches the face frame (A). Well align it and lock each cam.

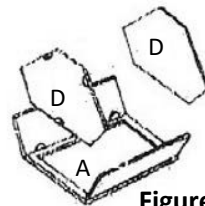


Figure 4

**4. Installing the Rear Side Panels B-2 (Figure 5)** Position the rear side panels (C1 & C2) so that the panel connectors align to the top panel (D), bottom panel (D), and front side panels (B1 & B2). Gently work the panels into position. Make sure that it fits well and lock the cam lock connectors. (Figure 3)

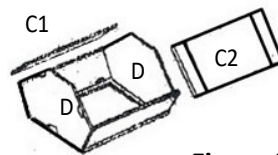


Figure 5

**5. Installing the Back Panel (Figure 6):** Slide the back panel (E) into grooves of rear side panels (C1 & C2) Make sure the finished side of panel is towards the inside of the cabinet. Once the back panel is assigned and fitted tight, secure it with 1" Back Panel Screws (c) into the pre-drilled holes on the back panel (Figure 7).

c  
Qty 4

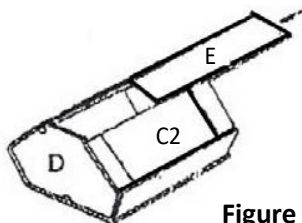


Figure 6


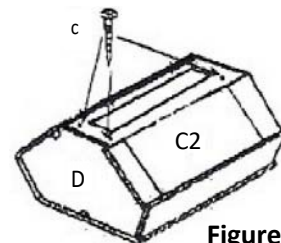


Figure 7

**6. Installing the corner braces (Figure 8):** Place the corner braces (f) on each top front corner and bottom front corner of the cabinet and secure them with 1/2" corner brace screws (b). Attach corner braces (g) where needed.

b      f      g  
Qty 20   Qty 4   Qty 6

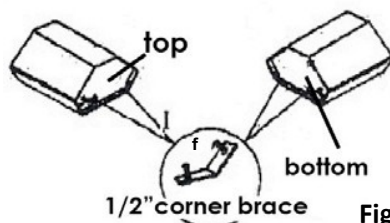

1/2" corner brace      Figure 8

**7. Insert the shelf clips (h) into the adjustable shelf holes in the cabinet side panels at the desired heights and slide in the shelves. Attach the round bumpers (a) to the inside of the door where it touches the frame.**

h      a  
Qty 8      Qty 2

d      e      (d) and (e) are for attaching the cabinet to the wall.  
Qty 8      Qty 8

**► Maintenance**

For daily cleaning, use a dry cloth and a soft liquid cleaner.

Never use abrasive cleaners containing acetone, chlorine or strong bleach. Also, do not use tools as scrapers, metallic brushes, and other products which can scratch or tarnish surfaces.

Under no circumstances should you use chrome cleaner on chrome-plated or brass trim, hinges, handles, sockets etc.

Good ventilation is essential for maintaining the quality and look of this furniture.

**Warranty and Customer Care Information**

For the most up to date warranty information for your product, please visit our website - [www.cabinetstogo.com](http://www.cabinetstogo.com) to get the specific details. If you have any questions with warranties or to make a claim, please contact Customer Care by email - [customer care@cabinetstogo.com](mailto:customer care@cabinetstogo.com) or call 1-800-CABINET.