




# Base Cabinet ASSEMBLY INSTRUCTIONS



These assembly instructions are only applicable for Base Cabinets
CBD36

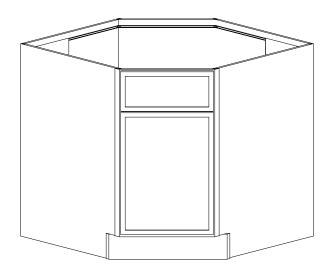

ATTENTION: For questions or concerns about your cabinets, assembly or installation, please contact our dedicated Customer Care Team at 1-800-CABINET (222-4638). Our Customer Care associates are here for you every step of the way.



### ► General Instructions:

Thank you for purchasing a Cabinets To Go product. You are now the proud owner of a high quality product designed to face the test of daily use and guaranteeing your enjoyment for many years to come.

Carefully read the instructions before starting the installation.

During assembly, please follow all generally accepted safety procedures.

Failure to adhere to the following instructions will invalidate the warranty and Cabinets To Go will decline any responsibility


Before the assembly begins, check that all appropriate and required plumbing and electrical connections exist.

Before drilling, make absolutely sure that there are no pipes (gas, water, electricity, heating, etc.) at the drilling location. Cabinets To Go will not be held responsible for failure to follow thể instructions.

PRIOR TO ASSEMBLY, PLEASE MAKE SURE YOU HAVE ONE FACE FRAME BOX AND ONE CARCASS BOX, WHICH HAVE ALL THE PART IN THE QUANTITIES MENTIONED BELOW. IF YOU ARE MISSING ANY PARTS, PLEASE STOP AND CONTACT CUSTOMER CARE IMMEDIATELY AT 1-800-CABINET.


## ► Items Quantity


Item.	Description	Q'ty
A	SIDE PANEL	2
В	BACK PANEL-1	2
С	BACK PANEL-2	1
D	BOTTOM PANEL	1
Е	TOE KICK	1
F	FRAME AND DRAWER FRONT	1
G	CORNER	2
Н	DOOR	1

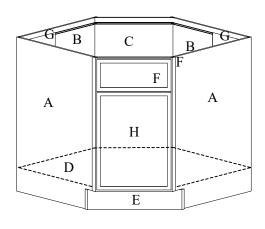

The material above are for the largest unit in this instruction set. Smaller units may require less hardware and material: Therefor, your item may contain a smaller number of each.

## Required tools:






Hardware Box				
No.	Description	Q'ty	Picture	
a	HINGE OVERLAY: 1/2"	2		
b	0.47" FLAT HEAD SCREW	4	(M)	
с	0.75" FLAT HEAD SCREW	2	<b>()</b>	



# ►Instructions:

1. Place the side panel (A) face down on a flat soft working surface to ensure that the face is not scratched or damaged. (Figure 1).

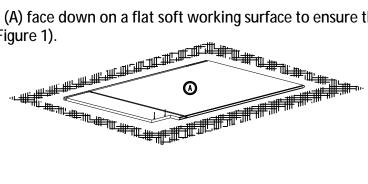

2 Install the Back Panel 1: Insert the back panel-1 (B) into the groove of the side panel (A) and click it into place. (Figure 2)

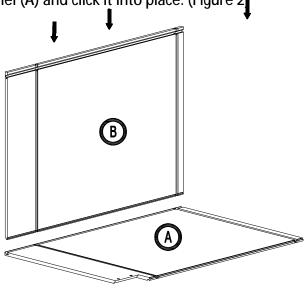


Figure 2

Installing the back panel- 2: Insert the back panel-2 (C) into grooves of back panel (B) & side 3. panel(A). Press down until they click into place. (Figure 3)

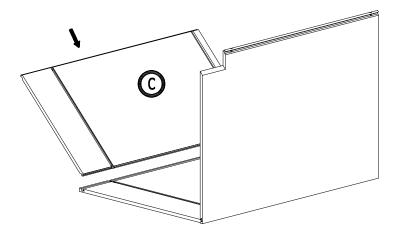


Figure 3



4. Install the bottom panel: Insert the bottom panel (D) into the groove of the side panel (A), back panel (B) and back panel (C). Press down until they click into place. (Figure 4)

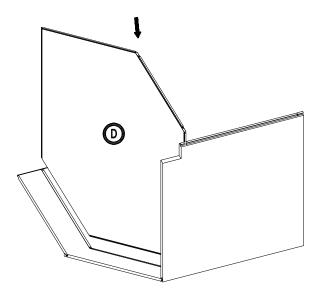


Figure 4

5. Install the side panel: Insert the back panel (B) into the groove of the side panel (A), back panel (B) and back panel (C). Press down until they click into place. (Figure 5)

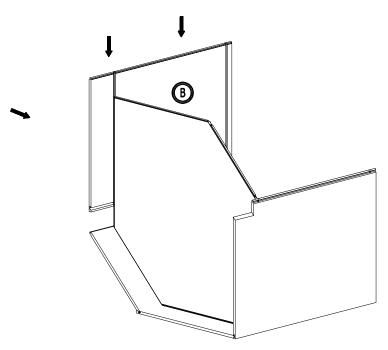


Figure 5



6. Install the toe kick: Insert the Toe kick (E) into the hole of the side panel (A) Press down until they click into place. (Figure 6)


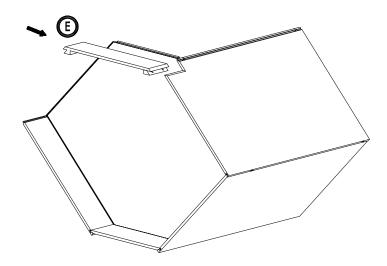


Figure 6

7. Install the side panel: Insert the side panel (A) into the groove of the back panel (B), bottom panel (D) and Toe kick (E). Press down until they click into place (Figure 7)



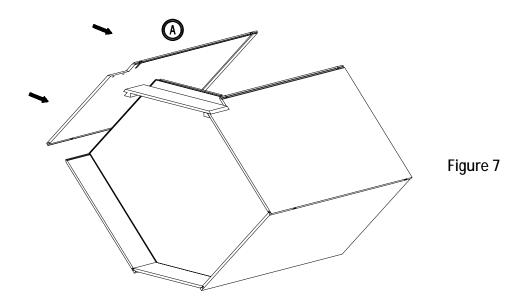

8. Install the corner : Insert the corner (G) into the groove of the side panel (A), back panel (B) . Press down until they click into place (Figure 7)

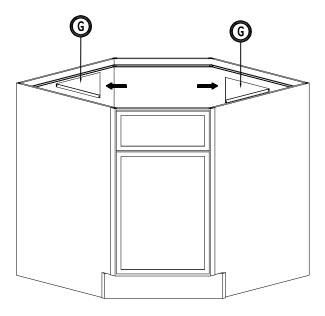


Figure 8

9. Install the frame: Insert the frame with drawer front (F) into the groove of the side panel (A) bottom panel (D). Press down until they click into place. (Figure 6)


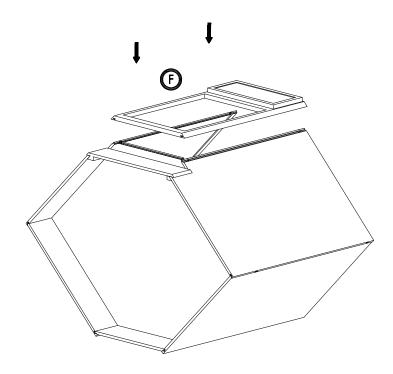



Figure 9



# 10. Assemble 2 hinges into two doors by screwdriver and 4 screw 7/15" (Figure 10)

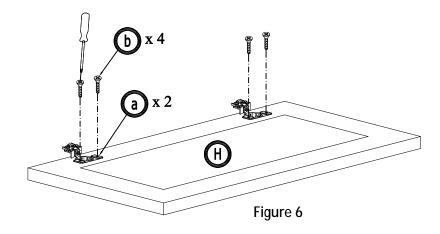

# 11. Assemble door with hinges to lelf or right of cabinet frame by 2 screw 4/5" (Figure 11)

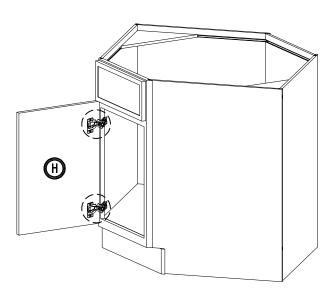





Figure 11



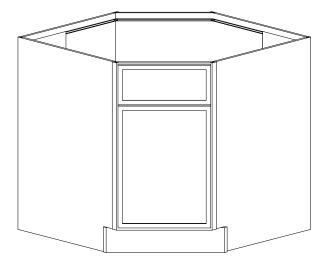

#### ► Maintenance:

For daily cleaning, use a dry cloth and a soft liquid cleaner.

Never use abrasive cleaner containing aceton, chlorine or strong bleach. Also, do not use tool as scrapers, metallic brushes, and other products which canscratch or tarnish surfaces.

Under no circumstances should you use chrome cleaner on chrome-plated or brass trim, hinges, handles, sockets etc.

good ventilation is essential for maintaining the quality and look of this furniture

### **Warranty and Customer Care Information**

For the most up to warranty information for your product, please visit our webside - <a href="www.cabinet.comto">www.cabinet.comto</a> to get the specific details. If you have any questions with warranties or to make a claim, please contact customer care email - <a href="customercare@cabinettogo.com">customercare@cabinettogo.com</a> or call 1-800-CABINET.

