




Lazy Susan Cabinet

ASSEMBLY INSTRUCTIONS

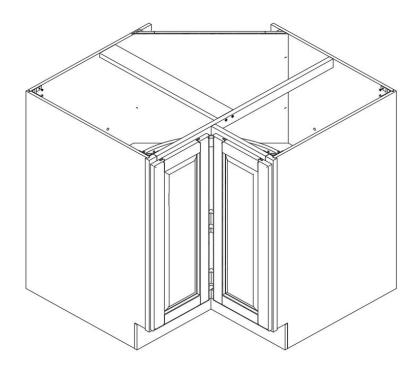

These assembly instructions are applicable for all Lazy Susan Cabinet ONLY.

ITEM #: CB33, CB36



► General Instructions:

Thank you for choosing a Cabinets To Go product. You are now the proud owner of a high quality product designed to face the test of daily use and guaranteeing your enjoyment for many years to come.

Carefully read the instructions before starting the installation.

During assembly, please follow all generally accepted safety procedures.

Failure to adhere to the following instructions will invalidate the warranty and Cabinets To Go will decline any responsibility for any damages caused. Any installation which does not correspond to the instructions may result in defects, malfunctioning parts, significant damage and/or injury.

Before the assembly begins, check that all appropriate and required plumbing and electrical connections exist.

Before drilling, make absolutely sure that there are no pipes (gas, water, electricity, heating, etc.) at the drilling location. Cabinets To Go will not be held responsible for failure to follow these instructions.

PRIOR TO ASSEMBLY, PLEASE MAKE SURE YOU HAVE ONE FACE FRAME BOX AND ONE CARCASS BOX, WHICH HAVE ALL THE PARTS IN THE QUANTITIES MENTIONED BELOW. IF YOU ARE MISSING ANY PARTS, PLEASE STOP AND CONTACT CUSTOMER CARE IMMEDIATELY AT 1-800-CABINET.

▶Items Quantity


Item	Description	Qty
Α	Face Frame	2
В	Side Panels	2
С	Bottom Panel with Lasy Susan	1
E	Back Panel	1
F	Shelf with Lasy Susan	1
G	Toe Kick	2
Н	End Side Panel	2
I	Connecting Panel	1
J	HardwareBox:	1
	135Hinge 2pcs with screws, 165 Hinge2PCS with screws, Plastic corner bracket(K) 4pcs, 1/2" round head screws 12pcs, Shelf clips 8 pcs, 1" screw 18pcs, 1-1/5" Screw 4PCS	
K	Door	2

► RequiredTools:


Screwdriver

►Instructions:


1. Connect the two face frames (A) with 1-1/5" screws (Figure 1).

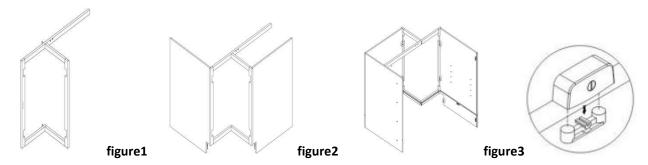


- 2. **Installing the side panels (Figure2)**: Insert the left and right panels(B) into the grooves of the face frame (A) and align the Cam lock connectors.Lock the cam with a screwdriver by turning the screw 180° clock wise.
- 3. **Installing one End side panels (Figure3):** Insert the right end panel(H) into the grooves of the side panel(B) and align the cam lock connectors.
- 4. **Installing the bottom panel(Figure4)**:Gently spread the side panels and insert the bottom (C) into the grooves of the side panels until it touches the face frame (A).Align it and lock each cam.
- 5. Installing the shelf clip (Figure 5) and put the shelf into the cabinet (Figure 6).

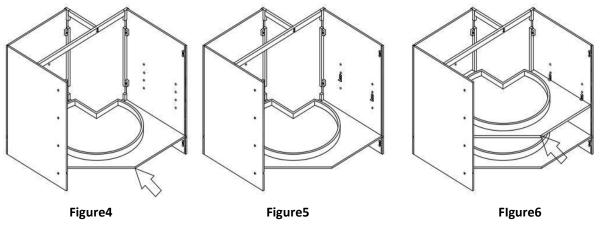

- 6. Installing other end side panel .Align it and lock each cam(figure7).
- 7. Installing the back panel: Connect the back panel(E) and the end side panels(H) with 1"screws (Figure8).

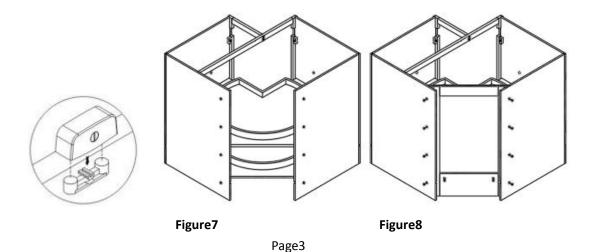

- 8. Use the connecting panel to connect the face frame to the end side panel with 1" screw (Figure9).
- 9. Connect the Toe Kick with 1"Screw(Figure 10). Then install the toe kick on the side panels and lock each cam. (Figure 11)
- 10. Attach hinges and door panels to the face frame(Figure 12).

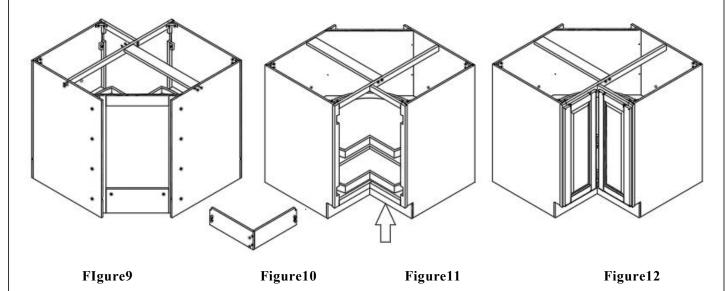

Maintenance

For daily cleaning, use a dry cloth and a soft liquid cleaner.

Never use abrasive cleaners containing acetone, chlorine or strong bleach. Also, do not use tools as scrapers, metallic brushes, and other products which can scratch or tarnish surfaces.

Under no circumstances should you use chrome cleaner on chrome- plated or brass trim, hinges, handles, sockets etc. Good ventilation is essential for maintaining the quality and look of this furniture.

▶ Warranty and Customer Care Information

For the most up to date warranty information for your product, please visit our website - www.cabinetstogo.com to get the specific details. If you have any questions with warranties or to make a claim, please contact Customer Care by email - customercare@cabinetstogo.com or call 1-800-CABINET.