


PROPOSED TOOLS FOR INSTALLATION :

- Grout float
- Glass cutter or
Manual tile cutter or
Wet tile saw with diamond blade

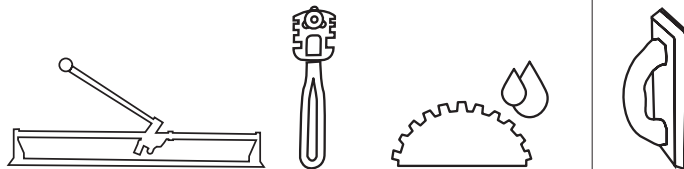

HOW TO INSTALL SPEEDTILES 3 x 6 GLASS MOSAICS :

- 1 Please ensure that the wall where you are installing the SpeedTiles is CLEAN, SMOOTH, LEVELED and NON-POROUS.
- 2 **STICKING TIP: Use a 500 ml to 750 ml bottle filled with water and add 1 to 2 tea spoon(s) of mild dishwashing liquid.**
- 3 Then find the highest countertop point and draw a level line from that point. This line will serve as a guide to install the first row of tiles.
- 4 Place the tile (pre-cut if needed) with the glass side facing the countertop and remove the Innoxia protection paper. Spray a SMALL amount of soapy water mix on the adhesive and spread it with your hand over the whole surface. Adding soapy water will allow you to perfectly adjust the tile on the wall by delaying the bonding time.
- 5 Install the tiles according to the desired layout.
- 6 **OPTIONAL:** Once the tiles are in place, apply the grout of your choice following the manufacturer's instructions.

HOW TO CUT THE GLASS

Use a non-permanent marker to draw a cutting line.

Stick masking tape along the cutting line. The masking tape must be placed on the piece of tile that will be installed.

Cut the surface following the drawn line, according to the instructions for the tool you will be using.

Sand the cut edge (120 grade sandpaper) to soften the edge.


BEFORE INSTALLING!

It is highly recommended to inspect the tiles one by one.

If the installation is done without grout, for best results it is recommended to previously paint the wall in a color similar to that of the tiles.

GAMME D'OUTILS À UTILISER :

- Taloche à coulis
- Coupe-tuiles manuel ou
Coupe-verre ou
Scie à eau avec une lame en diamant

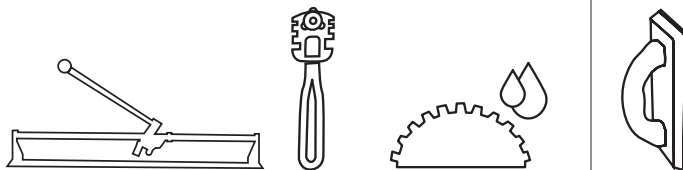

MARCHE À SUIVRE POUR INSTALLER LES SPEEDTILES 3 x 6 EN VERRE :

- 1** Assurez-vous que le mur où vous installez les tuiles SpeedTiles soit **PROPRE, LISSE, de NIVEAU et NON-POREUX.**
- 2** **ASTUCE DE COLLAGE: Prendre une bouteille entre 500 ml et 750 ml, la remplir d'eau et y ajouter 1 à 2 cuillère(s) à thé de savon à vaisselle doux.**
- 3** Trouver ensuite l'endroit où le comptoir est le plus haut, puis tracer une ligne de niveau à partir de ce point. Cette ligne servira de guide pour installer la première rangée de tuile.
- 4** Déposer la tuile du côté verre (pré-coupée si nécessaire) face au comptoir et retirer le papier protecteur Inoxia. Vaporiser une PETITE quantité du mélange d'eau savonneuse sur l'adhésif et le répandre avec votre main sur toute la surface. Ajouter l'eau savonneuse vous permettra d'ajuster parfaitement la tuile au mur en retardant l'adhésion.
- 5** Installer les tuiles selon l'agencement désiré.
- 6** **OPTIONEL:** Une fois les mosaïques en place, appliquer le coulis de votre choix tout en suivant les instructions du fabricant.

MARCHE À SUIVRE POUR COUPER LE VERRE

À l'aide d'un marqueur non permanent, tracer la ligne de coupe.

Coller un ruban à masquer le long de la ligne de coupe. Le ruban à masquer doit être sur la partie de tuile qui sera installée.

Effectuer la coupe de surface sur la ligne tracée selon la marche à suivre de l'outil choisi.

Sabler la bordure coupée (Papier sablé grade 120) pour adoucir le tranchant de la coupe.

PRÉALABLE À L'INSTALLATION!

Il est fortement recommandé d'inspecter chaque tuile individuellement.

Si l'installation est faite sans coulis, pour de meilleurs résultats il est recommandé de préalablement peindre le mur d'une couleur similaire à celle des tuiles.