



INSTALLATION INSTRUCTIONS CENTER CONSOLE DECK VINYL KIT

Please read these installation instructions BEFORE you attempt to apply the vinyl kit.

Installation of an EVANNEX® Vinyl Kit is a moderately challenging DIY project. It requires care, a steady hand, the ability to follow instructions, and the patience to remove and reapply the vinyl, if required. If you're uncomfortable with Vinyl Kit installation for any reason, we recommend that you contact a professional vinyl installer at a automotive custom shop or window tinting outlet and have that person do the installation.

VERY IMPORTANT: If you're unfamiliar with vinyl installation, please read the **GENERIC GUIDELINES FOR APPLYING EVANNEX VINYL FILMS** before you attempt to install this vinyl kit, including information about **Returns** and our **Damage Disclaimer**. A **GENERAL GUIDELINES** video is available at our Installation Tab.

INSTALLATION:

Video installation instructions are available at evannex.com.

Please apply the vinyl pieces in the order indicated below.

1. Phone Cover Door

Step 1. Select the vinyl wrap piece for the Phone Cover Door. To make your work easier, first fold down the Center Console Storage Door.

Step 2. Align the dashed edge running from 1 to 2 along the lower edge of the Phone Cover Door.


Step 3. Working rear to front, smooth the wrap surface being sure to remove air bubbles. Be certain the the folds (dashed lines) running from 1 to 3 and 2 to 4 align with the edges of the Phone Cover Door.

Step 4. Be sure edge 8 to 9 aligns with the back edge of the door.

Step 6. Fold flap 7 along edge 1 to 3 and flap 6 along edge 2 to 4. Do the same for flaps running along folds 3 to 9 and 4 to 8. Use your squeegee to assist in tight places.

Step 7. Fold flap 5 along fold 1 to 2.

Step 8. (Optional) Use a hair drier to heat the folds gently to promote pliability and adhesion.

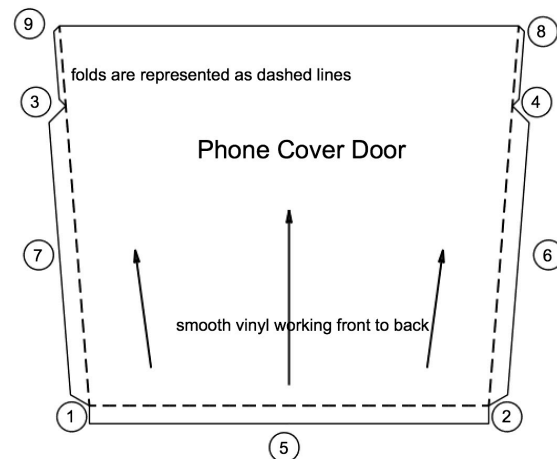

EVannex® — Tesla Aftermarket Accessories

3413 SW 14th Street •• Deerfield Beach, FL 33442 •• www.evannex.com

Disclaimer: Evannex is not responsible for any vehicle damage caused during the installation or use of this product. Any costs associated with any vehicle damage are the sole responsibility of the purchaser.

2. Storage Door

Step 1. Select the vinyl wrap piece for the Storage Door. To make your work easier, fold up the Phone Cover Door before you start.

Step 2. Align the dashed edge 1 - 2 along the lower edge of the Storage Door.


Step 3. Working rear to front, smooth the wrap surface being sure to remove air bubbles. Be certain that the left- and right-side edges and the folds (dashed lines) for flaps 6, 7 and 8 align with the edges of the Storage Door.

Step 4. Be sure dashed edge 3 to 4 aligns with the back of the door.

Step 5. Fold flaps 6 and 7 along their edge, and flap 8 along the edge running from 3 to 4.

Step 6. With the storage door closed, fold flap 5 along fold 1 to 2. Use your squeegee to force edge 5 downward and into place.

Step 7. (Optional) use a blow drier to heat the folds gently to promote pliability and adhesion.

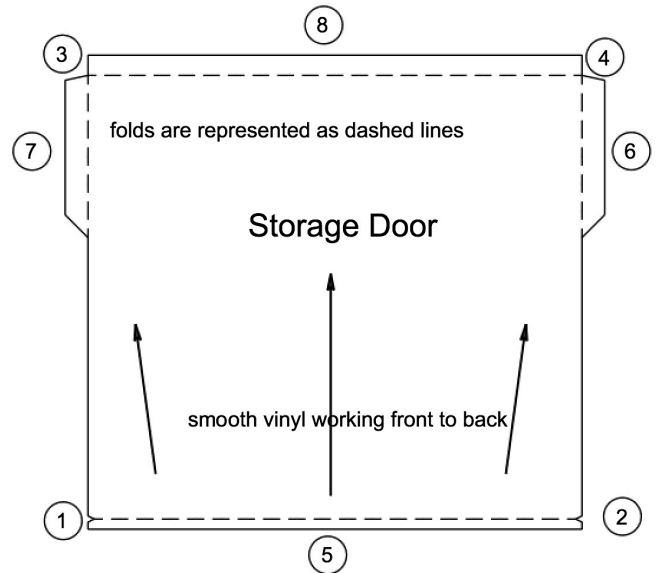

3. Cup Holder Deck

Step 1. Select the vinyl wrap piece for the CupHolder Deck. Fold down the Storage Door before you start.


Step 2. Optional: Remove the backing of the vinyl piece above the section line shown. Leave the remained backing attached until Steps 3 and 4 are complete.

Step 3. Align edge 1 with the inside chrome ring of the cup holder. Align edge 4 with the inside chrome ring of the cup holder. Be sure that edges 5 and 6 and 7 and 8 are also aligned. Starting at edge 1, move around edge 2 and 3, aligning the vinyl to the edge of the chrome ring on the circumference. We strongly recommended that you use hair drier to gently heat the vinyl in this area,

making it more pliable and easier to properly fit and adhere.

Step 4. Moving toward the front, smooth the vinyl adjacent to edges 1, 2 and 3, being sure to align the edges 5 to 6 and 7 to 8. Use your squeegee to tuck the edges into the gaps at the sides of the cupholder deck. You can pull the OEM trim outward slightly to make this easier.

Step 5. Remove the remaining backing and smooth the vinyl toward the rear adjacent to edges 2, 3 and 4, being sure the align the edges 5 to 6 and 7 to 8. Use your squeegee to tuck the edges into the gaps at the sides of the cupholder deck.

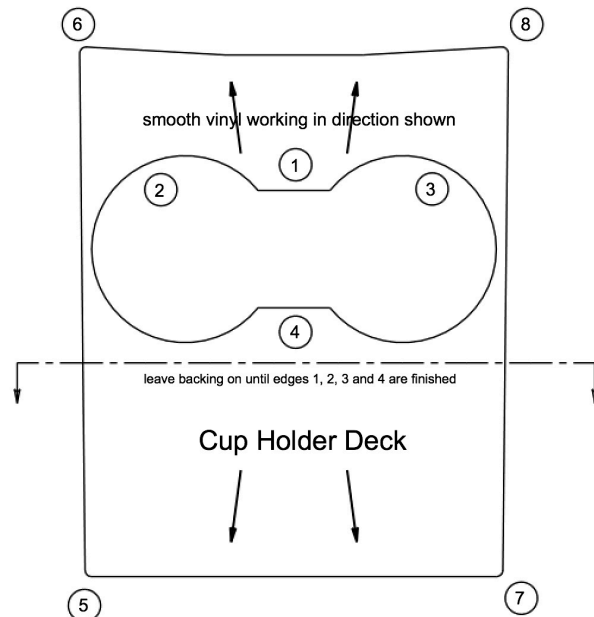



Your installation is now complete.

EVannex® — Tesla Aftermarket Accessories

3413 SW 14th Street •• Deerfield Beach, FL 33442 •• www.evannex.com

Disclaimer: EVannex is not responsible for any vehicle damage caused during the installation or use of this product.
Any costs associated with any vehicle damage are the sole responsibility of the purchaser.