

VENTSTOP Installation

Vent Covers

Pre-Install Tip: Run fan for 30 minutes to remove any moisture

Step 1: Cut Velcro fastener:


- > Cut Velcro into four lengths, one for each side of vent, so it will join tightly at each corner of vent frame (Velcro is $\frac{3}{4}$ " wide.)
- > **DO NOT** separate Hook tape from Loop tape

Step 2: Apply Velcro fastener to vent frame:


- > **Clean and dry vent frame before applying Velcro!**
- > Peel adhesive film from the **HOOK SIDE** (hard side of Velcro) and adhere to the *flat surface of the vent's outer frame*, **keeping Hook & Loop tapes together** – follow green lines pictured below. *Tip: apply Velcro to meet tightly at corners with no overlap. Velcro can go over screws.*

Step 3: Apply VentSTOP Vent Cover, **white side facing you**:

- > Peel adhesive film from the Loop side (soft side of Velcro), now on vent
- > Apply cover to vent, *keeping it straight and in line with vent. Press firmly all around cover* to ensure proper adhesion and *let bond overnight*

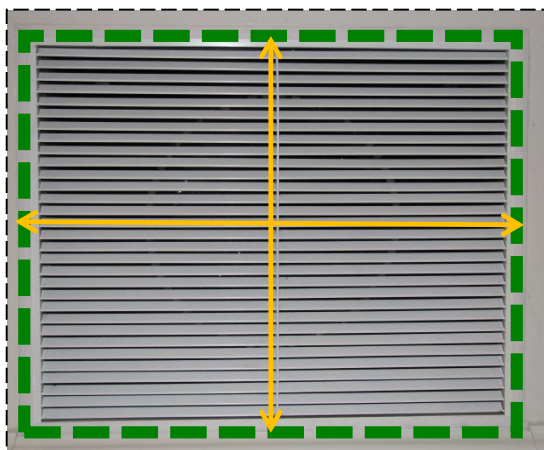

CAC Return or Fan Vent

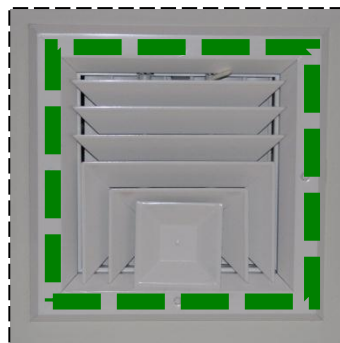

CAC Register

Required Tools



or



Completed Installation

If TRIMMING VentSTOP Cover is required:

1. Follow the three installation steps **FIRST**
2. Remove cover from vent (don't pull too hard)
3. Cut around Velcro on cover & reapply to vent

To use as an AIR DEFLECTOR/REDIRECTOR:

- > Don't attach one (or two) sides of VentSTOP

VentSTOP Removal:

- > Wait 12 hours after initial installation
- > Pull gently, starting from a corner of the vent

VentSTOP Storage when not in use:

- > Retain packing materials for storage
- > Roll larger covers

Questions? Email: support@ventstop.com