


## Extreme Duty Flat Slide Installation Instruction:

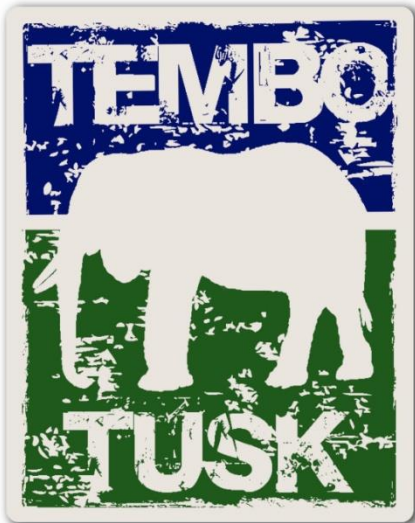

For installation, use either 5/16" or 8mm size bolts to secure the slide to the vehicle. If going through the floor, use a good size washer under the floor to prevent the nut from pulling through the sheet metal. Use either a rubber washer or silicone to seal the hole.

Some customers have located factory threaded holes in the floor of the cargo area and have fashioned a false floor with plywood or metal and bolted the slide base to the false floor. Never use screws or Nutserts to fasten the slide; always use a nut and bolt.

For the installation procedure; place the slide where you want it in the vehicle. Extend the slide pan out a few inches to locate the back holes in the base of the slide. Use the slide base as a template. Drill the first hole and put a bolt through to anchor the base of the slide. Check the alignment of the slide again and drill through the second rear hole in the slide base. Install a bolt.

With the rear holes secured; extend the slide pan out to expose the front holes. Drill and secure the front holes. Tighten all the bolts and extend the slide out to test clearance. If the slide pan does not clear the tailgate or other cargo area obstruction; put wood or metal spacers under the slide. (Before drilling, check the location of your gas tank and spare tire.)

Should you have any issues or question with the slide, please don't hesitate to call or email.

Enjoy your new **Extreme Duty TemboTusk Slide!**

Jerry L'Ecuyer  
TemboTusk, Llc.  
714 396-4549  
[info@TemboTusk.com](mailto:info@TemboTusk.com)  
[www.TemboTusk.com](http://www.TemboTusk.com)  
[www.Facebook.com/TemboTusk](https://www.Facebook.com/TemboTusk)

