

Soplie All pot

# Made To Measure BLINDS BUYING & FITTING GUIDE

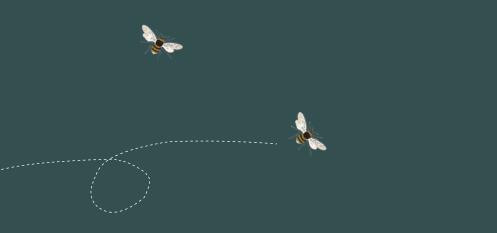

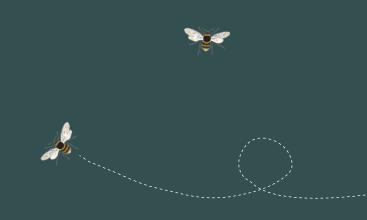

## Contents



How to select and choose the right blind for you	. 03
Choosing your style and material type	. 04
Choosing your setting and hardware features - Roman	. 05
Choosing your setting and hardware features - Roller	. 06
Measuring your blinds - Windows	. 07
Measuring your blinds - Square Bay Windows	. 08
Measuring your blinds - Angled Bay Windows	. 09
Helpful Tips	. 10



Soplie All pot :

## 03 - How to select and choose the right blind for you



Our Made to Measure blinds are custom made to your window measurements for the perfect fit.

We offer a selection of different blind types in our beautiful Sophie Allport prints.

Our blind types include Roman and Roller with a choice of blind style, head rail, setting, hardware, fabric type for Rollers and lining types for Romans.

Blind Type - Roman						
	BLIND STYLE	BLIND HEAD RAIL	BLIND LINING	BLIND SETTING		
प्रचरी जो प्रचरी जो	STACKED	CASSETTE	POLYCOTTON	EXACT		
	CASCADE	CLASSIC	PREMIUM SATIN	RECESS		
			BLACKOUT			
			THERMAL			
			BONDED PREMIUM SATIN			
			BONDED BLACKOUT			

Blind Type - Roller						
	BLIND STYLE	BLIND HEAD RAIL	BLIND MATERIAL	BLIND SETTING		
	ROLLER	CASSETTE	TRANSLUCENT	EXACT		
		CLASSIC	BLACKOUT	RECESS		
			WATERPROOF			

Blinds Child Safety Awareness: Keep all cords and chains out of reach of children using the safety hook, which has been provided for you. Loose cords or chains should never be tied together. Furniture that children could climb on should be kept away from your windows.



# 04 - Choosing your style and material type

We offer two Roman styles:

- Stacked when the blind is fully open all panels sit neatly behind each other.
- Cascade- when the blind is fully open the panels are stepped to create a waterfall effect.

Roller blinds are rolled out to open and close.

Both \*Roman and \*Roller blinds sit flat when fully extended and come with a choice of material and lining options, see below for min and max measurements.



Min and Max measurements \*Roman width 600 - 2600mm - drop 600 - 4000mm





Min and Max measurements \*Roller width 600 - 2800mm - drop 600 - 4000mm

Soplie All pot

## 05 - Choosing your setting and hardware features - Roman



- Choose your blind setting either Exact, with the blind fixed outside the recess or Recess, with the blind fixed inside the recess.
- Roman head rail styles that include cassette or classic in anthracite, silver and white.
- 3 colour options for the control chain nickel, brass or white which can be positioned on the left or right side.




Soplie All port

## 06 - Choosing your setting and hardware features - Roller



- Choose your blind setting either Exact, with the blind fixed outside the recess or Recess, with the blind fixed inside the recess.
- Roller blind head rail styles that include cassette or classic in anthracite, silver and white.
- 3 colour options for the control chain nickel, brass or white which can be positioned on the left or right side.
- 3 colour options for the Roller bottom bar anthracite, silver or white finish.

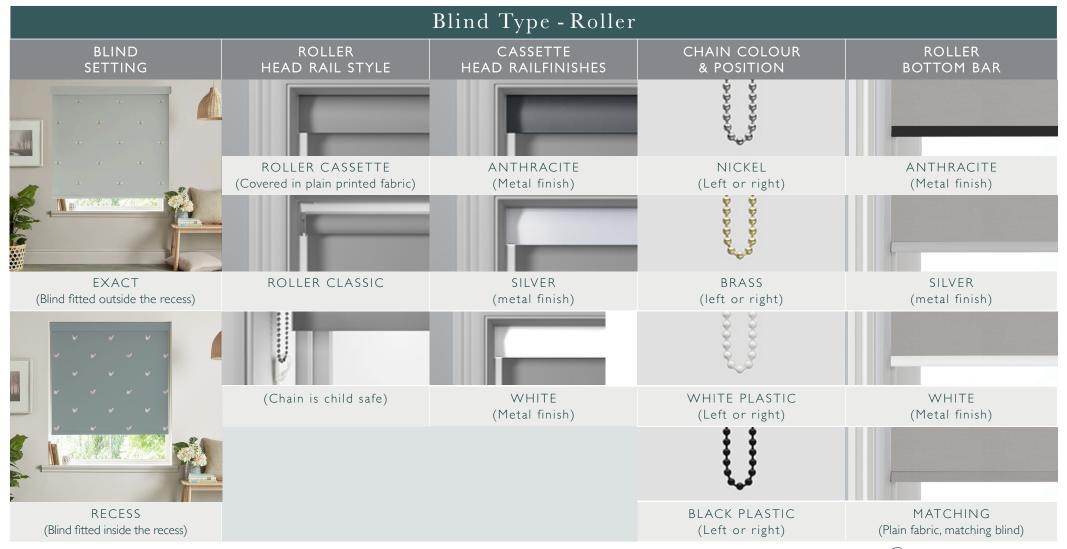

Soplie All port

# 07 - Measuring your blinds


#### **MEASURING TIPS**


TOOLS REQUIRED: Metal Measuring Tape, Pen & Paper

- 1. Record measurements in mm, start with the width first and then the drop.
- 2. Measurements must be exact. We will make the necessary allowances for a correct fit.
- 3. Re-check your measurements to check accuracy.

#### **RECESS**


- **STEP I.** Measure at 3 horizontal points shown in (fig I).
- STEP 2. Measure at 3 vertical points shown in (fig 2).
- STEP 3. Record the smallest dimensions as the recess size (e.g. in fig I your width will be 918mm and your drop measurement 993mm in fig 2).
- **NOTE:** We will make the appropriate adjustments to make sure the blind fits perfectly in the recess (please note that this includes a deduction of up to 10-12mm on the width and drop entered).

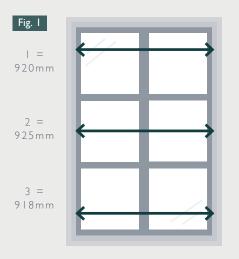

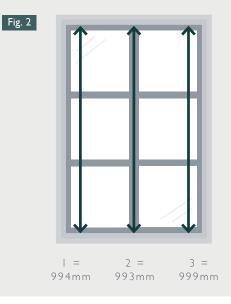

#### **EXACT**

- **STEP I.** Decide where you want to fit the blinds on your wall, then measure at 3 horizontal, points shown in (fig 3).
- STEP 2. Measure at 3 vertical points shown in (fig 3).
- **STEP 3.** Record the largest dimensions for each side. (E.g. in fig 3 your width will be 925mm and drop measurement 999mm).

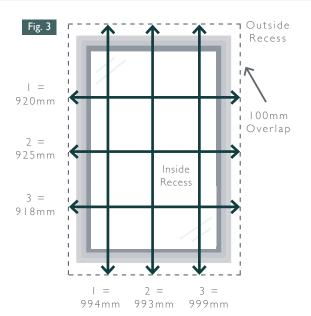



Soplie All pot

- 1. Record measurements in mm, start with the width first and then the drop.
- 2. Measurements must be exact. We will make the necessary allowances for a correct fit.
- 3. Re-check your measurements to check accuracy.

## SQUARE BAY WINDOWS (FOLLOW THE STEP BY STEP GUIDE)

STEP I. Find the head rail depth of your chosen blind in the chart below.

HEAD RAIL DEPTHS				
ROLLER CLASSIC	64MM			
ROLLER CASSETTE	80MM			
roman classic	48 M M			
roman cassette	80MM			

STEP 2. Measure the central window measurement (A) from left to right and deduct the head rail depth twice from this measurement E.g. for Roller classic deduct 128mm from measurement (A).



- STEP 3. Measure sides (B and C) into the back corners of the bay.

  This will be the width of the rail.
- **STEP 4.** Deduct the head rail depth off measurement (B and C). E.g. for Roller classic, deduct 64mm from each measurement.
- **STEP 5.** For the drop, measure from where you want the top of the blind to be, to where you want it to finish.
- **STEP 6.** Order all blinds as an exact measurement. E.g. To the nearest whole mm

**NOTE:** If the window handles protrude, take the measurement of the projection and add to each measurement A, B and C (if applicable).

TIP: For both the width and drop measurements, measure in three places for each window. For the width, measure top, middle and bottom. For the drop measure left, middle and right. Your window might not be even, so always give us the smallest measurement.





# 09 - Measuring your blinds

### MEASURING TIPS TOOLS REQUIRED: Metal Measuring Tape, Pen & Paper


- 1. Record measurements in mm, start with the width first and then the drop.
- 2. Measurements must be exact. We will make the necessary allowances for a correct fit.
- 3. Re-check your measurements to check accuracy.

## ANGLED BAY WINDOWS (FOLLOW THE STEP BY STEP GUIDE)


STEP I. Find the head rail depth of your chosen blind in the chart below.

HEAD RAIL DEPTHS				
ROLLER CLASSIC	64MM			
ROLLER CASSETTE	80MM			
ROMAN CLASSIC	48MM			
roman cassette	80MM			


**STEP 2.** Place two pieces of paper together. Using the head rail depth as your measurement, mark each piece of paper with a line in the same position.



**STEP 3.** Position your pieces of paper on the window sill and ensure both line marks meet up as shown.



- **STEP 4.** Using a pencil, mark the window sill where the edge of the paper meets the sill.
- STEP 5. Do this for both corners of the bay.

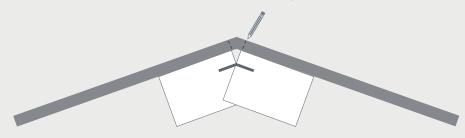

STEP 6. Measure between each section as shown below. This will determine the width of each blind needed. All blinds should be ordered as exact (A, B & C measurements).



**STEP 7.** For the drop, measure from where you want the top of the blind to be down to the sill or the floor.



Soplie All port:

## 10 - Helpful tips

#### ROMAN BLIND

- I. Roman blinds can be dry cleaned, just remove all horizontal rods and the bottom bar before dry cleaning.
- 2. Roman blinds may have creasing/pressure marks due to the packaging process these should disappear over time.
- 3. If any creases do not fall out over time we recommend using a steamer to ensure your Roman Blinds look their best. Be cautious not to use excessive pressure as this may distort the fabric.

#### ROLLER BLIND

- I. All Roller blind material can be gently sponge cleaned.
- 2. Roller blinds are the perfect choice for kitchens and bathrooms as they are available in our waterproof finish which is moisture resistant.





Blinds Child Safety Awareness: Keep all cords and chains out of reach of children using the safety hook, which has been provided for you. Loose cords or chains should never be tied together. Furniture that children could climb on should be kept away from your windows.

All blinds are made to measure to the dimensions provided at the time of ordering. Refunds and exchanges cannot be given on any made to measure blinds that have been incorrectly ordered unless deemed faulty.

Soplie All pot: