
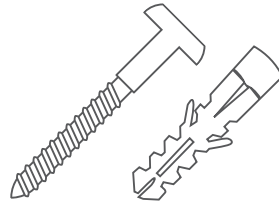


# Ramada Leaning Art Instructions

## What's Provided

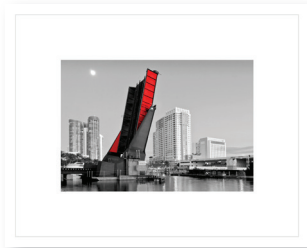

1. Art

2. T-screws and anchors


3. Wood block with French cleat

Note: Installer to provide the correct screws to use with the wood block and wood shelf.

## Step Details

1. Place wood block with French cleat in reference to the elevations\* in our guidelines below.
2. The back of the artwork has a French Cleat on the bottom of the frame. Insert the cleat on the back of the frame into the cleat on the wood block.
3. Put the wood block on the shelf so that when the artwork is tilted, the frame does not protrude past the edge of the shelf.
4. Remove the art without moving the wood block.
5. Screw the wood block into the shelf.
6. Place the artwork back onto the cleat of the wood block and mark where the locking hardware needs to be placed on the wall.
7. Remove artwork and set aside.
8. Install wall portion of locking hardware into the wall.
9. Place the artwork back onto the cleat of the wood block, lean artwork to wall and secure into place.

### ELEVATION AT HEADBOARD WALL\*

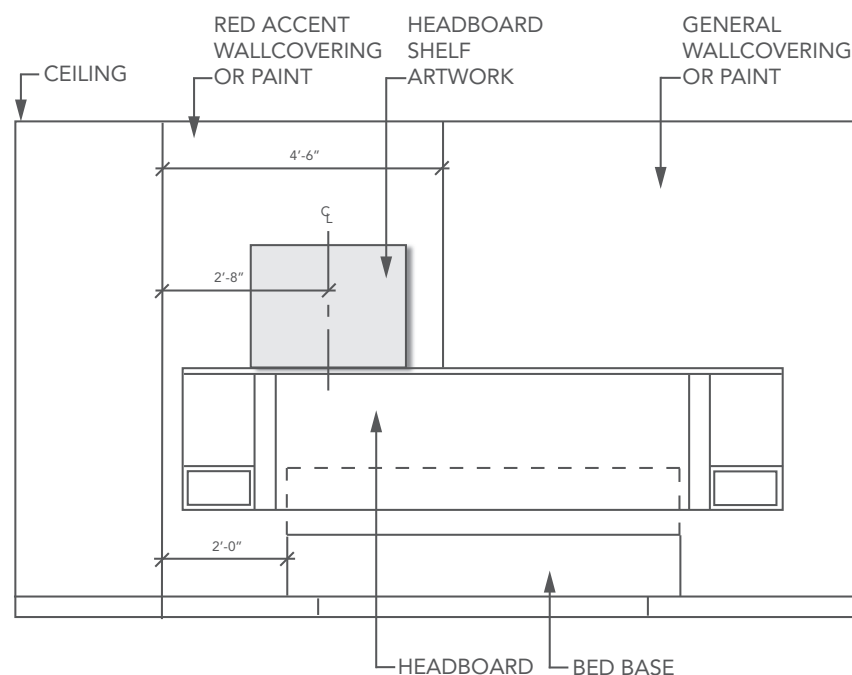

\*Note: Elevation is for example only, headboard locations may vary.