



TORI MURPHY

WOVEN & MADE IN ENGLAND

*Made To Measure
Curtains & Blinds*

MADE TO MEASURE GUIDE 2023

WWW.TORIMURPHY.COM



About Us

Tori Murphy is an English textile brand dedicated to creating thoughtful, timeless products for the modern family home. Rooted in designer/founder Tori's contemporary approach to pattern and commitment to English craftsmanship, fabric is woven in Lancashire, washed in the Yorkshire Dales, and made into product in the East Midlands. Pared back, elegant, endlessly versatile and eminently livable, Tori Murphy curtains & blinds are the essence of relaxed English style, comfort and tradition.

Whether looking for a simple roman blind, or a luxurious gathered and insulating ceiling-to-floor, flop-over frill door curtain, choosing window treatments can be a daunting process but our helpful measuring guide and award winning 14 working day Made To Measure service is designed to hold your hand every step of the way.



Our *Made To Measure* Service

Choose from our edited selection of Tori Murphy fabrics for a 14 working day service. Call us for bespoke projects with access to the full collection. Ordering online is simple, with straightforward measuring guides or in-house estimators who can talk you through your requirements via telephone or video call.



Made to measure consists of:

- Curtains and blinds made to your size and specification.
- A choice of linings.
- A choice of curtain heading styles including: **3" Pencil Pleat, 6" Pencil Pleat, Double Pinch Pleat, Triple Pinch Pleat, Cottage Pleat, Flop Over Frill, Cafe Style, Dresser style and Double Rod Pocket** and a choice of **Roman or Relaxed Blinds**.
- A choice of trim
- Pelmet & tie backs

How to place an order?

- Measure for your curtains or blinds using the measuring guide found on page 6-8.
- Select your Tori Murphy Fabric.
- Pick a header if buying curtains or choose a chain colour if buying Roman or Relaxed blinds.
- Choose from a selection of linings including smart double sided Tori Murphy fabric options.



How To Measure For Pinch Pleat & Pencil Pleat Curtains



Measuring the width

Already have a pole or track?

Measure the width of the pole between any decorative finials or end caps OR the width of your track.

No pole or track in place?

Measure the width of the window reveal, then add to this how far you would like your curtains to run past each side of the window reveal.

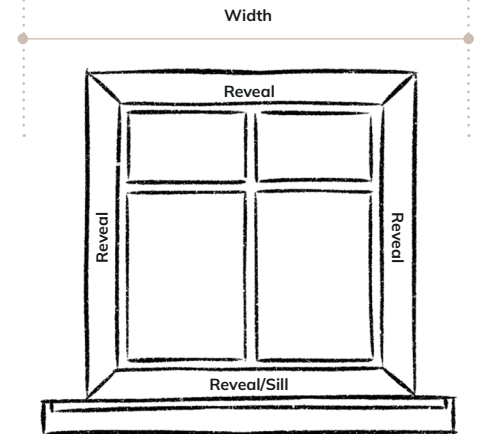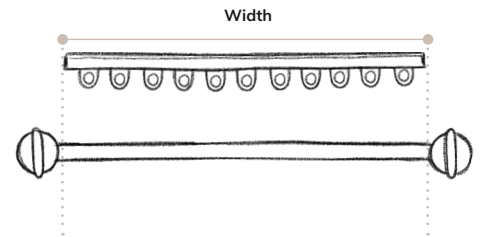

6

Measuring the drop (length)

What length of curtain will suit your windows? Do you want them to finish at the sill, below the sill or fall to the floor?


If you are using a curtain track:

To the sill: Measure from the top of the track to 1cm above the sill.

Below the sill: Measure from the top of the track to the required length below the sill (usually 15 - 20cm). If you have a radiator below your sill, measure to 3cm above the radiator.

To the floor: Measure from the top of the track to 1.5cm above the floor. This prevents the curtain dragging on the floor or becoming soiled or damaged.

If you want your curtains to drape on to the floor, add to this measurement how far you would like your curtains to drape.

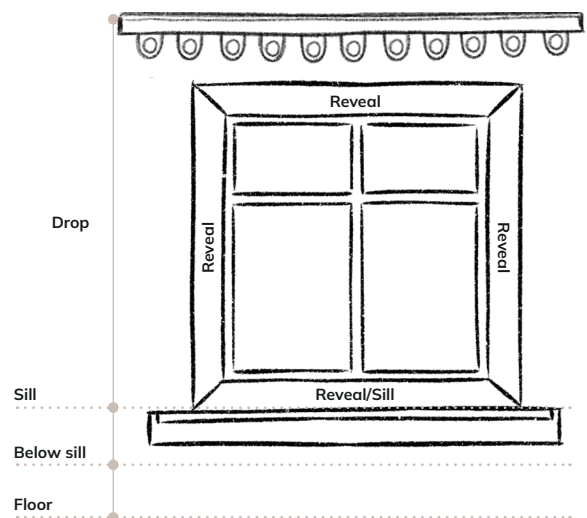

*What is a window reveal? A window reveal is the area surrounding a window which creates the opening in the wall, usually with a timber window sill at its base. A measurement for height (drop) would be taken between the top surface of the sill to the underside of the top (horizontal) surface. A measurement for width would be taken between the left and right hand side of the vertical surfaces.


If you are using a curtain pole:

To the sill: Measure from the underside of the pole ring to 1cm above the sill.

Below the sill: Measure from the underside of the pole ring to the required length below the sill (usually 15 - 20cm). If you have a radiator below your sill, measure to 3cm above the radiator.

To the floor: Measure from the underside of the pole ring to 1.5cm above the floor. This prevents the curtain dragging on the floor or becoming soiled or damaged.

If you want your curtains to drape on to the floor, add to this measurement how far you would like your curtains to drape.

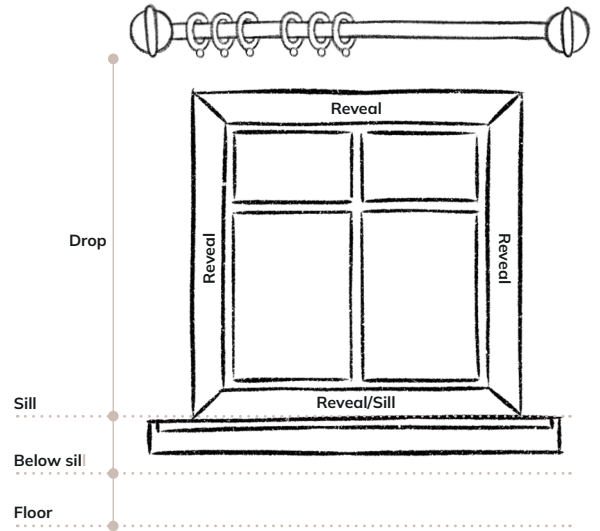

How to measure for Cottage Pleat

Measure as you would for Pinch or Pencil Pleat and then choose if you would like the gathered pleat to stand 5cm or 10cm above the curtain ring eyelet.

How to measure for Flop Over Frill

Measure as you would for Pinch or Pencil Pleat and then choose the depth of the flop over frill. You can order up to 30cm deep online, for anything deeper please get in touch madetomeasure@torimurphy.com

7
|



*What is a window reveal? A window reveal is the area surrounding a window which creates the opening in the wall, usually with a timber window sill at its base. A measurement for height (drop) would be taken between the top surface of the sill to the underside of the top (horizontal) surface. A measurement for width would be taken between the left and right hand side of the vertical surfaces.



How To Measure for *Rod Pocket Curtains*

Introducing our Rod Pocket curtains styles to help you create cosy nooks, beautiful Café curtains, stunning storage solutions, and much more.

Choose from 3 styles including simple Café style, our Dresser style with an attractive upstand and double rod pocket curtains. These clever curtains come with a standard 3.5cm rod pocket so you can simply slide on to your rod or pole and gather up to make a timeless solution. All rod pocket curtains come with a standard 1.5 width gather to give an elegant fullness and are unlined.

For any specific requirements please get in touch madetomeasure@torimurphy.com

Café Style

Ideal for tighter spaces or a simple look.

Measure drop in cm from the top of the pole to the base/floor. Your width measurement is taken from the end of the pole or rod to the other.


Dresser Style

Suitable for all uses for a more decorative look. Measure your drop in cm from the top of the pole to the sill or base/floor. No need to include the upstand, we will automatically add a 2.5cm upstand which is additional to the drop). Your width measurement is taken from the end of the pole or rod to the other.


Double Rod Pocket

A great solution for glass internal doors, pantries and wardrobes. Measure drop in cm from the top of the pole/fixture to the bottom of the lower pole/fixture. Your width measurement is taken from the end of the pole or rod to the other.


— Café Style

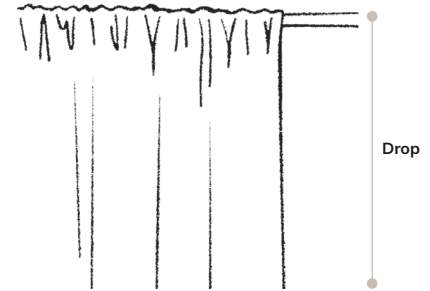

— Dresser Style

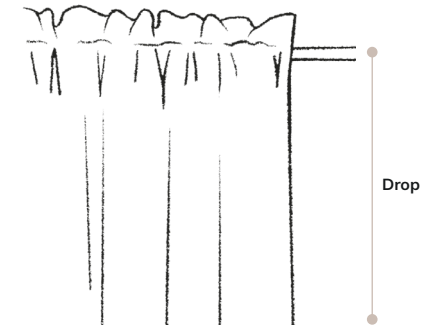


— Double Rod Pocket

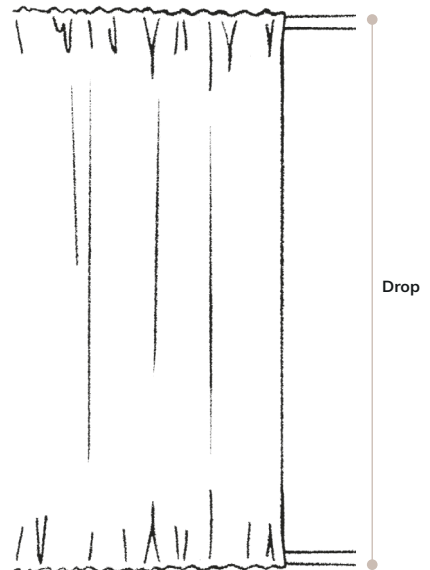


How To Measure *Blinds*

Choose from classic
Roman or Relaxed style

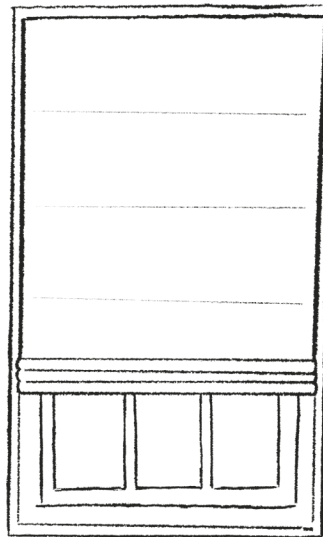

Roman

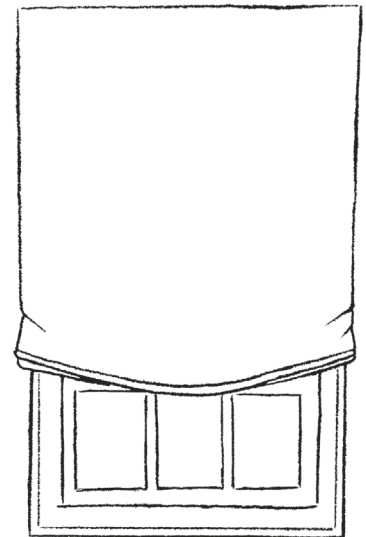

Relaxed

Measuring the width


Decide whether or not you want your blind to fit inside the window reveal or outside the window reveal.

Outside the window reveal:

Measure the width of the window reveal and add to this how far you would like your blind to run past each side of the window reveal. To minimise light leakage we recommend that the blind overlaps the window recess by a minimum of 7cm at the top of 5cm at each side.

Inside the window reveal:

Measure the width of the window reveal at the top, centre and bottom. Take the smallest measurement. We will adjust from this measurement to ensure the blinds do not catch the side of the reveal when raised or lowered.

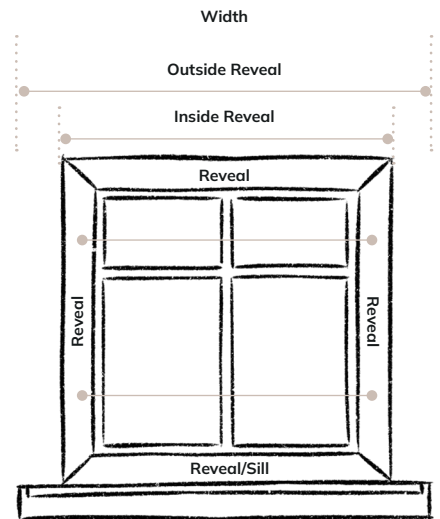


Measuring the drop (length)

Outside the window reveal:

Measure from the top of where you would like the blind to be to your desired length. The overlap at the bottom of the blind is personal choice but remember to take account of the obstacles such as radiators.

Inside the window reveal:

Measure the height of the window reveal at the left hand side, centre and right hand side and give the smallest measurements.

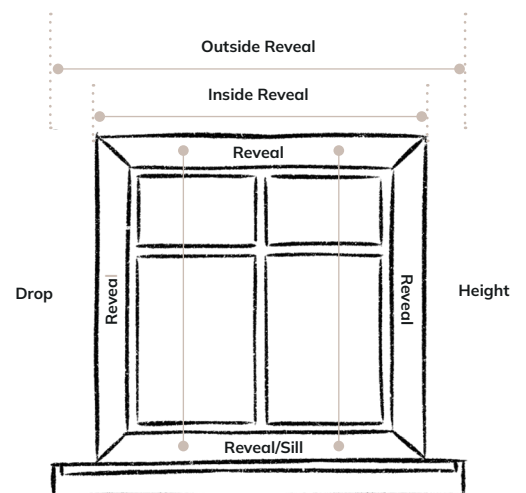


*What is a window reveal? A window reveal is the area surrounding a window which creates the opening in the wall, usually with a timber window sill at its base. A measurement for height (drop) would be taken between the top surface of the sill to the underside of the top (horizontal) surface. A measurement for width would be taken between the left and right hand side of the vertical surfaces.




Curtain Headers

There are a number of header styles to choose from, including our new cafe and dresser style and curtains, Pencil Pleat, Double and Triple Pinch Pleat, Cottage Pleat or Flop Over Frill. All of our curtains come fully lined as standard with sateen twill, or you can upgrade to one of our performance linings, such as blackout, thermal, interlined or go unlined.


— Café Style

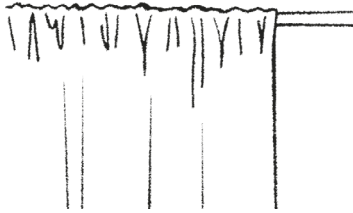


— Dresser Style

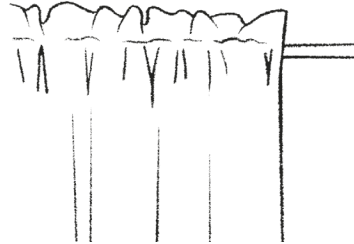


— Double Rod Pocket

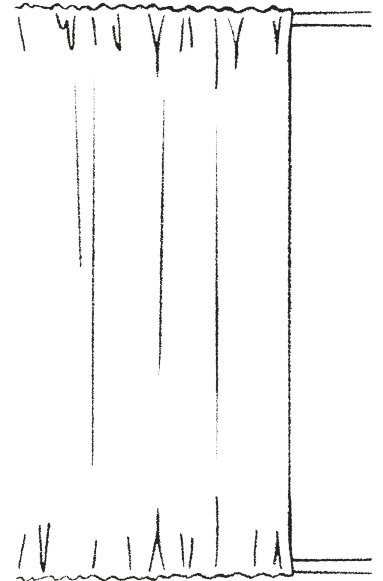


— Pinch Pleat Triple

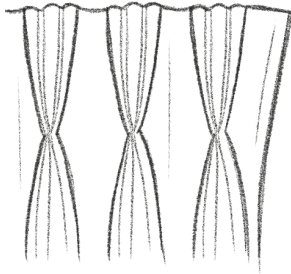


— Pinch Pleat Double

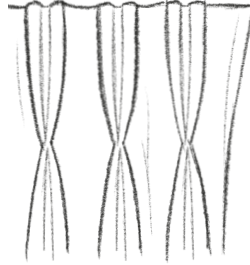


— Pencil Pleat 3" Tape

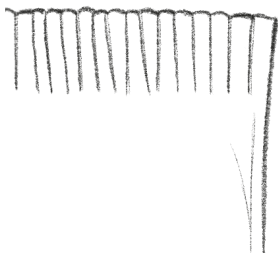

— Pencil Pleat 6" Tape

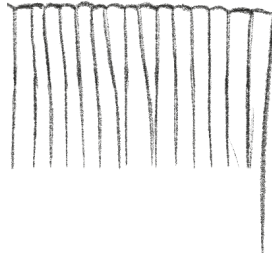


— Cottage Pleat

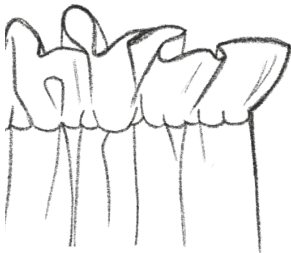

— Flop Over Frill




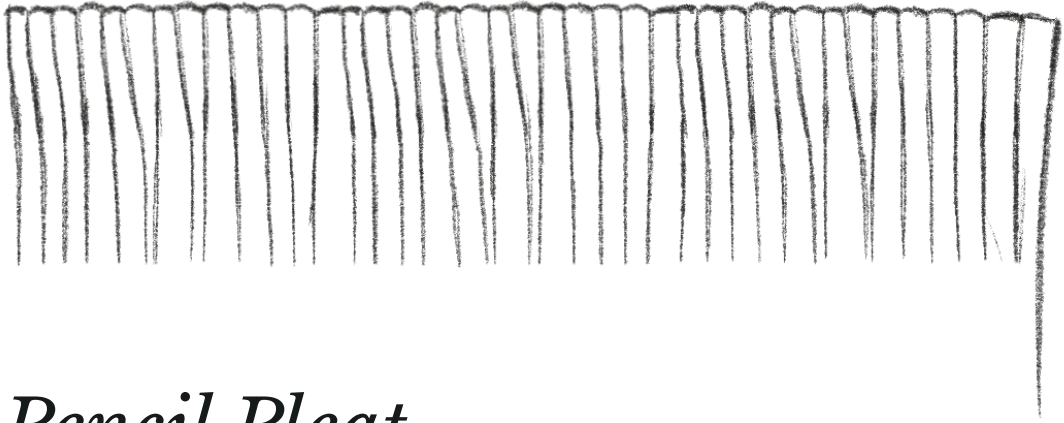

Pencil Pleat

Slightly gathered to create a neat, simple drape and the most cost effective heading. Great in living rooms and paired back interiors. We recommend 3" for shorter curtains and 6" for longer curtains. You can gather and tie the curtain tape strings to create your required look. Comes as standard but can be ordered with extra fullness.

13

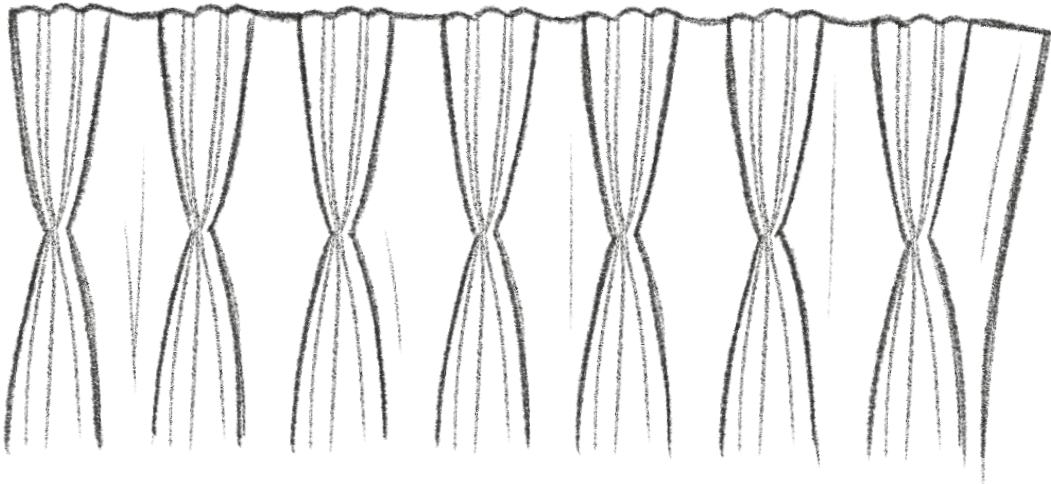


Pinch Pleat

Double Pinch Pleat

A permanent double pleat on the header introduces a contemporary, tailored finish, a little less full than triple pinch and drapes beautifully. Comes as standard but can be ordered with extra fullness.

Triple Pinch Pleat

A permanent triple pleat on the header introduces a timeless and classic tailored finish, great for any room that is looking for added fullness and texture.

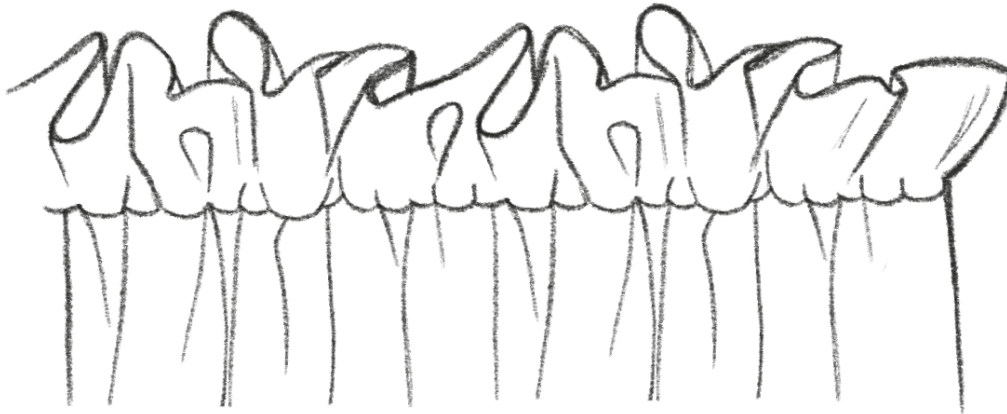

Cottage Pleat


Available with 5cm or 10cm ruffle. A pretty informal heading that ruffles up above the curtain tape top that lends itself so well to softer, more relaxed interiors, beautiful in children's bedrooms and other relaxed settings. Works best with poles, you can gather the curtain tape strings to create your required look.

14




Flop Over Frill

A very pretty heading with the deep flop over frill. Works beautifully in country homes and smart town houses too. Looks wonderful used as an inner door curtain and also with a puddle - Depth of frill can be ordered up to 30cm online but contact us if further depth required. Suited to curtain poles. A relaxed drape with wonderful drama. Comes as standard but can be ordered with extra fullness.

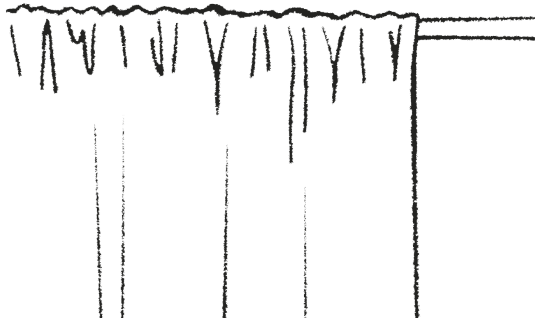

Café Style


This style utilises a simple channel as the header which you can easily slide on to your rod or pole and gather up to make a timeless solution. Ideal for tighter spaces or a simple look.

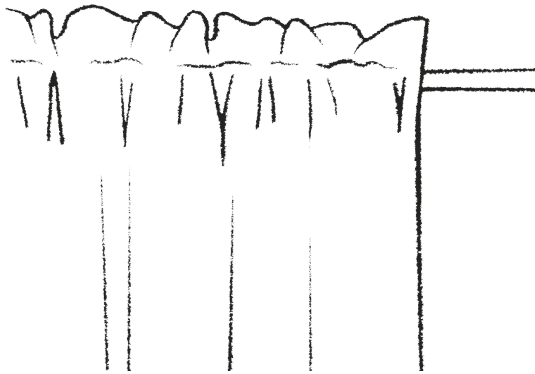

Dresser Style

For a more decorative look our Dresser Style has an attractive up stand above the rod pocket. Suitable for all uses from shorter bistro curtains to larger windows and doors.

15

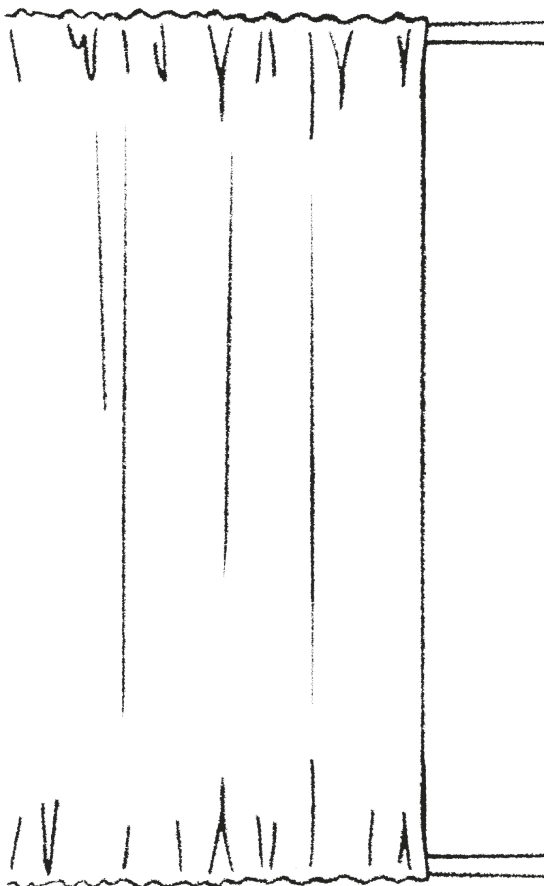

Double Rod Pocket

With rod pocket functionality at the top and the bottom our Cafe Curtains are a great solution for internal windowed doors, pantries and wardrobes.


Pelmets

Plain pelmets are available in a straight style and are suitable for most fabrics. All pelmets are supplied with 3" tape pencil pleat as standard.

We always recommend ordering lined pelmets with curtains and using the same lining if selecting one of our premium linings on your curtain.


Measuring: Pencil pleat pelmets are available to fit all pelmet rail widths from 97cm to 380cm. For pelmets wider than 380cm please contact us for advice.

- 1. Choose your heading type**
Pencil Pleat (3" tape)
- 2. Choose the drop of your valance**
Straight 35cm (14")
Straight 41cm (16")
- 3. Choose your fabric**

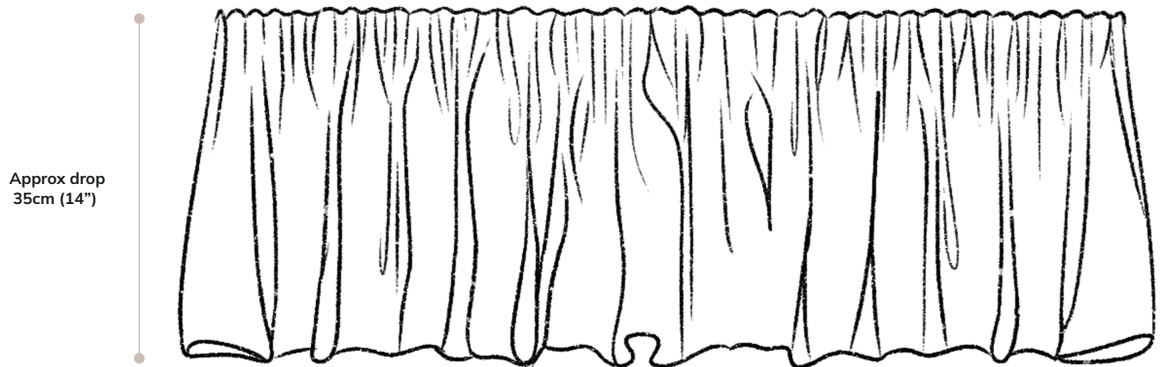

Tiebacks

All fabrics are available as tiebacks and come in pairs with either a plain or self piped edge.

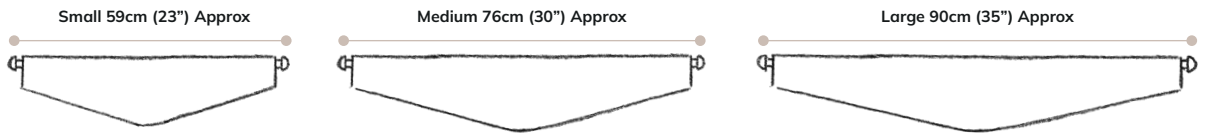

Our curtain factory will manufacture the correct size tie backs for your curtains.

- 1. Choose your fabric**
- 2. Choose your edge**
Plain edge, self-piped edge or contrast piped.
- 3. Choose ring type**
Brass or silver ring

17





not a Koi no Yamanashi
lalal



HOUSE & GARDEN
THE BEST OF INTERNATIONAL DESIGN AND DECORATION
HOUSE & GARDEN
THE BEST OF INTERNATIONAL DESIGN AND DECORATION
The History of Modern Architecture
a perfectly kept house is the sign of a misperked life.



Roman & Relaxed Blinds

All roman and relaxed blinds are fully lined with sateen twill as standard and are supplied complete with aluminium head rail and brackets and screws ready for hanging.

Blinds can be fitted on either the inside or outside of a window recess. We recommend you position your blind outside the recess if the window is not straight to avoid the blind catching or hanging incorrectly. Another reason for having the blind on the outside would be if your window opens inwards. If more than one blind is being fitted to a window (for example in a bay window), please order the blind size required for each window as this may vary.

1. Measure the width

To fit your blind inside the recess:

If ordering a blind to fit inside the recess, measure the width of the recess in 3 different positions and supply the smallest width and we will make the necessary allowances for you by deducting 0.5cm.

Please note any protrusions (such as tiles and wooden rails) and take the smallest width and drop measurement.

To fit your blind outside the recess:

Simply measure where you would like the blind to sit and supply that measurement. No allowance will be made and the dimensions supplied will include head rail and brackets.

We recommend that a blind does not extend more than 10cm either side of the window and approximately 10cm above and below. If the window ledge protrudes out we suggest that the blind sits just above or on the sill once closed.



2. Measure for the finished drop

To fit it to the recess:

Measure the recess drop in 3 different positions. Supply the smallest drop on the order form.

On the outside of the window (i.e. blind size):

Simply measure where you would like the blind to sit and supply that measurement.

3. Choose your fabric

4. Select which lining you require

5. Select position and colour of chain

Details

Alternative linings

Roman blinds can also be made with a choice of alternative linings. Please choose from Tori Murphy fabric, *sateen twill*, *solprufe*, *thermal*, *blackout*, *supersoft* or *unlined*.

Blackout lining

Please note that with blackout lining some light will still be visible around the edges of the blind. We recommend that blinds extend approx 10cm beyond the window recess on all sides. Some light will also be visible along the stitch lines and this is unavoidable.

Premier head rail

Our 'premier' head rail is a fully enclosed system with a sidewinder mechanism. A pulley chain is used to operate the blind.

Chains

Please select either right hand or left hand control position for the blind and choose from chrome, brass or antique brass.

Chrome



Brass



Antique Brass



To allow us to comply with current health and safety legislation, please supply the following information when ordering:

Installation height: Measurement from the top of the blind to the floor.

Overall Drop of Blind: Measurement taken from the top of the blind to the bottom of the blind.

Tori Murphy Fabric

Add additional texture, interest and curb appeal by having Tori Murphy fabric on the back of your curtains or blinds. Choose from Cotton or Wool.

Sateen Twill (off white)

70% Polyester, 30% Cotton. Sateen twill is our standard lightweight lining that gives a simple crease free finish. Benefits include room darkening. If ordering Sateen Twill with any of our cotton fabrics a certain amount of light will come through the fabric which can make the pattern less obvious.

Solprufe (off white)

100% Cotton. Solprufe is a lightweight cotton lining that enables curtains to hold their shape, provide insulation and darken rooms. It improves the look, drape and flow of curtains by adding a little weight. Solprufe linings enhance appearance and increase resistance to fading from sunlight. Benefits include room darkening. If ordering Solprufe with any of our cotton fabrics a certain amount of light will come through the fabric which can make the pattern less obvious.

Thermal (off white)

65% Polyester, 35% Cotton. Thermal is a lightweight but intelligent lining and is an effective way to help keep heat in your rooms and cold air out during the cooler months. Benefits include room darkening and maximum heat retention.

Blackout (off white)

100% Polyester. Blackout means that no light will pass through the blackout fabric and through to the room. Blackout lining has a coating that fills any gaps in the spaces of the lining fabric yet it still remains soft and allows for beautiful pleats and folds. Benefits include light elimination and good insulation.

Supersoft Thermal (off white)

52% Polyester, 48% Cotton. Supersoft Thermal is a slightly padded, soft and cosy lining that not only helps block out the light but also adds thermal properties for wonderful warmth, texture and drape. Benefits include room darkening, insulating and additional thickness.

Interlining (off white)

100% Polyester. Interlining adds a third luxurious layer of padded fabric to your curtains or blinds by using a pre-bonded fabric that is combined with our Sateen Twill lining. Interlining will enhance the look of your curtains and blinds, adding extra thickness and creating fuller padded folds and drapes. Benefits include insulating and room darkening.

Unlined

This lightweight option is ideal for soft and breezier window treatments, dressers curtains, relaxed blinds and cafe curtains. Tori Murphy fabrics are all reversible so this option allows you to highlight the lovely reverse side of your fabric.



Trims

Fringing

Black



Claret



Blush



Olive



Velvet Piping

Black



Claret



Blush



Olive



Pom Pom


Black




Claret



Blush



Duck Egg Blue



MADE TO
MEASURE



24



Here To Help email: madetomeasure@torimurphy.com or call: 01158 241 305

Caring For Your *Made To Measure* Products

When you unpack your Made To Measure product, there may be creasing or pressure marks. These will normally fall out quickly after hanging in a warm room. Alternatively, your product may be lightly ironed with a warm dry iron on the reverse side. Hems and sides should never be pressed. Steam and excessive pressure or temperature should be avoided as these can stretch or shrink the fabric. The cords on pencil pleat curtains must be tied at the end before the heading can be gathered. To improve the drape of your curtains we recommend that once they have been dressed into an even fold, they be loosely tied with ribbon in two or three places. This will encourage the curtains to retain an even fold when the ties are released.

Relaxed blinds will initially need an element of 'training' by hand to create the desired folds. They will then pull up as you wish once the folds are remembered in the fabric.

Ordering single curtains

Single curtains are available in all fabrics.

Ordering smaller curtains

Please email madetomeasure@torimurphy.com for any help needed

Ordering larger curtains

Please email madetomeasure@torimurphy.com for any help needed

Measuring

All orders must be placed with measurements given in full centimetres. The conversion for inches to centimetres is 2.54cm to 1".

Ordering

Where possible place orders online at www.torimurphy.com but we are always happy to give you a helping hand with your order.

Please contact on **01158 241 305** or email madetomeasure@torimurphy.com with any questions.

Cancellations/amendments

Orders cannot be cancelled or amended once production has started.

Please contact on **01158 241 305** or email madetomeasure@torimurphy.com with your order number to check the status of your order. Any agreements to cancel or amend will be confirmed in writing.

Delivery charges

Delivery is free to any UK address - Please contact **01158 241 305** or email madetomeasure@torimurphy.com for shipping quotes to all other addresses.

Proof of delivery

Please check all packages at the time of delivery. If the goods arrive via carrier, the consignment should only be signed for as '**received in good condition**' if you are completely satisfied that the goods contained are not damaged.

Return procedure

Claims or returns can only be made on Made To Measure products if the item is faulty. If there are any issues with your order upon receipt, please contact the team on **01158 241 305** or email madetomeasure@torimurphy.com to discuss next steps.



We're always here to give you a helping hand, drop us a line below

01158 241 305

madetomeasure@torimurphy.com

WWW.TORIMURPHY.COM