


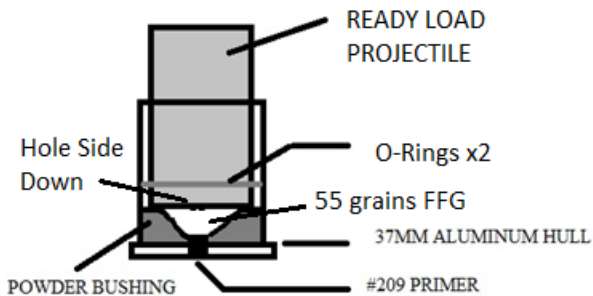

37MM READY LOAD AMMO INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE STARTING PROJECT

- 1) Prime a 37mm hull by placing a #209 shotgun primer in the hole on the flat side of 37mm Casing. If loose place a paper towel over the hole and push the primer through. Tear off excess.
- 2) Place Powder bushing at the base of the Casing. (For best results and to keep the bushing in the casing apply hot glue to the bottom of the bushing before pushing into the casing).
- 3) Place **NO MORE THAN** 60 grains FFG powder into a primed 37mm Casing. 55 grains of FFG is what we recommend. (For best results use a 37mm aluminum hull with a powder bushing at the base)
- 4) Place two O-rings around the base of the tube on the hole end ¼” from the edge
- 5) Push the Projectile into the 37mm Casing by hand **hole side down**.
- 6) (Optional) Apply a ring of hot glue along the edge where the casing meets the tube to seal the projectile for storage.



Like this product? Try the whole set!
Call If you have any Questions we are here to help.

541-241-8110