


TRUCKFRIDGE

CASCADIA INSTALLER - IMPORTANT!


INSURE THERMOSTAT IS TURNED OFF INSIDE THE FRIDGE!

Remove the 3 sided trim flange from the fridge and discard. Reinstall the screws into the original holes.

Carefully turn the fridge upside down and set it on top of the Styrofoam shipping lid. Align the bottom bracket 1/2" from front of fridge cabinet, not the door, and centered side to side. (If silicone caulking is available, apply a small amount to each screw hole in bracket to minimize potential of screws loosening.) Install bracket using 3/4" long #10 sheet metal screws.

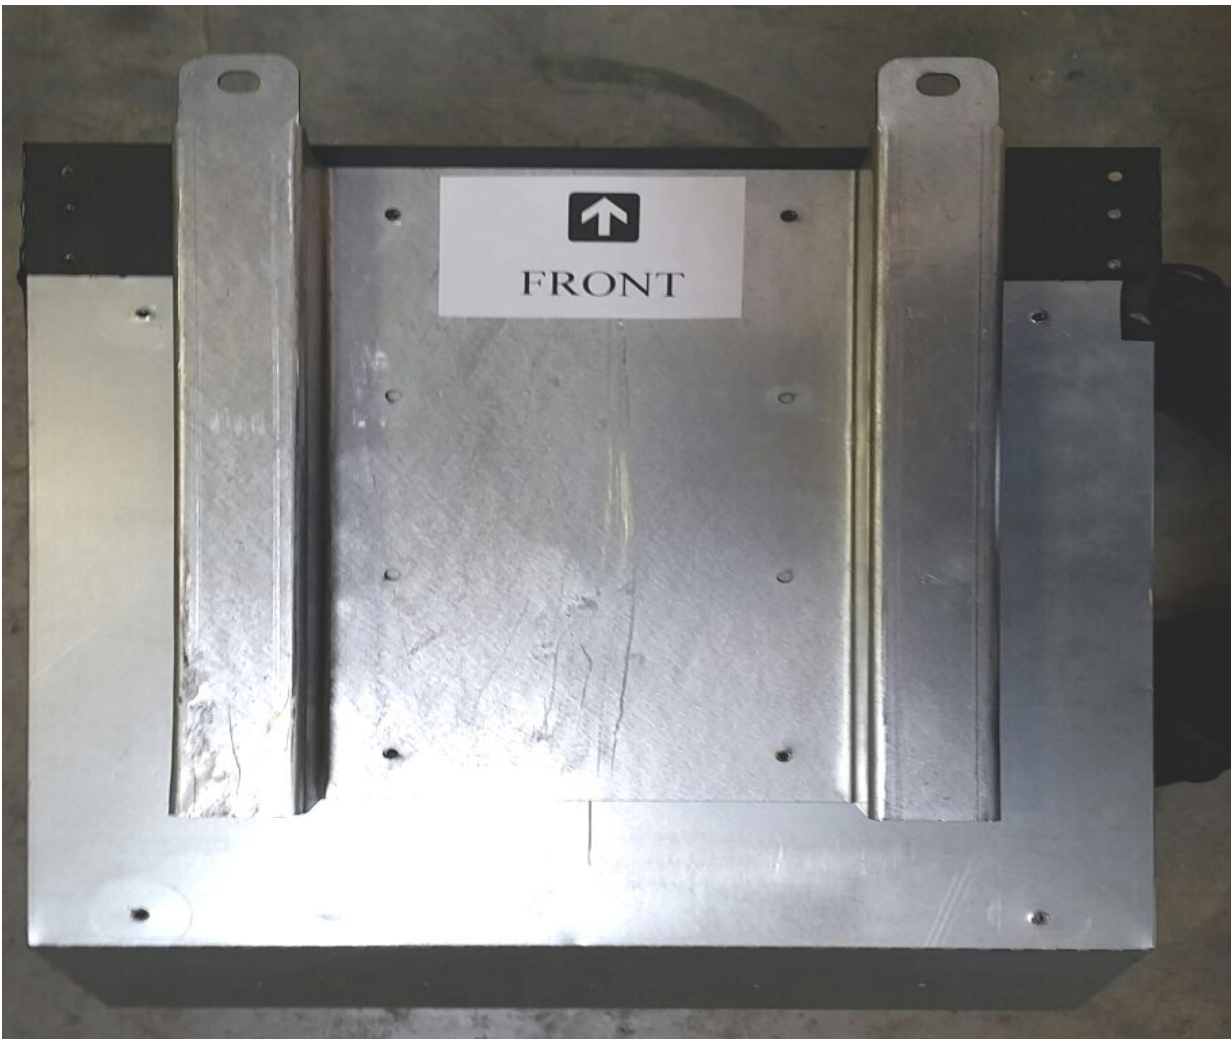

Turn fridge right side up and center top bracket 1/2" from front of fridge cabinet, centered side to side. (If silicone caulking available, apply a small amount to each screw hole in bracket to minimize potential of screws loosening.) Install bracket using 3/4" long #10 sheet metal screws. It may be necessary to predrill the 2 front holes due to the steel latch plate on the fridge.

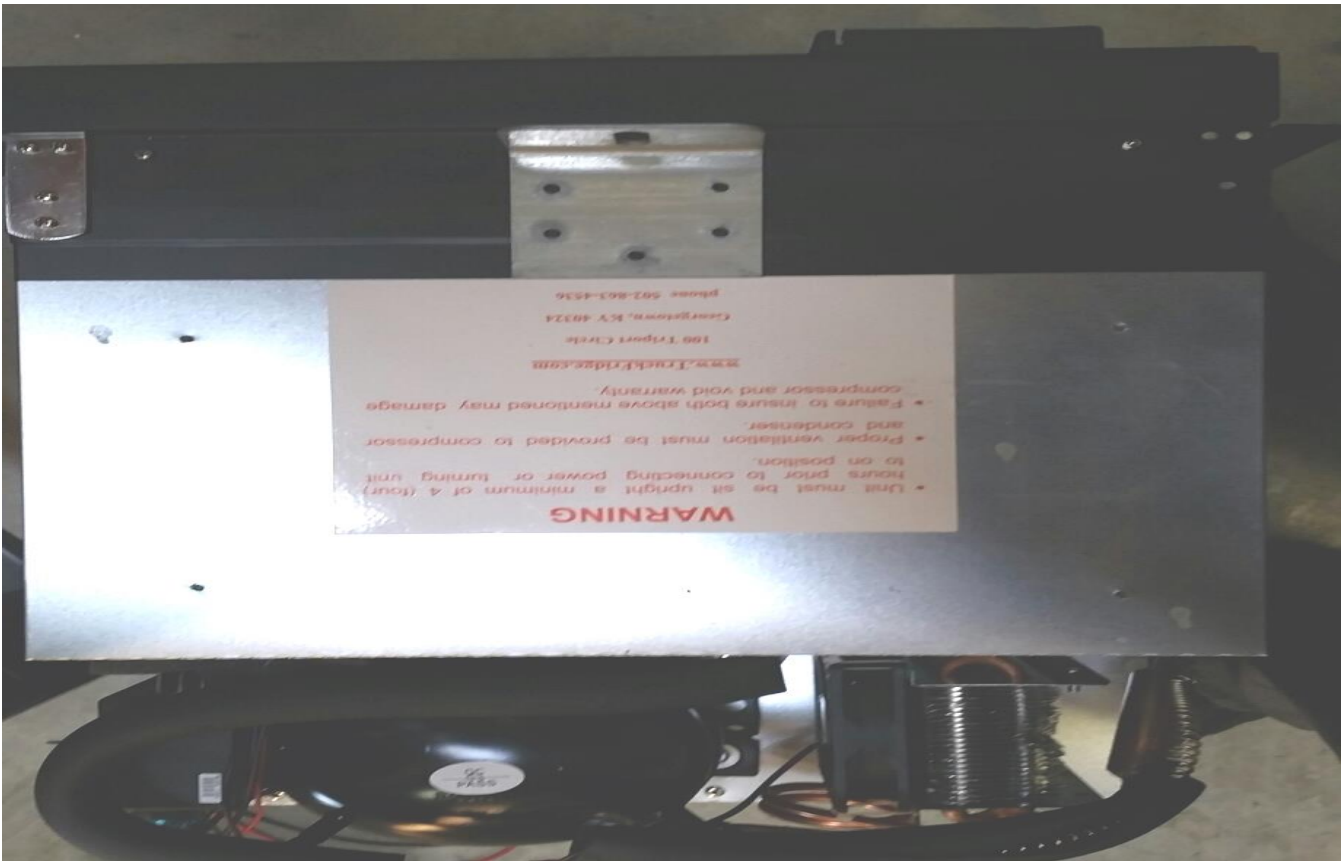

Install fridge in truck.

**INSURE FRIDGE HAS BEEN SITTING UPRIGHT FOR A MINIMUM OF 4 HOURS BEFORE TURNING ON!
FAILURE TO DO SO MAY DESTROY COMPRESSOR AND VOID WARRANTY!**