


TRUCKFRIDGE

Instructions for installation of TruckFridge mounting plate and TF49 in Freightliner Cascadia

Note: Some trucks vary depending on specification at time of manufacture. TruckFridge assumes no responsibility or liability as a result of variations on trucks specs.

Removing the trim frame on the truck cabinet: Some models may be held in place with 4 screws from the back side. In this case, remove the clip nuts from the trim frame. These will need to be replaced with included plastic "trees" as screws cannot be reinstalled once the fridge is mounted. Some frames are held in place with push clips. These can be reused.

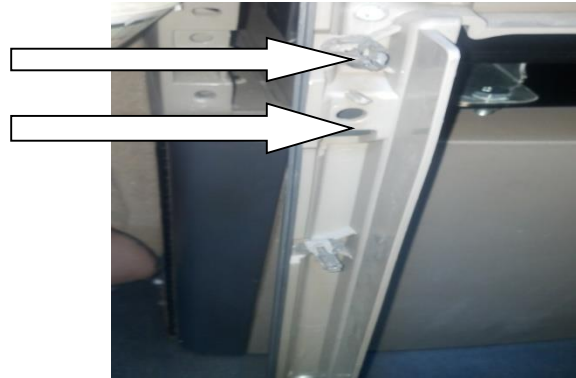


If your vehicle came without a factory installed fridge, locate 12v accessory power point plug at rear of shelf. Reach underneath to unlock and push power plug and wire up through hole in shelf.




Align large black mounting plate with existing holes already in cabinet platform. They can be located from bottom, if shelf is covered with carpet, poke up through holes and through the carpet. (Carpet removed in picture for demonstration purpose only.)




Bolt mounting plate to bottom of cabinet with finger tabs along the back of the cabinet, pointed up and toward center of truck. Check to be sure fridge thermostat is turned off in case unit has been tilted during installation. Connect the fridge power plug to the truck power cord plug.

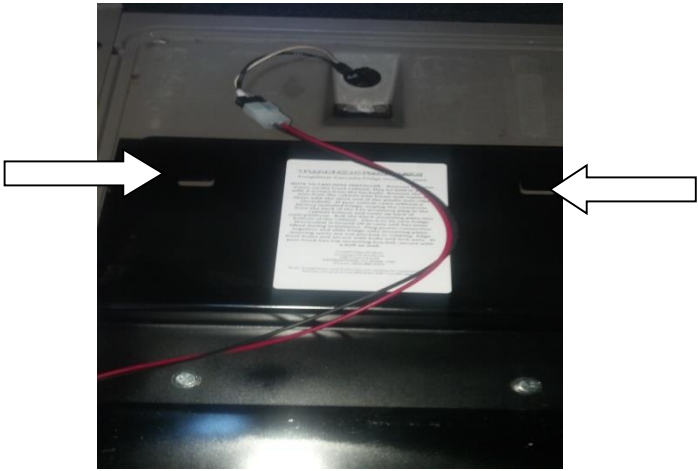

If your cabinet does not have a top mount bracket, use small black TF top bracket with black push clips and secure to bracket in the top of cabinet. This will bolt to TF top fridge bracket. If your truck already has top mounting bracket as shown here, the TF top bracket and push clips will not be needed.

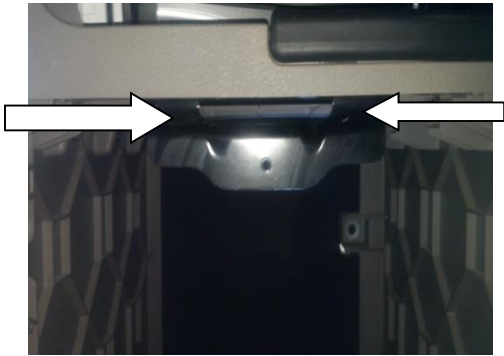

Slide fridge on to mounting plate, aligning rear finger tabs to fridge bottom plate. Insure wires are not pinched or rubbing. Align front holes and secure with included bolts and lock nuts.

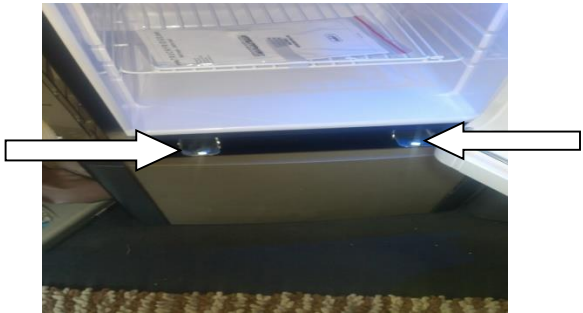

Install cabinet trim frame using plastic "trees" as mentioned previously. Fridge light will be on when door is open even when thermostat is in "0" Off position. Do not turn fridge on until it has remained in upright position at least 4 hours prior to being installed.

