




## Turn Signal/Horn Kit Update for 2019 Can-Am Models

If installing on a 2019 Model, refer to step below to install the BRAKE SWITCH INTERFACE.


### Install the BRAKE SWITCH INTERFACE on 2019 Models

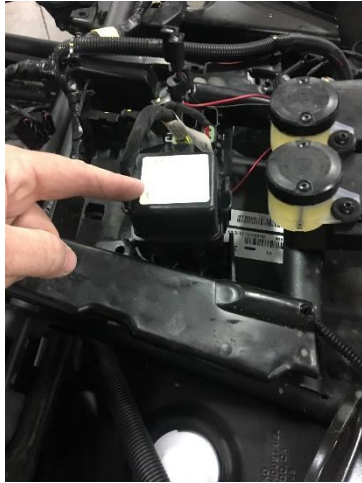

Fuse Box



Brake Switch Relay

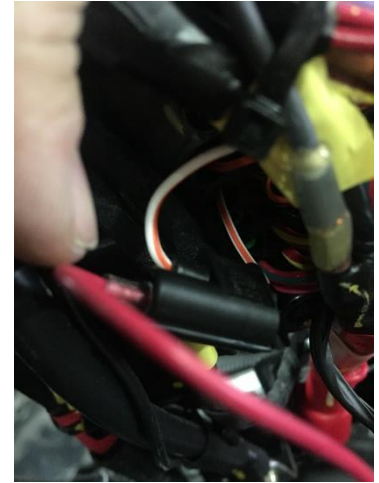

WHITE/ORANGE wire

- Locate the fuse box housing the brake switch relay.
- Locate the WHITE/ORANGE wire coming out of the brake switch relay.
- Install a **PARALLEL TAP** on the WHITE/ORANGE wire.
- Plug the **BRAKE SWITCH INTERFACE RED** harness to the **PARALLEL TAP** on the WHITE/ORANGE wire.

**NOTE:** Check the orientation of the PARALLEL TAP connectors to ensure access for the male connector, prior to seating the PARALLEL TAP connector with pliers. You can unplug the connector to allow easier access.

**How to Install a PARALLEL TAP:** The wire colors may not match your application but are for illustration.

