


FINN CONTOUR

GATE ASSEMBLY

Powder Coated Aluminium Ped Gate

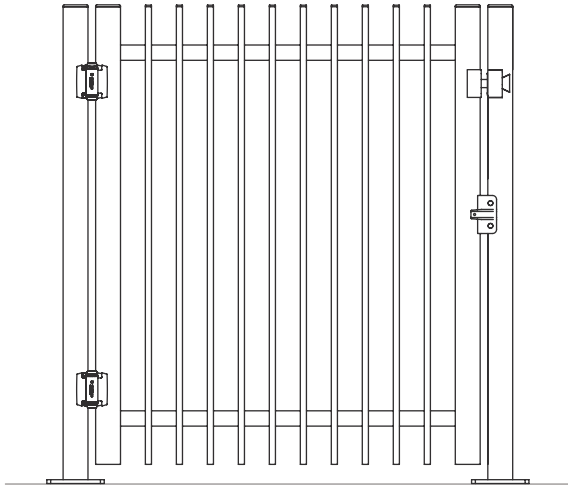


Pack Includes

| Gate Height | 1.0mH | 1.2mH | 1.8mH |
|---------------------|-------|-------|-------|
| • Finn Pickets | x 9 | x 9 | x 9 |
| • Rails 924mm | x 2 | x 2 | x 2 |
| • Self-close Hinges | x 2 | x 2 | x 2 |
| • Gate Stiles | x 2 | x 2 | x 2 |
| • Side-pull Latch | x 1 | x 1 | x 1 |
| • Gate Stop | x 1 | x 1 | x 1 |
| • Fixing Screws | x 34 | x 34 | x 34 |
| • Rail End Caps | x 4 | x 4 | x 4 |

- Assembled height and width in mm (Excluding posts)

Fixing Screws

*Allen Key also included



Gate Hardware



D&D TruClose



D&D Side Pull Latch



D&D Gate Stop


Installation

1 Install Posts

Step 1: Install Posts

(65 x 65 Square Posts)

Posts sold separately

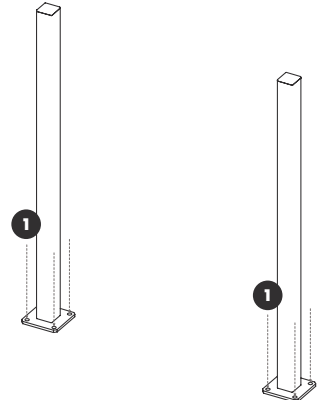


2 Assemble the Gate Kit

Step 2: Install Finn Rails

Step 3: Install Finns

Step 4: Install Finn Rail Covers

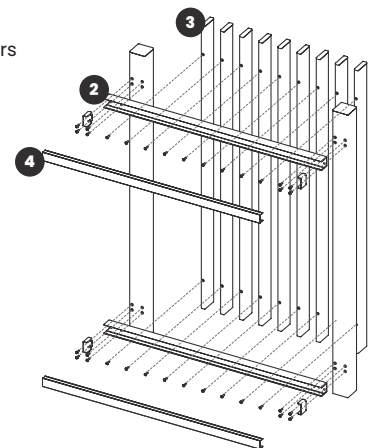


3 Place the Gate and attach Gate Hardware

Step 5: Install Hinges

Step 6: Install Gate Latch

Step 7: Install Gate Stop

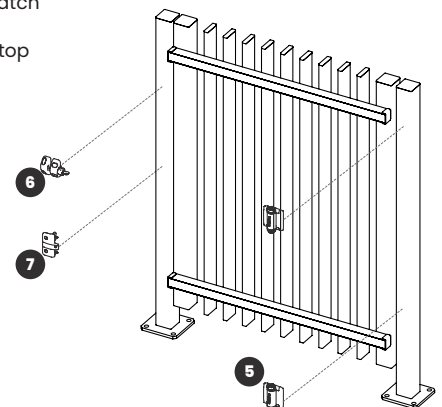

FenceLab
fencelab.co.nz

Rev 01 18-11-24 | Manual

© 2025