

Light. Precise. Portable and Affordable.



## supplied:

- 1. 2 x Feet Bars
- 2. 4 x Rubber Feet Grips
- 3. 4 x Threaded Bars
- 4. 4 x Thumb Screws
- 5. 2 x Small rubber washers (attached)
- 6. 2 x 3/8"-16 allen head bolts

The following instructions are out of date, but as we have replaced some of the parts. The thumb screws have been replaced with the knurled bolts and the rubber washers are now attached to the aluminium feet bar.

## Assembly Guide & Instructions



1. place large plastic washer (2.) over 3/8" thumb screw (4.).



2. place 4 Small Plastic Washers(3) over and repeat steps 1 & 2



3. place through centre of Feet Bar (1).



4. Place over Large Rubber Washer to secure, and repeat step 3.



5. Twist 4 x Rubber Feet Grip (6) onto 4 x Leg Bar (7)



6. Screw into end of Leg Bar. Repeat 3 times.




7. Screw on Leg Screw (8). Repeat 3 time.



8. Loosen Leg Screw to adjust height. Tighten to secure.



9. Alternative Leg Screw option.

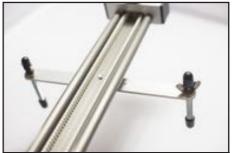

10. 2 ways to mount. Either mount onto rail or...



11. ...remove Thumb Screw and accessories as well as Rubber...



12. ...Grips from Pulley Box and use to attach to Pulley Box.