


BIG BARKER

INSTRUCTIONS | Platform & Headboard



Screws

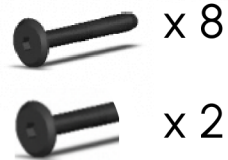

Cam Locks



STEPS ON
BACK


**Headboard bed frames will have one (1) taller end board*


Questions? Call us! 267-797-2547

BIG BARKER


1 Set up the side rail and the shorter head and foot boards as shown.



2 Use a cam lock and screw to fasten the corners. (4x)

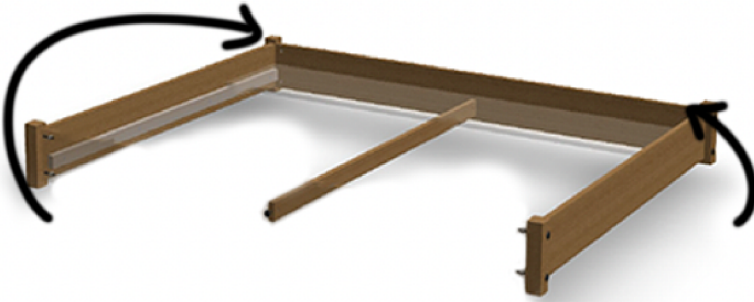

3 Insert the center support rail using 2 short screws.

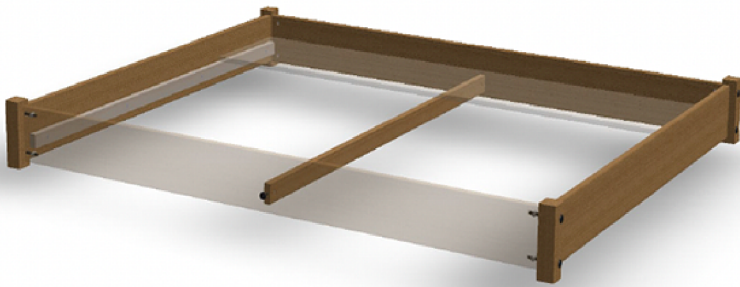

4 Attach the other side rail using a cam lock and screw in each hole. (4x)



5 Place slats into the bed frame. Your frame is now ready for your Big Barker.

HINT



Align the cam lock with the hole where the screw is inserted