

BIG BARKER

INSTRUCTIONS | 3 Sided Bedframe



Screws




x 2

x 12

Cam Locks



x 14

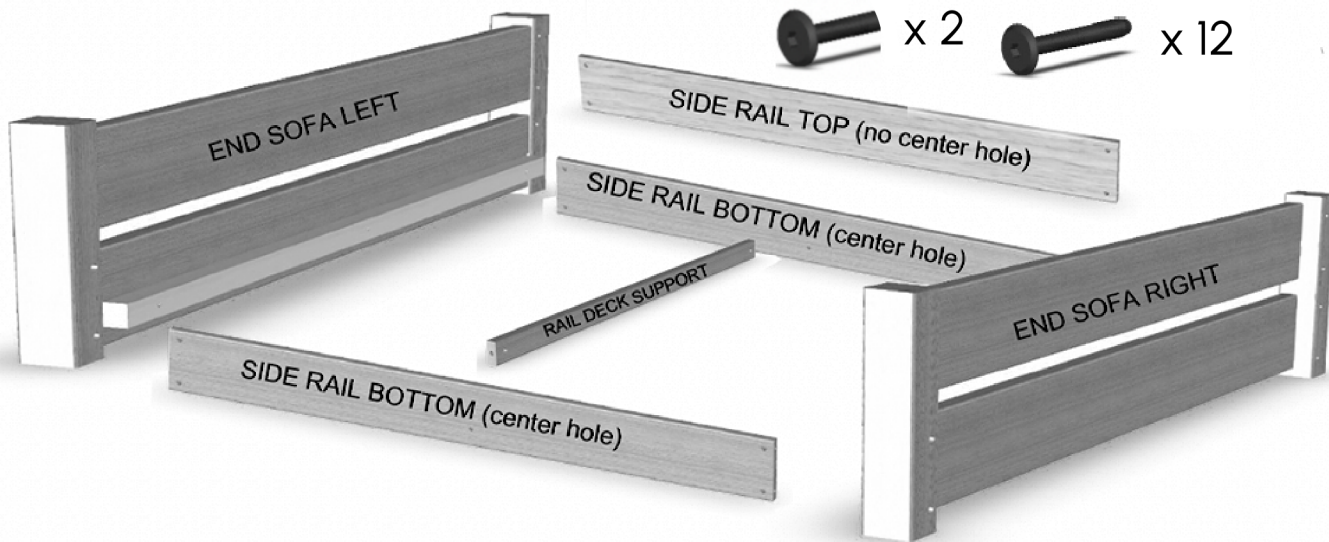

STEPS ON
BACK 

Questions? Call us! 267-797-2547

Here's how to assemble your dog's new bed frame:

- 1 Set up the bottom side rail and the head and foot boards as shown.



- 2 Use a cam lock and screw to fasten the corners. (4x)



- 3 Insert the center support rail using 2 short screws.



- 4 Attach the upper back side rail and the front side rail using a cam lock and screw in each hole. (8x)



- 5 Place slats into the bed frame. Your frame is now ready for your Big Barker.

