



Step 1: Tighten the support screws




Step 2: Put in the plastic spacer with the inclined position facing up
Put in the gasket and lock the nut




Step 3: Install the backrest, use hexagonal screws + small spring washers + small washers for the backrest



Step 4: Install the other foot and lock the screw as in the previous step

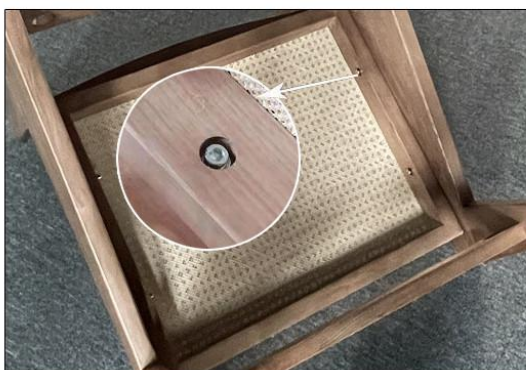

Step 5: Install the seat cushion, use the hexagon screw + small spring washer + small washer for the seat cushion

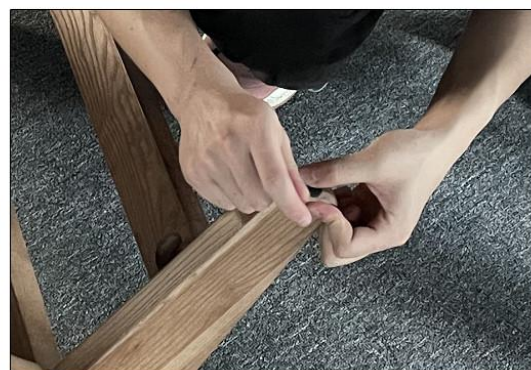

Step 6: Install the Footpads (Done)