



CSXC-1 WALL MOUNT INSTALLATION GUIDE

THIS KIT WILL ALLOW YOU TO MOUNT YOUR **CSXC-1 CHILLER** ON ANY APPROPRIATE SURFACE.


PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING TO INSTALL AND ENLIST THE HELP OF A PROFESSIONAL IF YOU ARE UNSURE ABOUT ANY PART OF THE INSTALLATION PROCEDURE.

CHILL SOLUTIONS IS NOT RESPONSIBLE FOR DAMAGE RESULTING FROM IMPROPER INSTALLATION




COMPONENTS INCLUDED IN THE MOUNTING KIT:

- ① - [1X] BASE BRACKET
- ② - [2X] STAINLESS BOLTS
- ③ - [2X] DRYWALL ANCHORS
- ④ - [2X] STAINLESS SCREWS

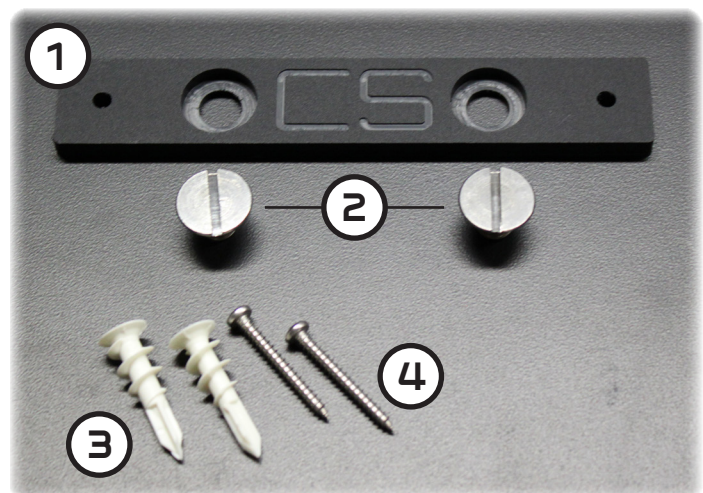


1 USING THE BRACKET [(1)], OR PRINTABLE TEMPLATE ON PAGE 3 OF THIS MANUAL AS A GUIDE, MAKE A MARK ON THE WALL FOR EACH OUTER SCREW HOLE.

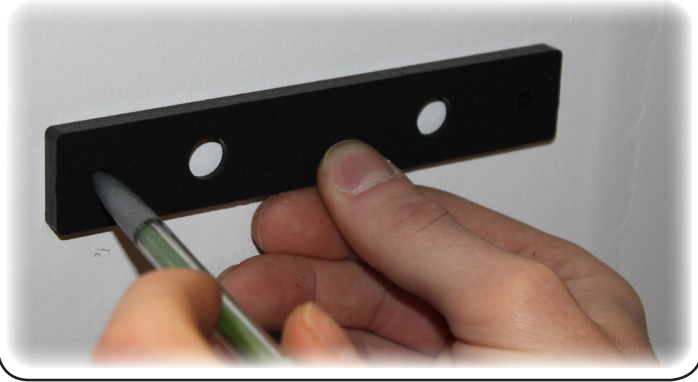


2 SCREW DRYWALL ANCHOR [(3)] INTO THE WALL AT BOTH MARKED LOCATIONS. ENSURE ANCHORS ARE SCREWED IN COMPLETELY AND SIT FLUSH. (SKIP THIS STEP IF NOT MOUNTING TO DRYWALL)



3 ATTACH THE BRACKET [(1)], TO THE CSXC-1 BASE USING TWO STAINLESS STEEL BOLTS [(2)]. DON'T OVERTIGHTEN!

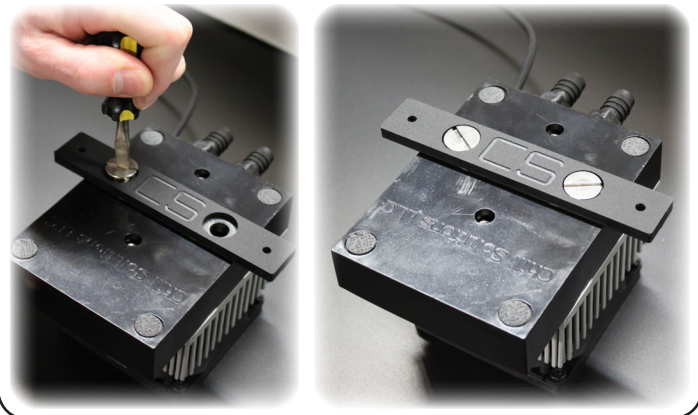

4 USING TWO STAINLESS STEEL SCREWS [(4)], ATTACH THE CHILLER/BRACKET TO THE WALL. THE SCREWS SHOULD THREAD DIRECTLY INTO THE DRYWALL ANCHORS (IF ATTACHING UNIT TO DRYWALL) IF MOUNTING TO WOOD OR OTHER STURDY MATERIAL THE BRACKET CAN BE ATTACHED DIRECTLY WITH SCREWS.

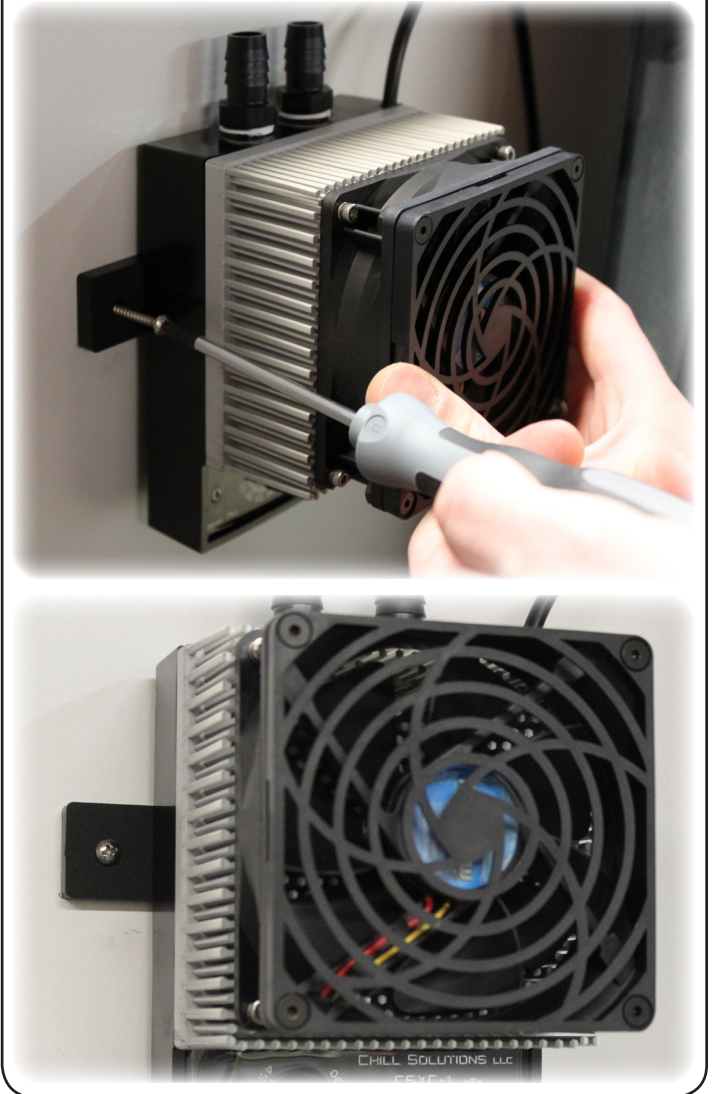

IMPORTANT:

THE CHILLER CAN BE INSTALLED IN ANY ORIENTATION.

DO NOT INSTALL INSIDE A SEALED CABINET! THE UNIT NEEDS ADEQUATE VENTILATION TO WORK PROPERLY.

